

# **Saturn<sup>®</sup>**

**ST-EK0020**

**ELECTRIC KETTLE**

**GB**  
**ELECTRIC KETTLE**

Dear Buyer!  
We congratulate you on having bought the device under trade name "Saturn". We are sure that our devices will become safe and reliable assistance in your house-keeping.

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on.

In this case leave the unit at room temperature for at least 1.5 hours before switching it on.

**IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons **DO NOT IMMERSE CORD, PLUG, OR POWER BASE UNIT** in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. Do not use outdoors.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Always fill the kettle first, then set the appliance onto the power base, and finally plug cord into outlet. To disconnect, remove kettle from power base, then remove plug from wall outlet.
11. Do not use this appliance for other than intended use.
12. Always make sure that lid is closed during operation. Scalding may occur when lid is open during operation.

13. Extreme caution must be used when moving the kettle containing hot water.

14. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

15. Children should be supervised to ensure that they do not play with the appliance.

16. **FOR HOUSEHOLD USE ONLY.**

17. Service life – 2 years.

**PLEASE DON'T!**

- Never boil water while the lid is open. The kettle will not shut off and boiling water may splash out of the kettle. This can cause severe injuries.
- Never try to remove the lid.
- When opening the lid, handle it gently and do not try to push it beyond its normal resistance. If you break the lid, the kettle will not work properly.
- Never fill kettle with anything but water.
- Do not add instant soups or any other soluble to the kettle.
- Do not use the kettle to thaw food of any kind.
- Do not use the kettle to make sauces or to melt cheese, butter or any other items.
- Never immerse the kettle in any liquid. Never put kettle or base in the dishwasher.


**BEFORE USING FOR THE FIRST TIME**

Read all Important Safeguards and Operating Instructions before using this kettle.

Discard the first filling of boiling water to remove any dust and residues from the manufacturing process.

**TO BOIL WATER**

1. Remove kettle from base.
  2. Open the lid until it stands vertically. **DO NOT BEND LID FURTHER BACK!**
  3. Fill with the desired amount of fresh cold water. The kettle has minimum and maximum markings. Never under-fill or overfill the kettle.
- CAUTION / DANGEROUS:** Never fill above the MAX line. If you fill above the max line, boiling water will push out of the pouring spout. This can cause severe injuries and burns.
4. Close lid.
  5. Place kettle on power base.
  6. Plug cord into wall outlet.

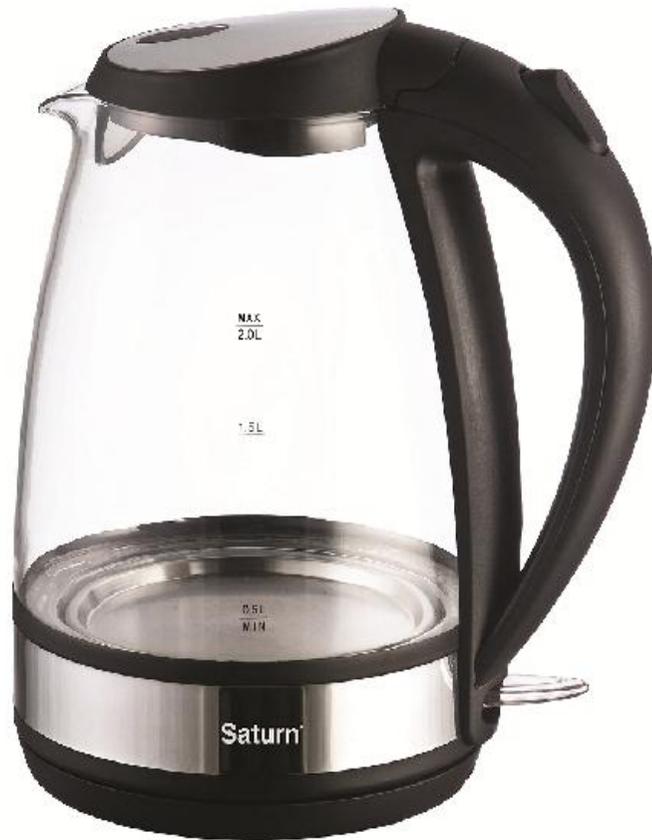



( 1 1

« »).

« ».

« ».



« ».

U

! "Saturn".

(

)

( ).

1,5

1,5

1850-2200  
220-240  
50  
10  
2

- 1.
- 2.
- 3.
- 4.
- 5.

1

6.

7.

8.

9.

10.

11.

12.

13.

14.

)

(

15.

16.

17.

-2

- 1.
- 2.

3.

MAX.

- 4.
- 5.

6.

7.

(On)

8.

« »

9.

- 10.
- 11.

7.

(

« »).

« ».

« ».

# Saturn®



## INTERNATIONAL MANUFACTURER'S WARRANTY

## MEZINÁRODNÍ ZÁRUKA

1850-2200  
220-240  
50  
10  
2

1

1

1



## INTERNATIONAL MANUFACTURER'S WARRANTY

The Warranty is provided for the period of 2 years or more if the Law on User Right of the country where the appliance was bought provides for a greater minimum warranty period.

All terms of warranty comply with to the Law on Protection of the Consumer Rights and are governed by the legislation of the country where the product was bought. The warranty and free of charge repair are provided in any country where the product is delivered to by Saturn Home Appliances or authorized representative thereof, and where no restriction of import or other legal provisions interfere with rendering of warranty services and free of charge repair.

### Cases uncovered by the warranty and free of charge repair:

1. Guarantee coupon is filled in improperly.
2. The product has become inoperable because of the Buyer's nonobservance of the service regulations indicated in the instruction.
3. The product was used for professional, commercial or industrial purposes (except for the models, specially intended for this purpose that is indicated in the instruction).
4. The product has external mechanical damage or damage caused by penetration of the liquid inside, dust, insects and other foreign objects.
5. The product has damages caused by non-observance of the rules of power supply from batteries, mains or accumulators.
6. The product was exposed to opening, repair or modification of design by the persons, unauthorized to repair; independent cleaning of internal mechanisms etc. was made.
7. The product has natural wear of parts with limited service life, expendables etc.
8. The product has deposits of scale inside or outside of fire-bar elements, irrespective of used water quality.
9. The product has damages caused by effect of high (low) temperatures or fire on non-heat resistant parts of the product.
10. The product has damages of accessories and nozzles which are included into the complete set of product shipment (filters, grids, bags, flasks, cups, covers, knives, sealing rings, graters, disks, plates, tubes, hoses, brushes, and also power cords, head-phone cords etc.).

**On the warranty service and repair, please contact the authorized service centers of "Saturn Home Appliances".**

## MEZINÁRODNÍ ZÁRUKA

Záruka se poskytuje na dobu 2 roky. V případě že Zákon na ochranu spotřebitele dané země nařizuje delší dobu, prodlužuje se záruka na tuto dobu.

Veškeré záruční podmínky odpovídají Zákonu o ochraně práv uživatelů a jsou řízené zákonodárstvím státu, kde byl výrobek koupen. Záruka a bezplatná oprava se poskytují v každém státě, kam jsou výrobky dodané společností „Saturn Home Appliances“ nebo jejím zplnomocněným zástupcem a kde nejsou žádná omezení na dovoz nebo jiné právní předpisy omezující poskytnutí záručního servisu a bezplatné opravy.

### Případy, na které se záruka a bezplatná oprava nevztahují

1. Záruční list je vyplněn nesprávně.
2. Výrobek byl poškozen kvůli tomu, že zákazník nesplnil pravidla použití, která jsou uvedena v návodu.
3. Výrobek byl používán k profesionálním, komerčním nebo průmyslovým účelům (kromě modelů speciálně určených pro tyto účely, což je uvedeno v návodu).
4. Výrobek má vnější mechanická poškození nebo poškození, vyvolaná tím, že se dovnitř dostala tekutina, prach, hmyz a jiné cizí předměty.
5. Výrobek má poškození, která jsou vyvolaná nesplněním pravidel napájení od baterií, sítí nebo akumulátorů.
6. Výrobek rozebírali, opravovali nebo měnili jeho konstrukci lidé, kteří nebyli zplnomocněni k opravě, bylo provedeno samostatné ústřední vnitřní mechanismy a pod.
7. Výrobek má přirozené opotřebení dílů s omezenou dobou použití, spotřebních materiálů atd.
8. Výrobek má vrstvu usazeniny uvnitř nebo zvenku termoelektrických ohřevů, bez ohledu na kvalitu používané vody.
9. Výrobek má poškození, která jsou vyvolaná působením vysokých (nízkých) teplot nebo ohněm na termonestabilní části výrobku.
10. Výrobek má poškození příslušenství a nástavce, které jsou dodané spolu s výrobkem (filtry, síky, sádky, baňky, mísy, víka, nože, šlehače, struhadla, kotouče, talíře, trubky, hadice, kartáče a také síťové šňůry, sluchátkové šňůry atd.).

**V otázkách záručního servisu a oprav se obraťte na autorizovanou servisní středisko společnosti „Saturn Home Appliances“.**



9, 25	-	8-905-425-60-4-73	+	+	+		
37	-	8(8635) 47-47-72, 8(8635) 47-47-72	+	+	+	+	+
.63	« »	8(86155)3-11-00, 8-918-980-64-75	+	+	+	+	+
.84	-	8(86559) 2-08-02, 8(86559)5-29-71	+	+	+	+	+
58	« »	8(8442) 23-41-36, 8(937) 717-93-34	+		+		
173	« - »	8(8442) 97-50-10, 8-960-883-59-00			+		
4	-	8(8442) 98-16-47, 8(8442) 53-06-04	+	+	+	+	+
	« - »	8-961-688-53-48			+		
.9		8-927-521-52-00			+	+	+
.32		8-937-722-68-12				+	+
.158		8-937-730-66-03			+	+	+
		8-904-404-14-55				+	+

C .12/15	«Master»	8-928-126-63-66	+			+	
.77-	« »	8(937) 717-93-36	+			+	
.65	« »	8(8172) 70-03-45, 8(8172) 54-21-54	+			+	+
.1	« »	8(8172) 52-72-51	+			+	
.46	" "	8(473) 260-09-08, 8(473) 240-57-73	+			+	+
.140/1	-	8(87951) 6-47-93, 8-928-654-28-01				+	
.48	« »	8-962-655-20-00	+	+		+	+
.68	« »	8(8313) 21-14-14	+			+	
.54	« »	8(8313) 20-93-00, 8(8313) 20-92-94				+	
.63	" - "	8(84235) 2-86-59, 8(84235) 9-14-64	+			+	+
.84	« - »	8(86132) 2-11-71, 8(86132) 3-66-02	+	+		+	+
.64	" - "	8(343)240-26-60	+			+	

. 8(343) 201-51-41, .8(343)347 -76-83	+ + + + +
8(47467) 4- 12-08, 8(47467) 4- 33-17	+ +
8(4932) 335185, 8(4932) 335236	+ + + + +
8(3412) 30 79-79, 8(3412)30- 83-07	+ + + + +
8(3412) 78- 76-85, 8(3412) 78- 06-64	+ + + + +
8(3412) 44- 60-40, 8(3412) 44- 60-67	+ +
8(86545) 2- 74-74	+ +
8(8362) 24- 11-24, 8(8362) 25- 55-40	+ + + + +
8(39520) 65-04-95, 8(39520) 93-16-56	+ + + + +
8(3952) 42- 55-76, 8(3952) 78- 15-83	+ + + + +
8(843) 248- 71-17, 8(843) 258- 85-65	+ + + + +

8(4842) 54-82-22, 8 (4842) 54- 83-33	+ + + + +
8(3439) 39-95-20, 8(34399) 34-74-40	+ + + + +
8(3842) 35- 39-67	+ + + + +
8(8332) 56- 25-95, 8(8332) 54- 70-77	+ + + + +
8-988-548- 24-36	+ + + + +
8(4942) 300107, 8(4942) 300107	+ + + + +
8(86142)4- 43-59	+ + + + +
8(861) 267- 50-88	+ + + + +
8(861) 222- 64-13, 8(861) 222- 85-55, 8- 905-408- 08-38	+ + + + +
8-918-041- 31-04, 8(86131) 71-2-72	+ + + + +
8(86164) 7- 01-22	+ + + + +

№ 57	№ 8(86145) 3-78-74	+	+	+	+	+
№ 25	№ 8(86164) 65-4-95, 8-918-355-81-70	«	»	+	+	+
№ 1	№ 8(86153) 4-16-70				+	
№ 168	№ 8(86151) 4-33-54, 8-918-464-00-86	"	"	+	+	+
№ 1	№ 8(3912) 93-54-33, 8(3912) 94-52-82	«	»	+	+	+
№ 36-37	№ 8(4712) 50-85-90, 8(4712) 35-04-91	«	»	+	+	+
№ 2	№ 8(86169) 7-39-99, 8(86169) 7-24-96	«	»	+	+	+
№ 66	№ 8(4742) 33-45-65, 8(4742) 33-45-95	"	"	+	+	+
№ 29	№ 8(8772) 52-36-90	«	»	+	+	+
№ 25	№ 8(8772) 55-62-38	«	»		+	+
№ 20	№ 8(8722) 93-30-73	«	»	+	+	+

№ 11	№ 8(86385) 2-33-26 8-960-458-07-11	«	»	+	+	+	+
№ 16, 9	№ 8(499) 340-29-89, 8(499) 733-25-00	«	»		+		
№ 1534	№ 8(499) 717-82-07, 8(499) 717-82-12	«	»	+		+	+
№ 3	№ 8(495) 721-30-70, 8(499) 168-05-19, 8(499) 168-47-15	«	»	+		+	+
№ 20 (30/05)	№ 8(8552) 359002, 8(8522) 359042	«	»	+	+	+	
№ 24	№ 8(8662) 42-04-30, 8(8662) 42-12-21	"	"	+		+	+
№ 55	№ 8(86554) 5-59-77, 8(86554) 3-67-57	«	»	+	+	+	+
№ 9	№ 8(8555) 48-08-80, 8-917-906-60-06	«	»	+		+	+
№ 21	№ 8(831) 229-63-66, 8(831) 229-60-87	«	»	+		+	+
№ 18	№ 8(831) 46-18-848	«	»		+		+
№ 6	№ 8(831) 46-18-848	«	»		+		+

№ 18	« - »	8 (3843) 20-31-33	+		+	+	+
№ 14	« - »	8(8617) 63-11-15, 8(8617) 63-03-95	+	+	+	+	+
№ 17	" - "	8(383)274-99-33, 8(383) 274-99-45	+		+		
№ 24	-	8(86369) 3-74-75, 8-928-609-35-85	+	+	+		
№ 4	..	8 (3532) 36-87-94	+			+	+
№ 16	« - »	8(3532) 77-67-64, 8(3532) 78-15-82	+	+	+	+	+
№ 130	" - "	8(3812)36-42-02	+		+	+	+
№ 2	« - +»	8(3537) 33-84-43, 8(3537) 35-13-18	+	+	+	+	+
№ 2	« »	8(8412) 26-09-60, 8(8412) 26-12-29	+		+	+	+
№ 3,	« - »	8 (342) 221-40-99	+	+	+	+	+
№ 11	« - »	8(8142) 78-06-93, 8(8142) 70-65-48	+		+		
№ 11	« - »	8 (8112)-53-86-30, 8 (8112)-53-86-50	+		+		

№ 12	-	8(793) 31-84-16	+	+	+	+	+
№ 5-13	" - "	8(8793) 98-70-11	+	+	+	+	+
№ 148	-	8(47396) 48-911	+	+	+	+	+
№ 37	« - »	8(863) 250-47-77	+		+		
№ 50-1/52, 55	« - »	8 (863) 21-92-112, 8-800-100-51-52	+	+	+	+	+
№ 11 /17	..	8-906-453-35-81	+		+		
№ 12	« - »	8(4855) 22-04-77, 8(4855) 25-38-60	+	+	+	+	+
№ 14	" "	8(86370) 2-19-50	+	+	+	+	+
№ 12	" - "	8(4855) 22-04-77, 8(4855) 25-38-60	+	+	+	+	+
№ 21	« - »	8(4855) 24-31-21	+	+	+	+	+

14,	« - »	8(4912) 76-88-01, 8(4912) 40-30-30	+	+	+	+	+
, .42" "	« - »	8(4912) 41-33-02,	+	+	+	+	+
52, .8, 9		8(846) 931-85-46	+	+	+	+	
63	" - "	. 8(846) 379-54-54	+	+	+	+	+
e 197	« - XXI»	8(812) 600-11-97	+	+	+	+	
e , .41, -	« - »	8(812) 325-36-56, 8(812) 325-36-57	+		+	+	
e , .11, 36 ,	« -95»	8(812) 822-18-00, 8(812) 320-06-61	+				
, .1	« - »	8(8342) 23-05-91, 8(8342) 47-48-59	+	+	+		
3- ," - "	« - - »	8(8452) 35-11-80, 8(8452) 55-43-63	+	+	+	+	+
, .16 7/1	..	. . 8-951-522-38-11	+	+	+	+	+
, .253	« - - - »	8(496) 547-04-95, 8(496) 549-32-79	+	+		+	+
, .90	« »	8 (8622)55-51-19,	+			+	+

		8 (8622) 55-01-08					
.50 , .8/1	« »	8(8652) 74-01-91	+	+	+		
.63	« - »	8(8652) 24-30-14, 8(8652) 23-31-81	+	+	+	+	+
.15 , .21	« »	8(8652)95-53-68, (8652)95-61-90			+		
, .1	« - - »	8 (4725) 24-62-27, 8 (4725) 24-73-49	+	+	+		
, .158	« - »	8(3473) 20-12-13, 8(3473) 20-27-70	+			+	+
, .25	« »	8(8212) 22-95-29, 8(8212) 29-12-20	+	+	+	+	+
.137	« - 2000»	8(4752) 56-19-42, 8(4752) 56-19-44	+	+	+	+	+
88/15	-	8-910-834-80-35, 8-952-065-89-10	+			+	
, .24/2		8(86130) 4-86-59, 8-918-147-02-03	+	+		+	+
2/2	" - "	. 8(86196) 7-20-53	+	+	+	+	+
, .48	« - - +»	8(8482) 22-72-41, 8(8482) 22-71-85, 8(8482) 61-	+	+	+	+	+

		65-64					
. 58	« - -2»	8(3822) 56- 23-35, 8(3822) 48- 08-80	+		+		
137	« - »	8(4872) 31- 12-57	+	+	+	+	+
55	" "	8(3452) 47-35-69	+		+	+	+
.28	« »	8(3012) 21- 89-63	+		+	+	+
.18, 18, 2	« »	8(8422) 31- 00-00	+	+	+	+	+
.16/7	« - »	8(8422)73- 44-22, . 8(8422) 73- 29-19	+	+		+	+
378	« - - »	8(87875) 7- 44-82	+	+	+		
148	« - - »	8(3472) 77- 12-62	+		+		
.153, .42, .7	« - »	8(347) 279- 90-70, 8(347) 241- 62-02					+
15	" - "	8(86391) 2- 18-06	+		+		
36	« - »	8(8352) 62- 30-97, 8(4942) 63- 20-98	+		+		

. .102 (	-	. 8(351) 772-72-05, . 8(351) 772-73-66, . 8(351) 772-69-01	+	+	+	+	+
8 (	-	. 8(351) 239-39-34, . 8(351) 239-39-35	+	+	+	+	+
. .18	« »	8(8202) 54- 31-88	+		+	+	+
. .340" "	« - »	8(8782) 27- 30-60, 8(8782) 27- 70-77	+	+	+	+	+
. .48, . 11	" . ."	8(8782)25- 04-66, . 8(8782)25- 19-15	+	+	+	+	+
. .1	-	8-904-345- 83-18	+	+	+	+	+
. .21	« - »	8 (84722) 9-52-07, 8- 937-469- 52-07	+	+	+	+	+
. .57	« - »	8(8453) 55- 80-89, 8- 964-848- 45-06	+		+	+	+
. .12	« - »	8 (4852) 25-94-83	+		+		

«Saturn Home Appliances»

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.

«Saturn Home Appliances».

				/	-	-
					-	-

1	,36	Hi-Fi	(064) 424-89-50	+	+	+
2	.14		(065)632 21 83, 050-904-57-17	+	+	+
3	,66		062744-60- 38(39)	+	+	+
4	,49	-	(04563) 633-19	-	+	-
5	.50- ,82	-	(045) 63-68-413	+	+	+
6	,57	-	(041) 43-406-36	+	+	-
7	,43	" "	(0314 1) 43-432	+	+	+
8	,3, .8	-	(044) 332-01-67	+	+	+
9	,42	-	(0432) 46-50-01	+	+	-
10	,61		(0432) 61-95-73	+	+	+
11	,16	-	(0432) 464393; (0432) 468213	+	+	+
12	,3		(0432) 64-24- 57, (0432) 64-26-22	+	+	+
13	,1		(0432) 509-191, 579-191	+	+	+
14	68,1 , .420		(0562) 337-574	+	+	+
15	,17 .130	-	(056) 778-63-25 (28)	+	+	+
16	,59		(0562) 35-04-09	+	+	+
17	,118		(0562) 67-60-44	+	+	+
18	,41		(056) 790-04-60	+	+	+
19	,9		(068) 851-33-33	+	+	+

20	' - , 188		(062) 345-06-07	+	+	+
21	' ,129	-	(062) 349-26-81	+	+	+
22	' ,1	-	(062) 302-75-69	+	+	+
23	' ,8	" "	(0412) 471-568	+	+	-
24	' ,4 .222		(067) 410 2198	+	+	+
25	' , 24	C	(0412) 47-07-42, 42-11-53	+	+	-
26	' ,50	-	(061) 220-97-65 (64)	+	+	+
27	' ,175		(061) 701-65-96	+	+	+
28	' ,83	-	(061)212-03-03	+	+	+
29	' ,75		066-085-75-39	+	+	+
30	' ,19		(0342)559-525, 750-777	+	+	+
31	' ,14		(0342) 754737	+	+	-
32	' ,9	-	(048) 734-71-90	+	+	+
33	' ,76		(04597) 551-62	+	+	-
34	' ,161, ( . )	-	(04736) 629-49	+	+	+
35	' , 1	-	(044) 591-11-90	+	+	+
36	' ,1	" "	(044) 4269198	+	+	-

37	' ,9 .57	-	(044) 369-5001 (063) 486-6999	+	+	+
38	' ,10		(06272) 2-62-23, (050) 279-68-16	+	+	+
39	' ,1	" "	(0522) 301-456	+	+	+
40	' ,2		(0522) 35-79-23	+	+	+
41	' ,98	-	(0522) 270-345,349-585	+	+	+
42	' ,13		(097) 264-21-67, 776-67-70	+	+	+
43	' ,3, .5	" "	(04142) 5-05-04	+	+	+
44	' ,15-106	. .	(06264) 5-93-89	+	+	+
45	' ,7		(050) 526-06-68	+	+	+
46	' ,44, .1	-	(05366) 39-192	+	+	-
47	' ,42		(056) 401-33-56, 404-00-80, 474-61-03	+	+	+
48	' ,9		056-4092302 (03)	+	+	+
49	' ,64/7		(0564) 40-07-79	+	+	+
50	' ,73	" "	(056) 440-07-64	+	+	+
51	' ,81		(050) 214-91-73; (066) 017-02-03	+	+	+
52	' ,49	-	(0642) 505-783	+	+	+
53	50		(0642)50-57-83	+	+	+
54	' ,96		(0642) 494-217, 33-11-86	+	+	+
55	' ,1	-	(0332)290752	+	+	+

56	, 15		(032) 244-53-44	+	+	+
57	, 35	" -	(032) 2973631	+	+	+
58	, 2		(032) 247-14-99	+	+	+
59	, 116	" -	(032) 245-80-52	+	+	-
60	, 28		(032) 239-51-52 (032) 239-55-77, 295-50-28, 295-50-29	+	+	+
61	, 9	" "	032-267-63-26	+	+	-
62	, 242		(062)322-55-50	+	+	+
63	, 2		04337-64847;0432-468213	+	+	+
64	, 24/1		(099) 262-11-18	+	+	+
65	, 46		(03131)37-337, 37-336	+	+	-
66	, 50, 32/18		(0629) 41-06-50	+	+	+
67	, 227	" -	(0629) 473-000	+	+	+
68	, 33,	" "	(0512) 580-555	+	+	+
69	, 49	" "	0512-58-21-80	+	+	+
70	, 2		(0512) 58-06-47	+	+	+

71	, 62	-	(05662) 22-488, (097) 402-71-95	+	+	-
72	, 97, 2	" -	(05662) 4-15-03	+	+	-
73	, 38		(055) 497-26-17	+	+	-
74	, 38	" "	(041)4152010	+	+	-
75	, 66 ( 2)		048-7317704; 7317703;	+	+	+
76	, 90		(048) 700 17 37	+	+	+
77	, 55	" "	(048) 715-10-25, (0482) 39-06-18	+	+	+
78	, 67	" "	8(05632) 6-15-54, (05632) 6-23-42	+	+	-
79	, 26		050-013-72-17, 0532-509889	+	+	+
80	, 14		(0532) 69-42-62	+	+	+
81	, 21	-	(0532) 69-09-46 (093)562-81-25	+	+	+
82	, 66	-	(0532)615-621	+	+	+
83	, 371	-	(04637)53-982 (093)753-38-28	+	+	+
84	, 101/1		(046) 3738595	+	+	+
85	, 12	-	(0362) 26-67-53, 26-65-85	+	+	-
86	, 26		(0692) 55-56-43, 45-36-99	+	+	+

87	72	-	(0652)-69-07-78	+	+	+
88	17/1	" - "	(0652) 522-771	+	+	+
89	32	-	(04733)-46-182	+	+	-
90	15 ( - )		(06444)40289	+	+	+
91	171 /10	-	(245) 53-136	+	+	+
92	19		(0542) 705-296	+	+	-
93	17	SLT- Service	(0542) 78-10-13	+	+	+
94	2	" "	(0352) 26-30-13, 23-17-97	+	+	-
95	1/24	" - "	(047) 44-46-614,(047) 44-46-134	+	+	+
96	101		(0312) 661-297	+	+	+
97	12		(057) 717-13-39, 702-16-20	+	+	+
98	3		(057) 734-97-24, 712-51-81	+	+	-
99	18 ( - 42 )	" "	(096) 595-37-46	+	+	+
100	1		(03142) 42-258	+	+	+
101	5	-	(0552) 29-60-42	+	+	+
102	28		(0552) 43-40-33	+	+	+
103	35		(0552) 420-235	-	-	+

104	18		(0382)78-37-55, 78-37-73	+	+	+
105	10/1	-	(0382) 723-241, 723-240	+	+	+
106	63		097-549-20-36	+	+	+
107	7, 301	-	0472-633-728	+	+	+
108	71		(0472) 435-389	+	+	+
109	146, 102	" - "	(0472) 563-478, 500-354, (096) 505-63-63	+	+	+
110	77-1		(0462) 601585	+	+	+
111	6		(0462) 724872,724949	+	+	+
112	105 ( )		(0372) 55-48-69,90-13-11	+	+	+
113	265		(0372) 58-43-01	+	+	+
114	3	" - "	(050) 373-73-71	+	+	+
115	5	( - )	(050) 324-43-01	+	+	-

GB

## WARRANTY COUPON

When purchasing the product,  
please require its checking before you;

**BE SURE**

**that the goods sold to you, are functional and complete  
and that the warranty coupon is filled in correctly.**

This warranty coupon confirms the absence of any defects in the product you purchased and provides for free of charge repair of the product failed through the fault of the manufacturer throughout the period of warranty service and free of charge repair.

Failing the presentation of this coupon, in case of its improper filling in, infringement of factory seals (if any), and also in cases indicated in the warranty obligations, the claims are not accepted, and no warranty service and free of charge repair is made!

The warranty coupon is valid only in the original copy with the stamp of trading organization, signature of the seller, date of sale and signature of the buyer.

CZ

## ZÁRU NÍ LIST

**P i koupi výrobku  
žádejte o jeho vyzkoušení ve Vaší přítomnosti,**

**P E S V D T E S E,**

**že Vám prodaný výrobek je dobře fungující a kompletní  
a že záru ní list je vyplněn správně.**

Tento záru ní list potvrzuje, že na Vámi koupeném výrobku nejsou žádné vady a zajišťuje bezplatnou opravu nefungujícího přístroje z viny výrobce, během celé záru ní doby.

Bez předložení tohoto listu, při jeho nesprávném vyplnění, porušení plomb výrobce (jsou-li na výrobku) a také v případech, které jsou uvedené v záručním listě, nároky se nepřijímají a záru ní oprava se neprovádí!

Záru ní list je platný jenom jako originál s razítkem obchodní organizace, podpisem prodávajícího, termínem prodeje a podpisem zákazníka.

RU

UA

# Saturn®

WARRANTY COUPON

ZÁRU NÍ LIST

SATURN HOME APPLIANCES S.R.O. KON VOVA 141/2660  
13083 PRAHA 3 – ŽIŽKOV, ESKÁ REPUBLIKA, TEL: + 4202/ 67 108 392

Model /

Production number/Výrobní íslo/  
/

Date of sell/Termín prodeje/ /

Shop stamp/Razítko obchodu/ /

Seller's signature/Podpis prodava e/ /

Buyer's Signature confirming the acquaintance and consent with terms of free of charge maintenance service of the product, and absence of the complaints on appearance and color of the product.  
Podpis zákazníka, potvrzující seznámení a souhlas s podmínkami bezplatného záru ního servisu výrobku, a také neexistence nárok na vn jšek a barvu výrobku.

<b>Saturn®</b>	<b>Saturn®</b>	<b>Saturn®</b>
Model / .....	Model / .....	Model / .....
Production number / .....	Production number / .....	Production number / .....
Name of the Trade Company / .....	Name of the Trade Company / .....	Name of the Trade Company / .....
Stamp of the Trade Company/ .....	Stamp of the Trade Company/ .....	Stamp of the Trade Company/ .....
Client Address/Phone # / .....	Client Address/Phone # / .....	Client Address/Phone # / .....
Date of Receiving/ / .....	Date of Receiving/ / .....	Date of Receiving/ / .....
Defect / / .....	Defect / / .....	Defect / / .....
Signature, Stamp / , / .....	Signature, Stamp / , / .....	Signature, Stamp / , / .....
COUPON 1	COUPON 2	COUPON 3