



MULTIMEDIA SPEAKER

V28A



User Manual

Security information:

Warning

1.Please read this manual carefully and keep it properly.

2.Please use accessories specified by the manufacturer.

3.Please install according to the instructions in the manual.

4.It is recommended to use this product in an environment with a temperature range of 0-35℃.

5.To reduce the risk of fire and electric shock, please do not expose this product to rain or moisture.

6.Do not use this product near water, nor immerse it in any liquid or allow any liquid to drip or splash onto it.

7.Avoid installing or using this product near any heat sources (such as radiators, heating equipment, stovetops, or other heat-generating devices).

8.Never place any water-filled containers, such as vases, on top of this product; nor should any form of open flame, like a lit candle, be placed on it.

9.Do not block the openings of this product or insert objects into its vents or slots, as this may pose a risk of fire or electric shock.

10.Please ensure adequate space around this product to maintain good ventilation (recommended to be 5cm or more).

11.Do not forcibly insert the plug into the port. Before connecting, check if the port is blocked, if the plug and port are compatible, and if the orientation is correct.

12.To prevent children from ingesting the provided accessories (such as Adapter), please keep them out of reach of children.

13.Do not attempt to open or remove the casing for repairs as it may expose you to dangerous voltages or cause other hazards. Regardless of the reason for damage, professional repair personnel must be consulted for repairs, especially if the power cord or plug is damaged, if liquid has spilled or objects have fallen into it, if it has been exposed to rain or moisture, if it malfunctions, or if it has been dropped.

14.Before wiping or cleaning the product with a dry cloth, please turn off the product and unplug it from the power source.

15.Do not use strong acids, strong bases, gasoline, alcohol, or other chemical solvents to clean the product surface. If cleaning is necessary, please use a neutral solvent or water.

16.This product is not sold with a power adapter. If consumers choose to use a power adapter for power supply, they should purchase a formal and standard-compliant power adapter.

Packing List:

Speaker

x 1

User Manual

x 1

FAQs:

1.Failure to Power On

Check if the machine is in the off state and try to power it on by pressing and holding the power button. Alternatively, inspect the USB port for poor connection. If the device is powered by a USB port on a computer, try using a different port as a troubleshooting step.

2.Unable to Connect via Bluetooth

Ensure that both the speaker and the connecting device have Bluetooth turned on and are within an effective connection range. Alternatively, try resetting the speaker using the [Forced Bluetooth Pairing] function before attempting to connect again.

Function Introduction:

A

B

1

2

3

B

A

4

5

6

7

C

D

8

D

Structural diagram description:

A.High pitched speaker (small vibration amplitude for decoration)

B.Low pitched speaker (large vibration amplitude)

C.Light mirror

D.Diaphragm

Key operation instructions:

1.Short press to reduce volume, long press to play the previous song.

2.- In music playback: Click to play or pause music.

- In an incoming call: double-click to redial the call and reject the call; Click to receive and hang up calls.

- In Bluetooth mode: Long press to disconnect the Bluetooth connection.

3.Short press to increase volume, long press one song.

4.Press and hold for 3 seconds to turn on/off.

 
5.Short press to switch lighting modes, long press to turn on/off lights.

6.Short press to switch between Bluetooth and computer sound card modes.

7.Microphone receiving hole: can make calls in Bluetooth/USB computer communication mode

8.Audio connection cable (USB powered).

Setup and Usage:



CONNECTION DIAGRAM

Computer device USB connection

Mobile phone, iPad, and mobile device connectivity

Insert the USB connector into the USB power supply

Computer mode:

1.Connect the computer device, turn on the power, and there will be a startup prompt sound. After turning on, there will be an input mode prompt . You can click the "M" key to switch to the input mode of the computer sound card (Note: Equipped with power-off and shutdown memory modes)

2.Fix settings: On your computer, select Control Panel/System Preferences>Sound Settings>Output, and then choose Output Device Speaker "V28A".

Bluetooth audio mode (depending on the connected device):

1.Computer equipment/5V adapter/power bank, etc.: There is a startup prompt sound after power on, and an input mode prompt sound after power on. Click Press the "M" key to switch to Bluetooth input mode. (Note: Equipped with power-off and shutdown memory modes)

2.Open the Bluetooth device menu, turn on Bluetooth and search for Bluetooth devices; When clicking "V28A" in the searched device list and hearing a "connection successful" prompt sound, the pairing is successful.

3.Use a sound source device to play music (adjust the volume to the appropriate level before playing).

M

Single Click

Bluetooth

Bluetooth

My equipment

V28A

Please Note:

Please Note: This speaker uses USB decoding. If the speakers are connected to your computer and there is no sound when playing music (non silent mode), please fix the settings: Go to the computer control panel/system preferences>sound settings>select "V28A" as audio output - save changes.

Product Specifications:

Speaker power: 10W

Bluetooth version: V5.4

Bluetooth reception distance:<10 m (accessible)

High pitched speaker size: 2"x2 (small vibration amplitude for decoration)

Bass speaker size: 2"x2 (large vibration amplitude)

Power input: DC 5V/1A-2A

Frequency response range: 60HZ-18KHZ

Signal to noise ratio:>70dB

Distortion:<1%

Separation degree:>60dB

Control method: Tap the button for audio

Input method: Bluetooth/computer sound card playback

Speaker size: 400mm X 80mmX71mm

