

# Haier

Inspired Living

User Manual  
**MODELS:**

55 Smart TV S7  
65 Smart TV S7

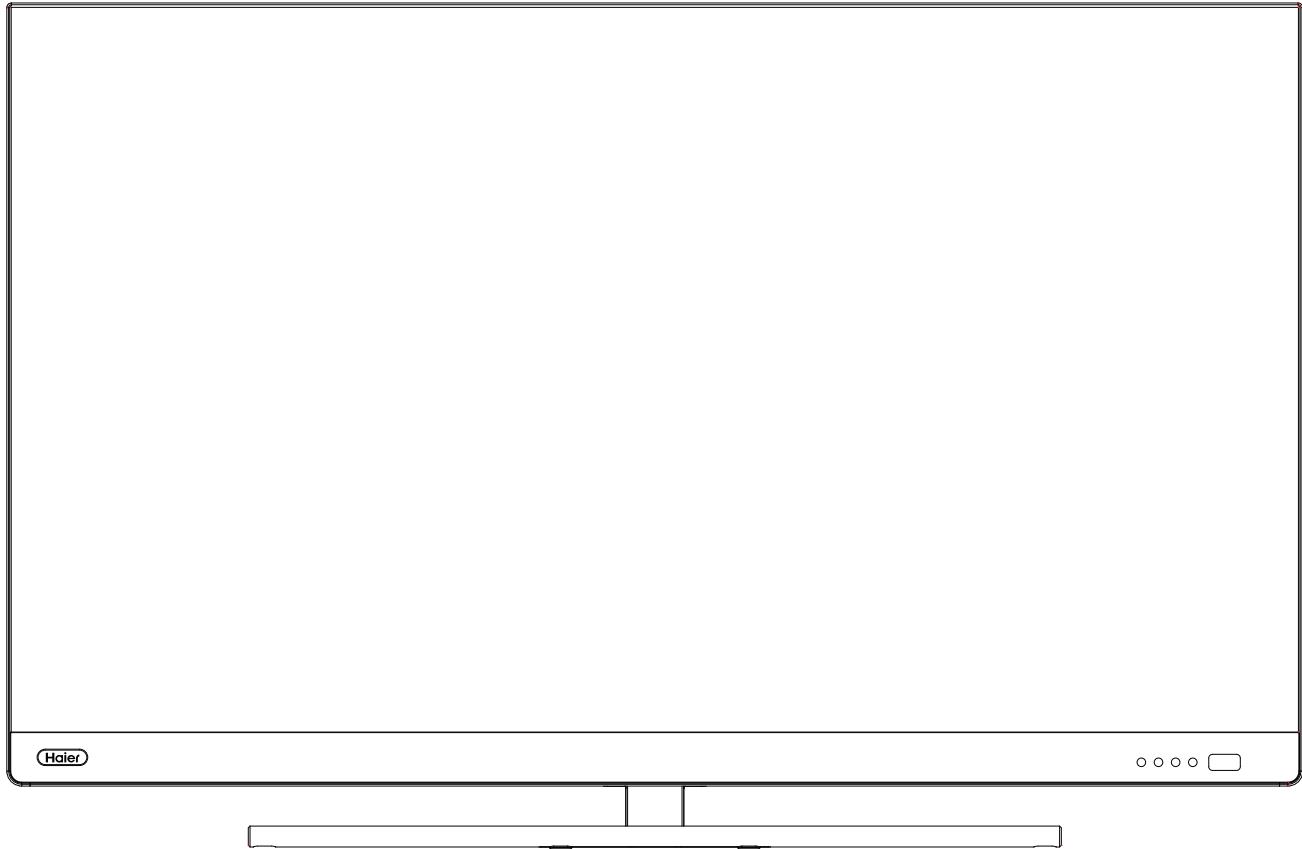


Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

LED Television

# TABLE OF CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS .....	1
2. PRECAUTIONS AND REMINDERS .....	2
3. PREPARATION .....	3
4. PERIPHERAL CONNECTION AND CONTROLS .....	4
5. MAKING CONNECTIONS .....	5
6. OPERATING INSTRUCTIONS .....	6
8. TROUBLESHOOTING .....	17
9. PRODUCT SPECIFICATION .....	18

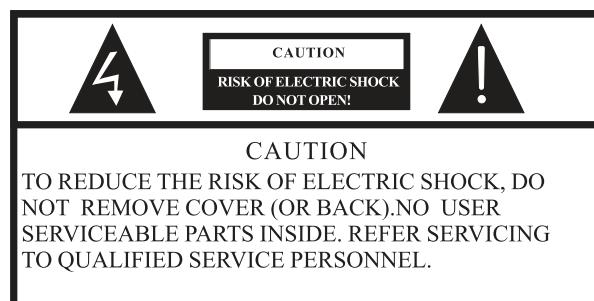


Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

## IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.

**\*Actual product may vary in appearance from above image\***



**CAUTION**  
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



 
The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

### **WARNING:**

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

### **WARNING:**

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.




This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.




This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


## PRECAUTIONS AND REMINDERS

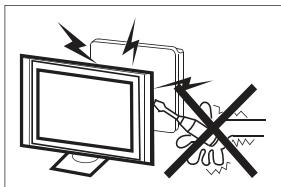


High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

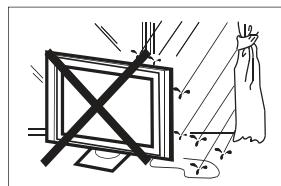

To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

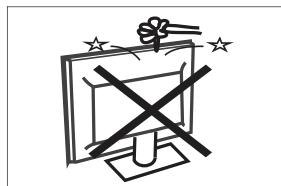

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

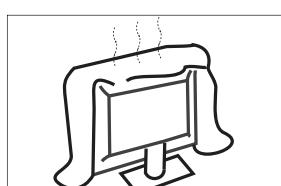


Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.




Do not trap the power supply cord under the television receiver.




If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

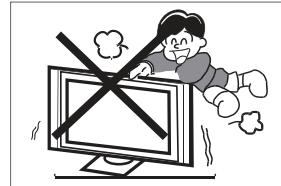


Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

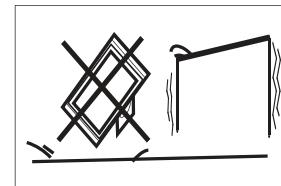


Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.

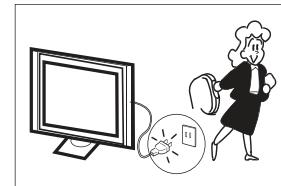

When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

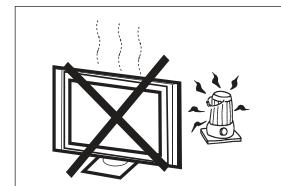

Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

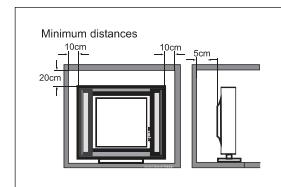

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Note: the use of apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.


## PREPARATION

**IMPORTANT:** Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

### ATTACHING THE STAND

**IMPORTANT:** The stand of the TV must be assembled prior to usage.

1. Place TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to Prevent any damage to the TV.
2. Fix the stand to the bottom of the TV with the 12 screws.

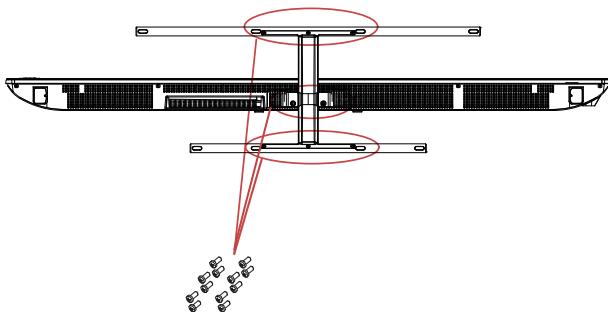

#### ! NOTE

The appearance of the product shall be in kind.


### PREPARING YOUR LED TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the stand.

For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

1. Remove the screws holding your TV to the stand.
2. Remove the stand from your TV.
3. Secure the wall mount bracket to the back of your TV using four screws. Follow the instructions of the user manual that came with the wall mount bracket to install.

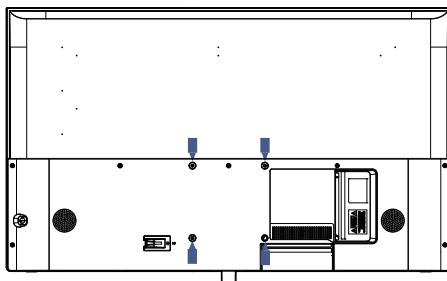


#### ! NOTE

The wall mount bracket are not included.

4. Fix the wall mount screws (BM6x10mm/4pcs) into the rear side of the LEDTV ,using the torque of 8kgf,cm.

### TURNING ON THE TV

1. Install the stand and place the TV on a solid surface.

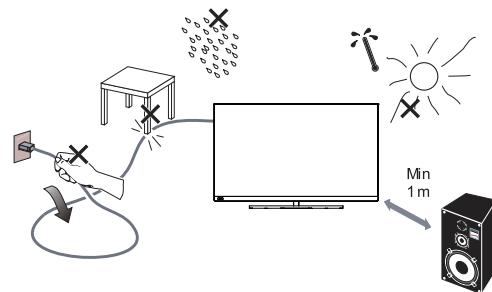


#### ! NOTE

- Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
- To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
- Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.

2. Connect the antenna cable or cable TV cable to the **ANT IN** aerial socket on the back of the TV set.

3. Power:

Plug the cord into a working power outlet.

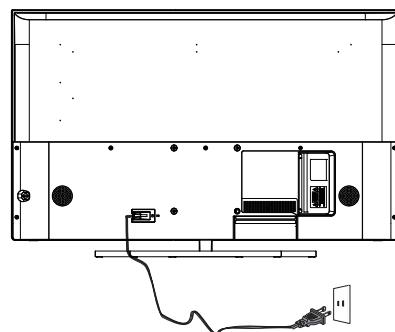


4. Turn the TV on:

Press **POWER** on the remote control or **POWER** button on the side control panel of the TV.

# PERIPHERAL CONNECTION AND CONTROLS

## BUTTON CONTROL

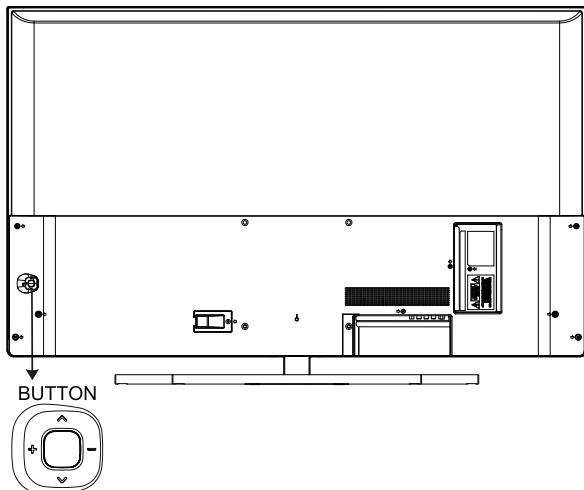

### Middle key

In the standby mode, press the middle button to turn on the TV.

In the boot state, long press the middle button to shut down.

Under the menu page, function equivalent to the OK key.

### Left and right keys

In the non-menu page, press the left and right keys to adjust the volume addition and subtraction.

### Up and down keys

In the non-menu page, you can adjust the TV channel under the program addition and subtraction;

Under the menu page, you can move the cursor up and down.

## ACCESSORIES

TV 55"/65"

Remote Control - 1pcs

User's Manual - 1pcs

Screws - 12 pcs

## PERIPHERAL CONNECTION



All the terminals are (from left to right):

RJ45, OPTICAL, HDMI4, HDMI3(eARC/ARC), VIDEO, L, R, HDMI2




All the terminals are (from left to right):

HDMI1, LNB IN(SATELLITE), ANT IN(ANTENNA/CABLE), USB1, USB2, CI, EARPHONE.


# MAKING CONNECTIONS

You can use the input terminals on TV set rear as follows.

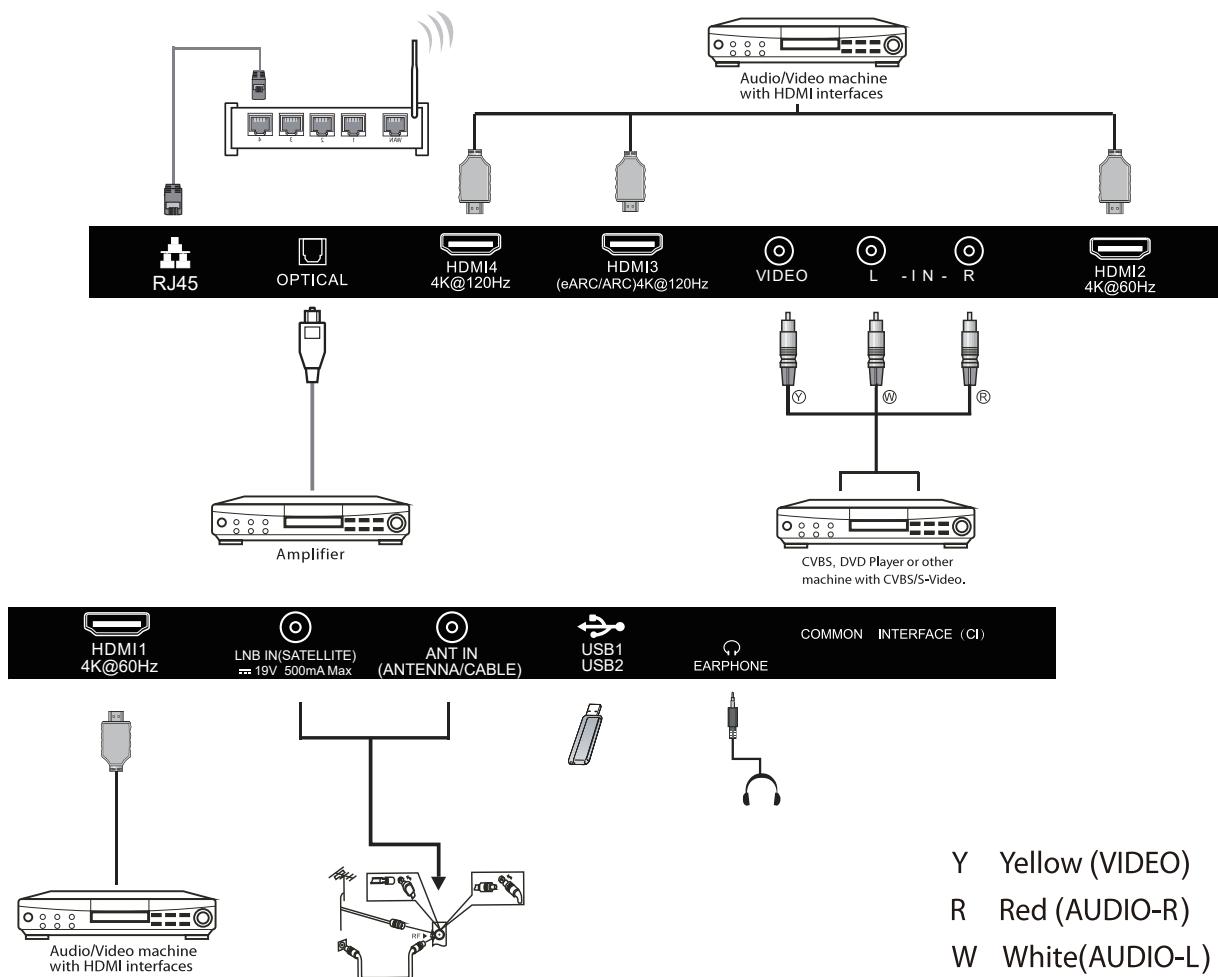


1. RF: Antennal/close circuit TV
2. EARPHONE: Earphone output.
3. USB: Connect USB device.
4. HDMI: Connect to High-definition multimedia signal resource.
5. AV INPUT: Video input/Audio input.

# OPERATING INSTRUCTIONS

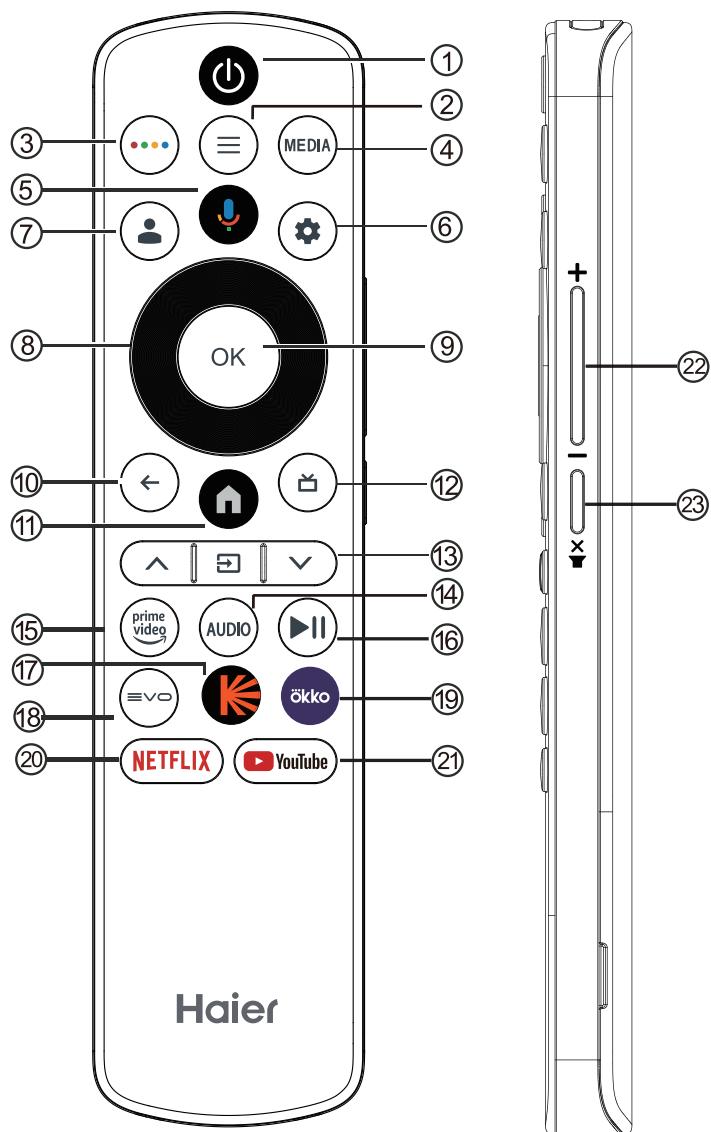

#	Item	Descriptions
1	Power	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
2	≡	Press to open or close the on-screen menu.
3	••••	Press to open Soft Keyboard.
4	MEDIA	Press to open the Media Center.
5	Microphone	Press to enter start a voice search.
6	⚙️	Press to open the Dashboard.
7	👤	Switch Google accounts in Google TV mode.
8	▲▼◀▶	Press to navigate the on-screen menu.
9	OK	Enter the selected option or perform the selected operation.
10	⬅	Return to the previous menu.
11	🏠	Press to open the Home Page.
12	📺	Press to display electronic programme guide in TV mode.
13	CH^/CH^	Press ⬆ or ⬇ to change TV channels. Press to open the input source list.
14	AUDIO	Press to select Mono,Nicam,Stereo for ATV channel,Audio language for DTV channel.
15	prime video	Press to prime video for viewing online TV shows and films(internet connection required).
16	▶	Press to start playing the MEDIA, or to pause playing.
17	🎥	Press to open the кинопоиск.
18	☰	Press to open the EVO.
19	ökkö	Press to open the ökkö.
20	NETFLIX	Press to open the NETFLIX.
21	YouTube	Press to open the YouTube.
22	- +	Press this button adjust the volume.
23	✖️	Press this button to mute or restore sound.


Remove the cover of the battery compartment.  
Insert the 2 supplied batteries (Type AAA 1.5V).

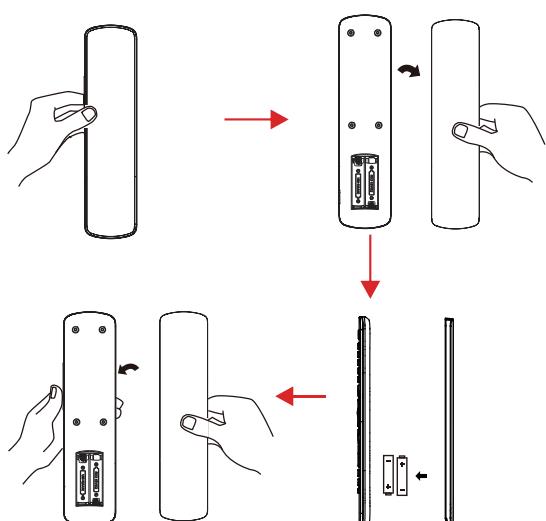


# OPERATING INSTRUCTIONS

## INITIAL SETUP


The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.

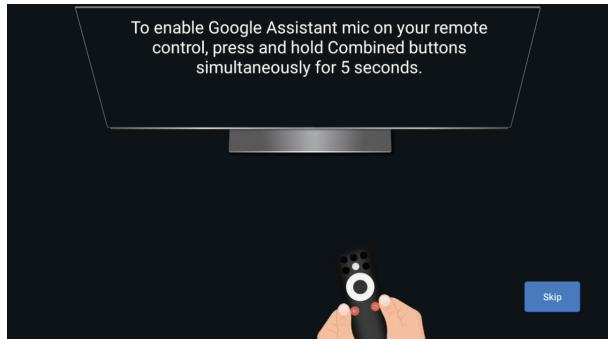


This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

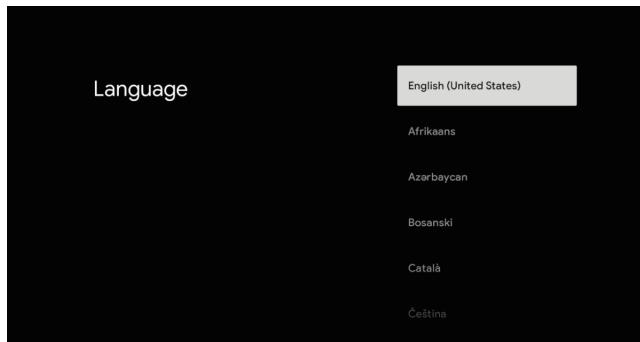


Press **▲/▼** to select the system language and press **OK** to confirm the language.

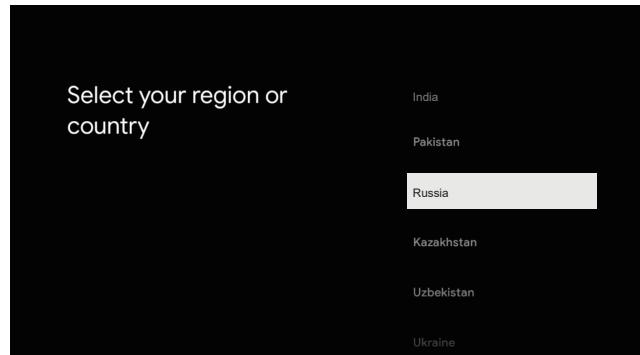


Press **▲/▼** to select the region/country of your device and press **OK** to confirm.

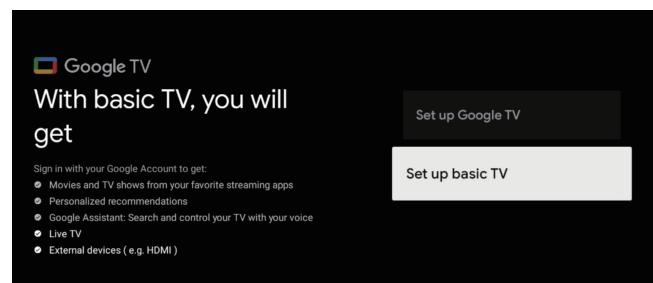


Press **▲/▼** to select the "Set up basic TV" of your device and press **OK** to complete the setup.

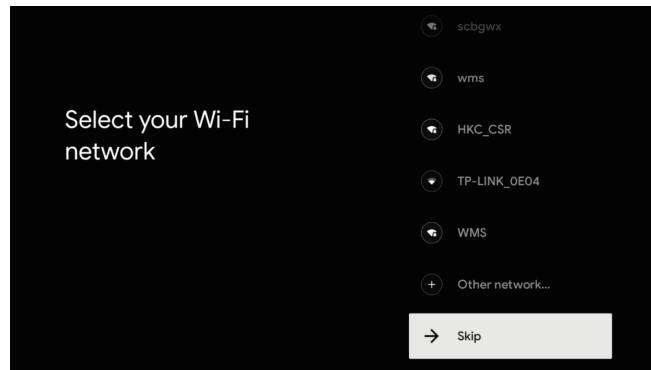

Press **▲/▼** to select the wifi to connect, press **OK** and enter the password to confirm the Connection is successful.

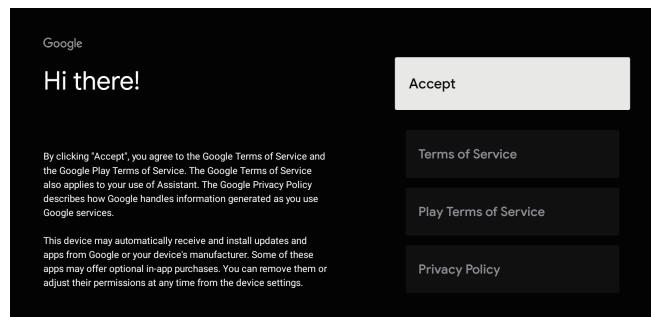

 
By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.



Used to set your device's password to ensure security and privacy.




Press **OK** to pop up the soft keyboard, and use the remote control to enter the 4-digit password automatically jump to the next interface.

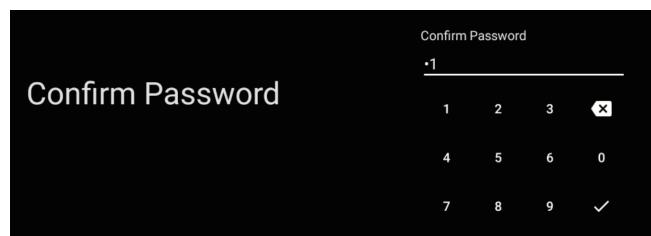


Confirm the password again and keep it consistent Use the remote control to enter the password and complete the password.


# OPERATING INSTRUCTIONS

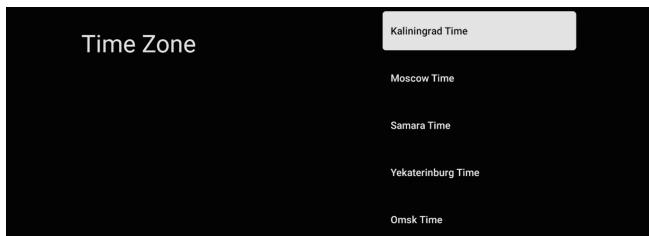


For selecting the mode, press **▲/▼** key to Kaliningrad time mode and press "Yes".

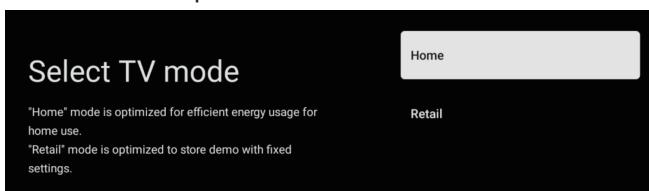


For selecting the mode, press **▲/▼** key to select Home mode and press "Yes".

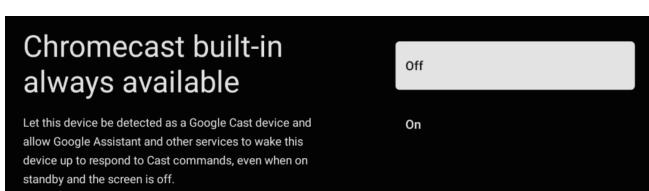


Select "On" to respond to cast commands, select "Off" to exit.

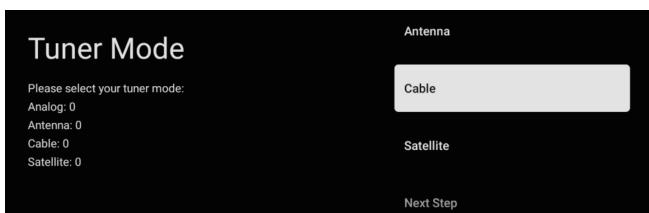


To select the Tuner mode for searching, press to select and press OK to confirm.

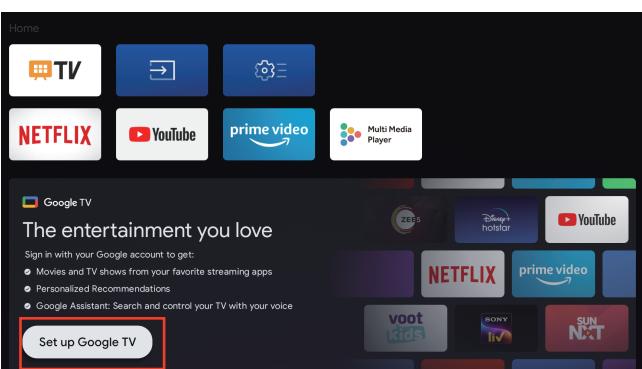



- Once in the user interface, you can switch from basic TV to Google TV settings

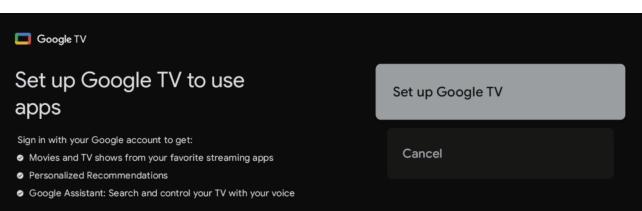



Press **▲/▼** to select the "Set up Google TV" of your device and press OK to complete the setup.

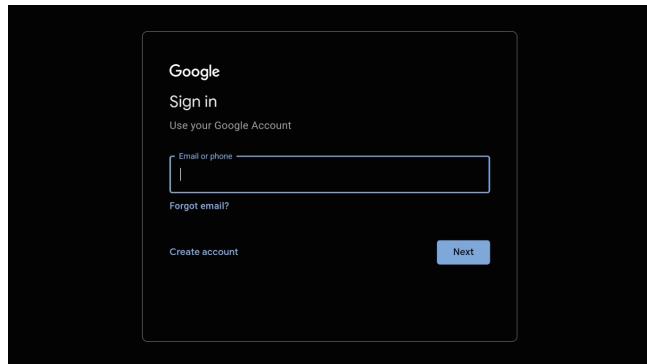

Use your Google Account Sign in

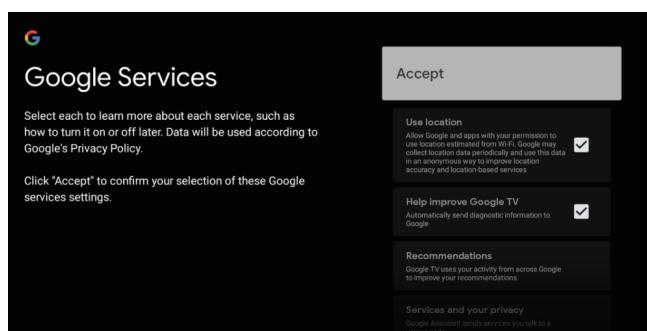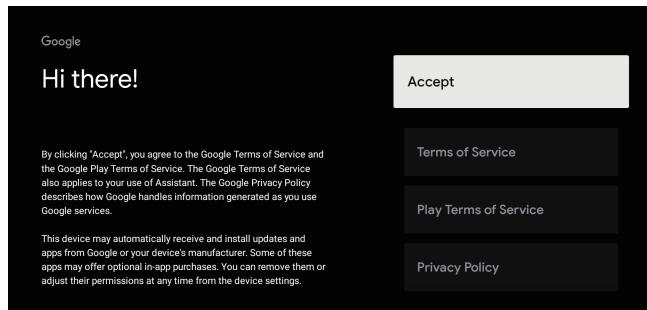


By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.

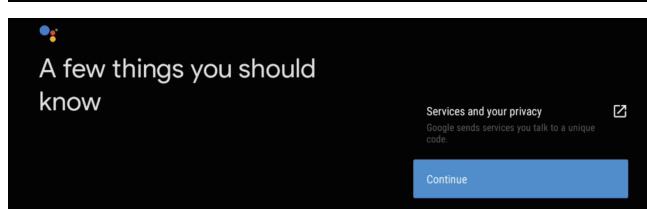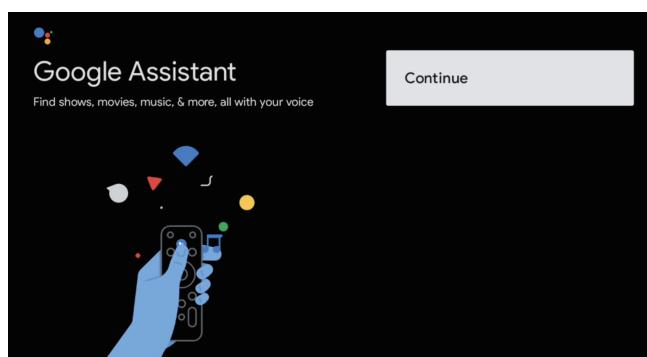

Press to select and press OK to continue.


# OPERATING INSTRUCTIONS

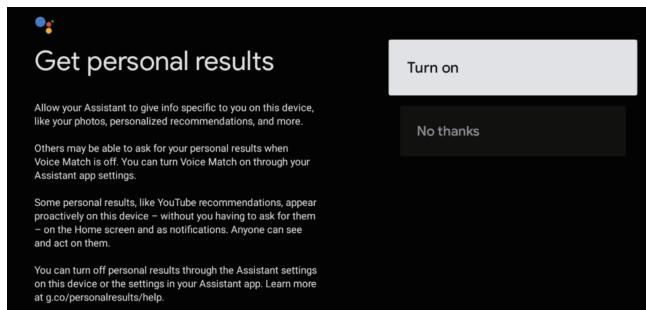


Press ▲/▼ to select the Get personal results and press OK to setup.

## NOTE:


The content of this page will vary depending on the country selected by the Boot Wizard.

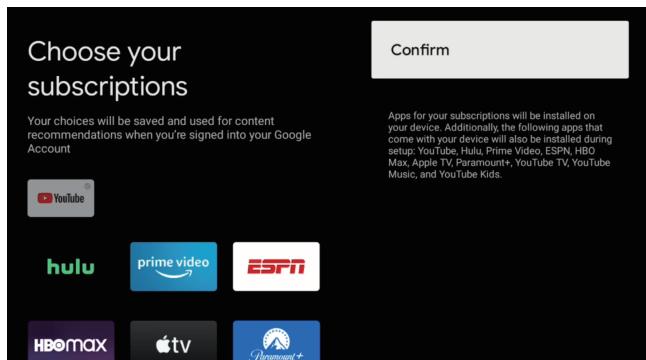


Press ▲/▼ to select the Choose your subscriptions and press OK .

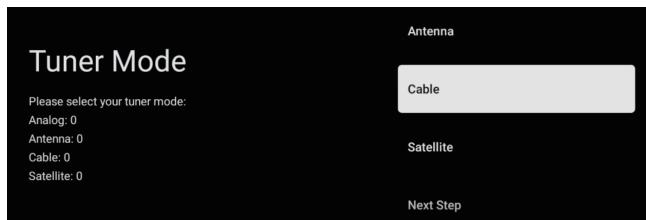

To select the Tuner mode for searching, press to select and press OK to confirm

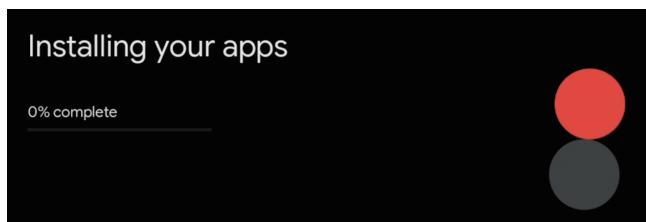


Press the next step Installing your apps.

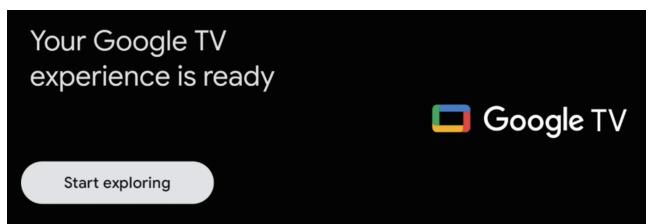

Your Google TV experience is ready and press OK to Start exploring.

## HOME SCREEN

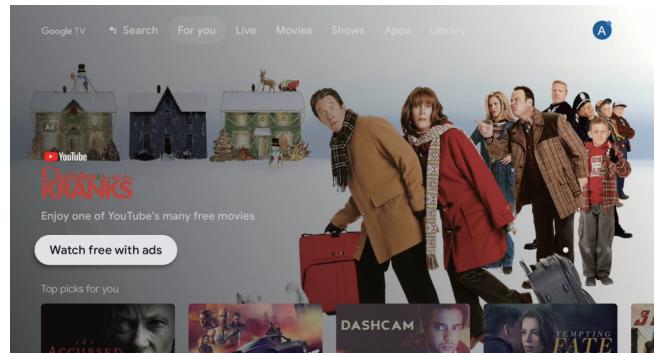


After completing the wizard Settings, you can watch TV and go to the home screen.

## NAVIGATING THE ON-SCREEN MENU


There are two ways to enter. First, in live TV, press the menu button to display TV options, press ▲/▼/◀/▶ to select the settings menu and press OK to confirm.

Second, in the HOME interface, press the key ▶ to select the icon of the circular settings menu, press OK to confirm.

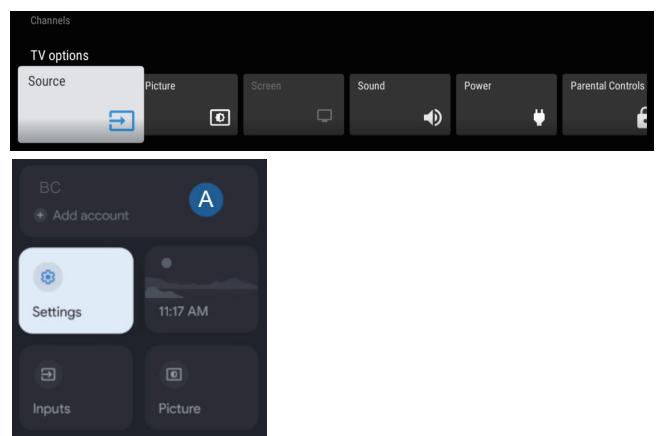

Press ▲/▼button to select what you want set.

Press OK to enter setting.


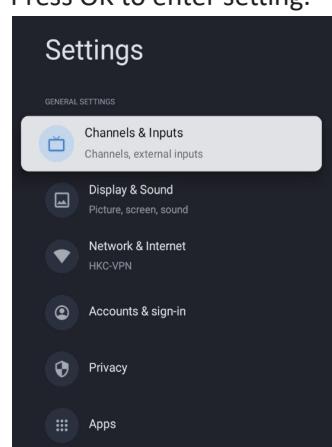


Press BACK to return to the previous menu.If the main menu is displayed,pressing BACK will close the onscreen menu.

# OPERATING INSTRUCTIONS


## Network

1. Press **▲/▼** button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **OK** button to save and return to the previous menu.

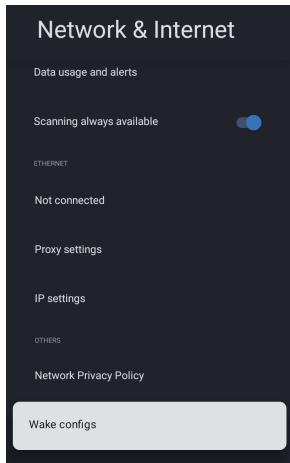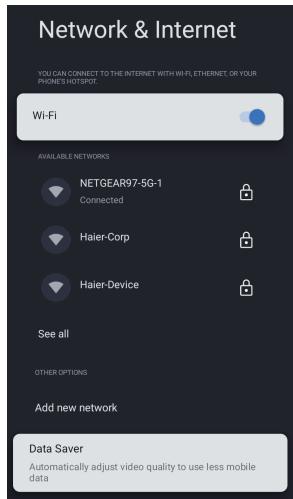



## Channel & Inputs

Press **▲/▼** button to select "Channel & Inputs" set.

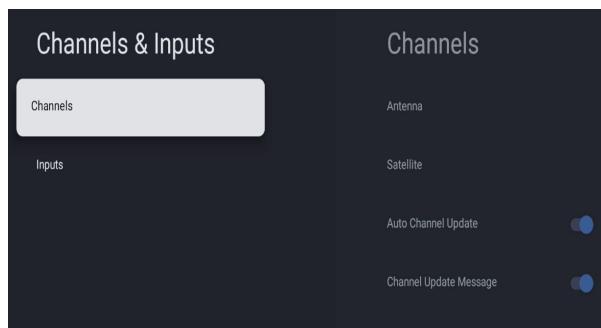

## CHANNEL

In the HOME interface, select the "Settings" icon, press **OK** to open the input source list, select the "Antenna".

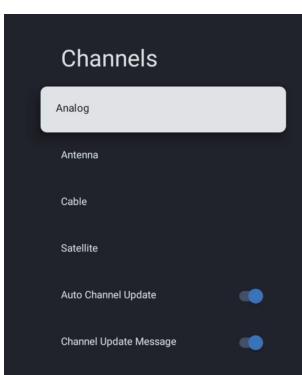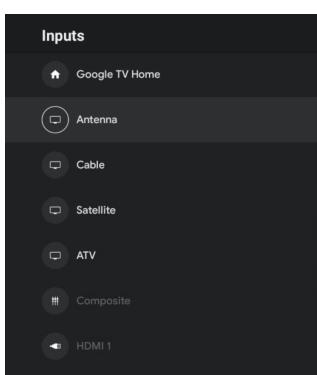


**Analog/Antenna/Cable/Satellite** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Auto Channel Update** - Press **OK** button to choose **ON/OFF**. When selecting **ON**, the system will automatically scan and update channels after 5 minutes of standby.  
**Channel Update Message** - Press **OK** button to choose **ON/OFF**. When selecting **ON**, the system will show you the update message.

## Antenna(Analog)

1. Menu->Settings->Channel & Inputs->Antenna->Channels.

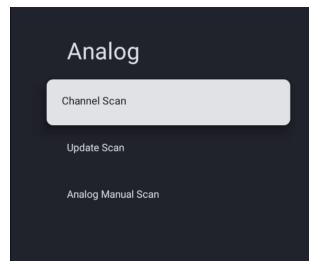

2. Enter Menu->Settings->Channel->Channels.




3. Channel Scan directly enters the automatic search platform interface.

**Update Scan**: Re-automatically search for frequency points outside the station.

**Analog Manual Scan**: Manual ATV search station. After input the frequency point, you can select up or down search station.

## Antenna(Antenna)

1. Menu->Settings->Channel->Channels.

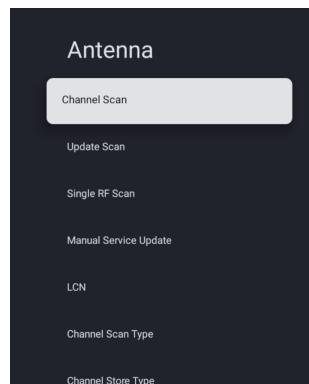

2. Enter Menu->Settings->Channel->Channels.



3. Channel Scan directly enters the DTV automatic search platform interface of Antenna.

**Update Scan**: Re-automatically search for frequency points outside the station.


**Single RF Scan**: DTV manual search, left and right after selecting RF Channel, directly **OK** search.



# OPERATING INSTRUCTIONS

## Antenna(Cable)

1. Menu->Settings->Channel & Inputs->Antenna-> Channels.

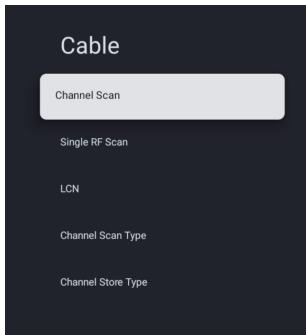

2. Enter Menu->Settings->Channel->Channels-> Channel Scanc.




3. Enter Channel Scan, where Akado, Divan TV, Online and Rostelecom (SPB)are the local operators, and the default Scan Mode is Advance; Others have Advance, Quick and Full Scan modes.

**Single RF Scan:** manual search station.


## Antenna(Satellite)

1. Menu->Settings->Channel->Channels.

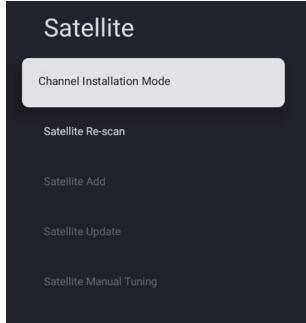

**Channel Installation Mode:** Press ▲/▼ button to select Preferred Satellite/General Satellite.

2. Enter Menu->Settings->Channel->Channels-> Satellite Re-scan.

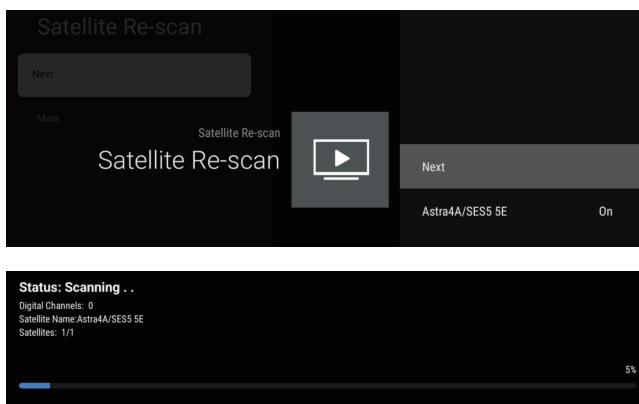


3. Press OK to enter Satellite parameter Settings, which include LNB POWER,LNB Frequency, DiSEqC Set, 22K and other parameters. Then return to Satellite re-scan and right click to enter the search menu.Then return to Satellite re-scan and right click to enter the search menu.

**Satellite Add:** Add a star broadcast signal.

**Satellite Manual Tuning:** manually search for a certain TP which can be added by Satellite Add if needed.

## Inputs

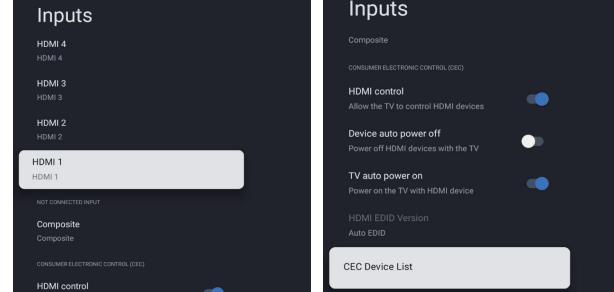

**Inputs** - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**HDMI control** - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**Device auto power off** - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.


**TV auto power on** - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**HDMI EDID Version** - show EDID version.


**CEC Device List** - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

## Display & Sound

Press ▲/▼ button to select "Display & Sound" set.

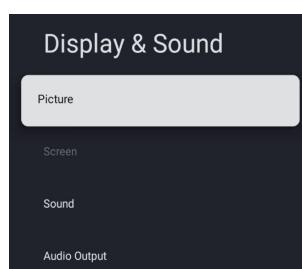

## Picture

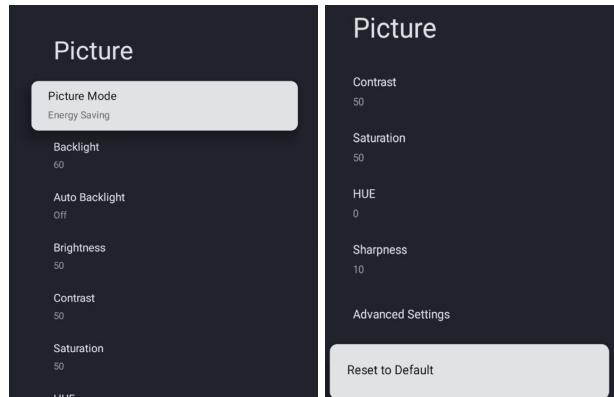

# OPERATING INSTRUCTIONS



**Picture Mode** - Press **▲/▼** button to select the option button to enter the sub-menu.(Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

**Backlight/Brightness/Contrast/Saturation/HUE/ Sharpness** - Press **▲/▼** button to select the option. Press **◀** to decrease the parameter. Press **▶** to increase the parameter.

**Auto Backlight** - Press **▲/▼** button to select the ON/OFF.

**Advanced Video** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu. Reset to Default-Reset all settings to the factory defaults.

## Sound

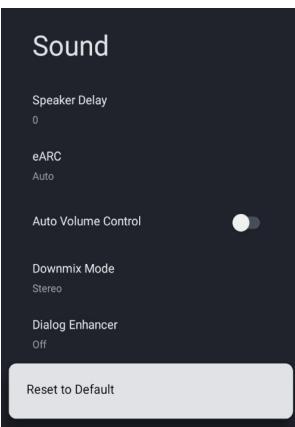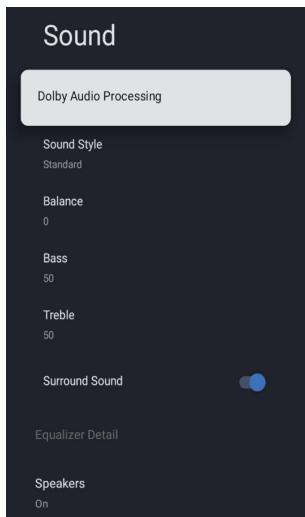

**Dolby Audio processing** - Press **▲/▼** button to select the option then press OK button to choose ON/OFF.

**Sound style** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.(Optional: user, Standard, Night, Sports, Movie, Music, News).

**Balance/Bass/Treble** - Press **▲/▼** button to select the option. Press **◀** to decrease the parameter. Press **▶** to increase the parameter.

**dbx-tv** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.

**Sound Surround** - Press **▲/▼** button to select the option then press OK button to choose ON/OFF.

**Equalizer Detail** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.

**Speakers** - Press **▲/▼** button to select the option then press OK button to choose Auto/OFF.

**Speaker Delay** - Press **▲/▼** button to select the option. Press **◀** to decrease the parameter. Press **▶** to increase the parameter.

**eARC** - Press **▲/▼** button to select the option, then press OK button to choose Auto/OFF.


**Auto Volume Control** - Press **▲/▼** button to select the option then press OK button to choose ON/OFF.

**Downmix Mode** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.(Optional: Stereo, Surround).

**Dialogue Enhancer** - Press **▲/▼** button to select the option then press OK button to choose Off/Low/Medium/High.

**Reset to Default** - Reset all settings to the factory defaults.

## Audio Output

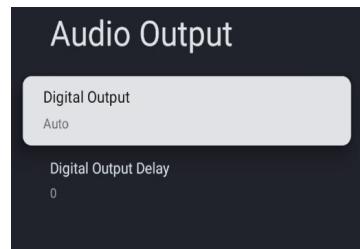

In this menu, you can read the information and settings of Audio Output.


1. Press **▲/▼** button to select what you want set.  
2. Press OK button to adjust.

3. After finishing your adjustment, Press BACK button return to the previous menu.


**Digital Output** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.(Optional: Auto, Bypass, PCM Dolby Digital Plus, Dolby Digital).

**Digital Output Delay** - Press **▲/▼** button to select the option. Press to decrease the parameter. Press to increase the parameter.

## Accounts & Sign in

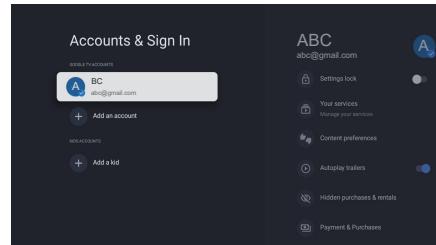

## Privacy

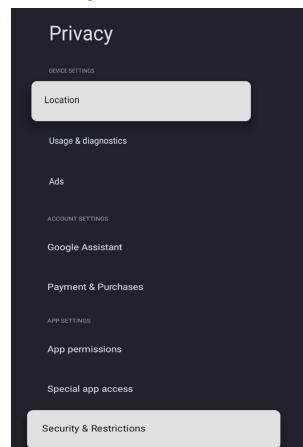


In this menu, you can read the information and settings of Privacy.

1. Press **▲/▼** button to select what you want set.  
2. Press OK button to adjust.  
3. After finishing your adjustment, Press BACK button return to the previous menu.

# OPERATING INSTRUCTIONS


## Apps

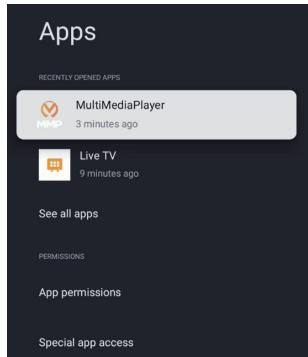


In this menu, you can set the APP permissions, and read the app lists.

1. Press **▲/▼** button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **BACK** button to return to the previous menu.

## System

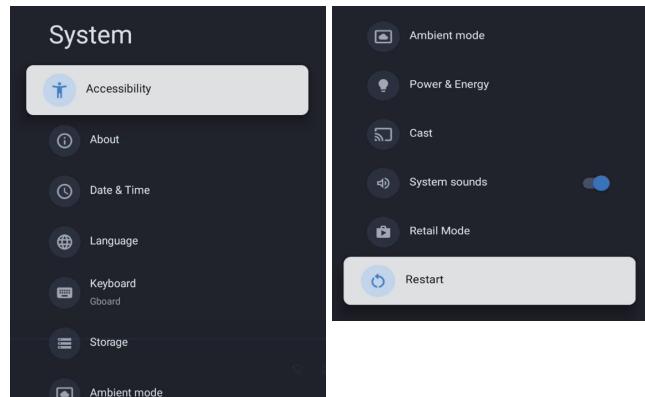

## Accessibility

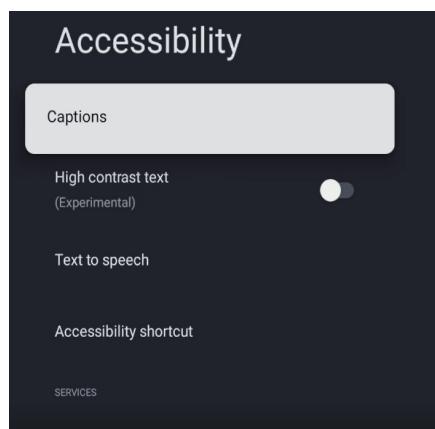

**Captions** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.


**High contrast test** - Press **▲/▼** button to select the option then press **OK** button to choose ON/OFF.

**Text to speech** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Accessibility shortcut** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.


**SERVICES** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

## About

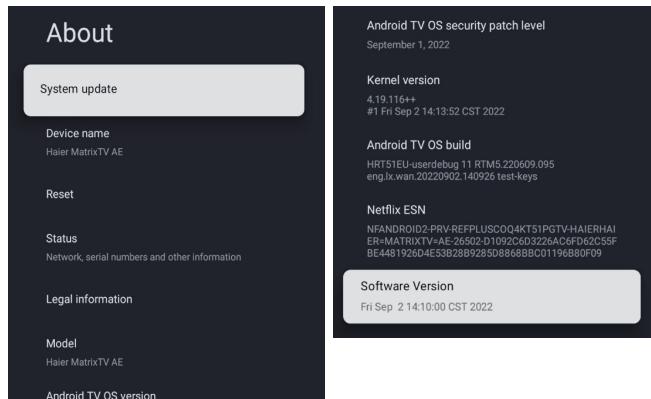

In this menu, you can System update, Factory reset and read the information of TV.

## Date & Time

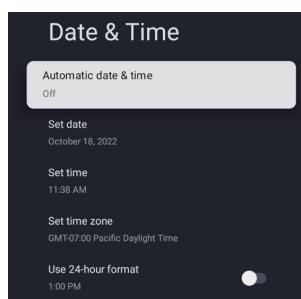

**Automatic date time** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu. (Optional: Use network-provided time, Off)

### NOTE

• Manually adjusting date time settings will automatically change the Automatic date time to OFF.


**Set date** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Set time** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Set time zone** - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Use 24-hour format** - Press **▲/▼** button to select the option then press **OK** button to choose ON/OFF.


## Language

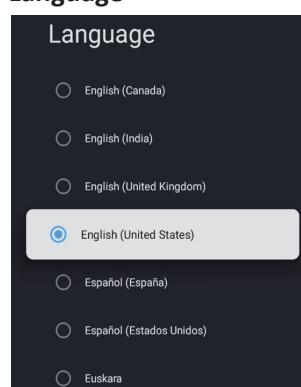

**Language** - Press **▲/▼** button to select the option then press **OK** button to enter the select language.

# OPERATING INSTRUCTIONS

## Keyboard

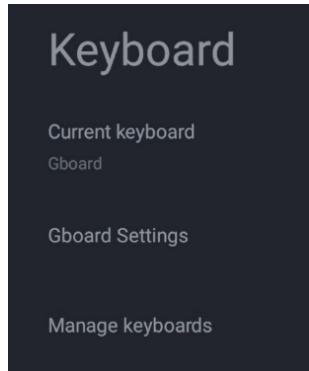


**Current keyboard** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.

**Gboard Settings** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.

**Manage keyboards** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.


## Storage

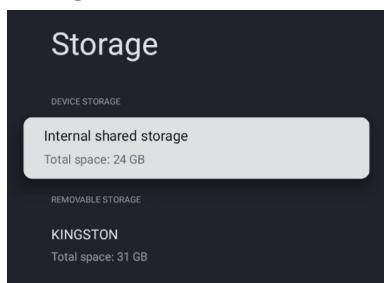

**Internal shared storage** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.

**KINGSTON** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.

## Ambient mode

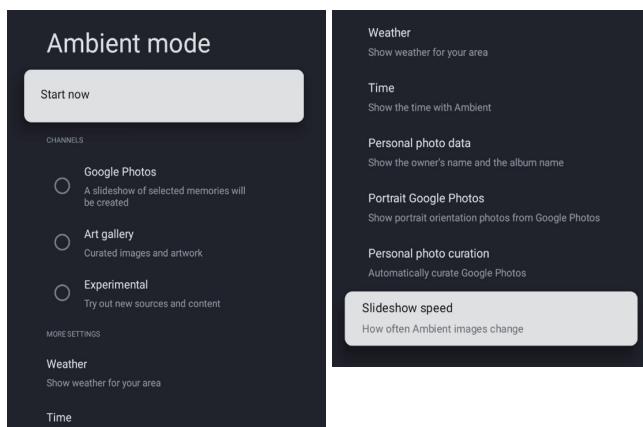

In this menu, you can read the information and settings of Ambient mode.

1. Press **▲/▼** button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, Press BACK button return to the previous menu.


## Power & Energry



In this menu, you can set Power on behavior, Energy saver, Power, Timer.


1. Press **▲/▼** button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, Press BACK button return to the previous menu.

## Cast

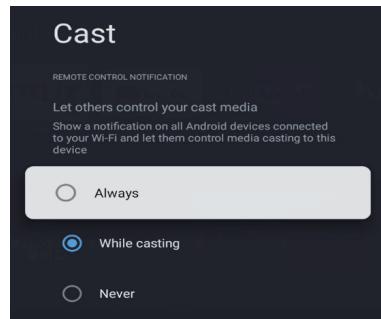


Press **▲/▼** button to select the option then press OK button to choose Always/While casting/Never.

## System sounds

 

Press **▲/▼** button to select the option then press OK button to choose ON/OFF.

## Retail Mode

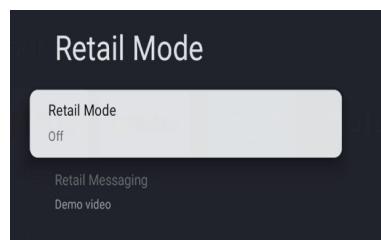


**Retail mode** - Press **▲/▼** button to select the option then press OK button to choose ON/OFF.

**Retail messaging** - Press **▲/▼** button to select the option then press OK button to enter the sub-menu.  
(Note: Demo video, e-POP left, e-POP bottom)




# OPERATING INSTRUCTIONS

## Factory reset

Press OK button to enter the sub-menu. Reset-Erase everything.

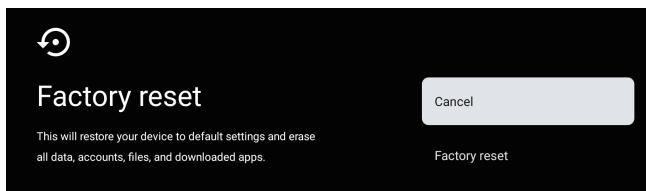



## Remotes & Accessories

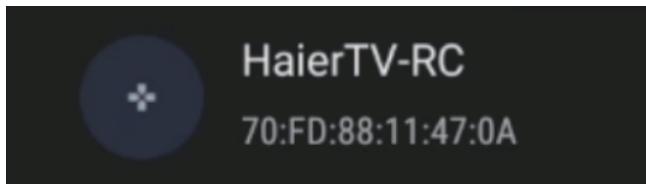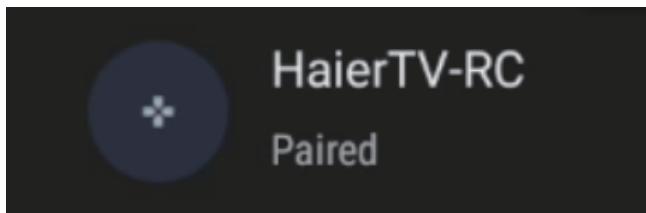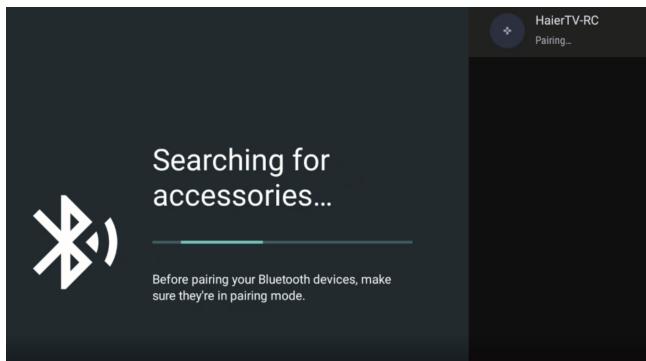


In this menu, you can pair Bluetooth devices.

1. Press the "←" and "TV" buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.
3. Press the OK button to display the pairing. If the paired is displayed, the connection is successful.
4. If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the "←" and "TV" buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
5. Press "←" button return to the previous menu.

## ADD AND USE OF MULTI MEDIA PLAYER

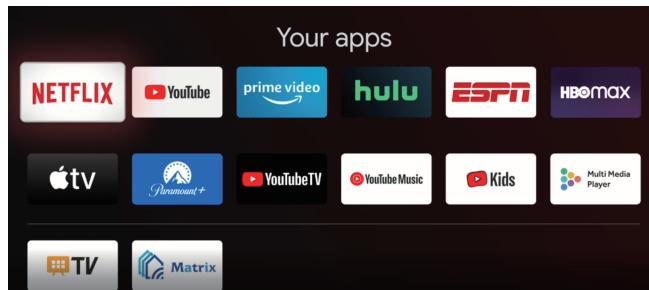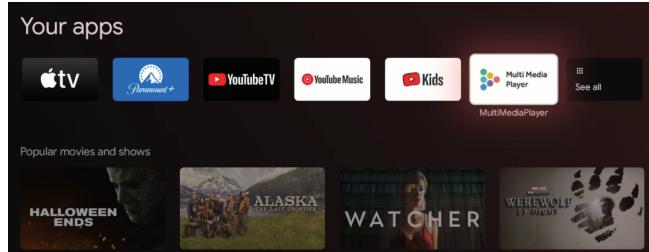

1. In the HOME interface, select the icon in the APP column to add the application, and click OK. Press up and down to select the MultiMediaPlayer application, and click OK to add it to the HOME interface.

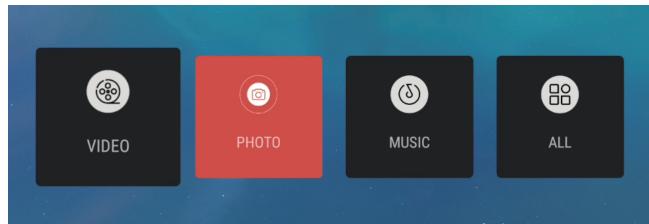


2. Select OK key to enter Multi Media Player and display Video, Photo, Audio. After inserting the USB flash drive, you can view the corresponding files in the USB flash drive (FAT32 Format).

### NOTE


The menu may be different depending on when you purchased the TV.

# HANDS FREE VOICE CONTROL

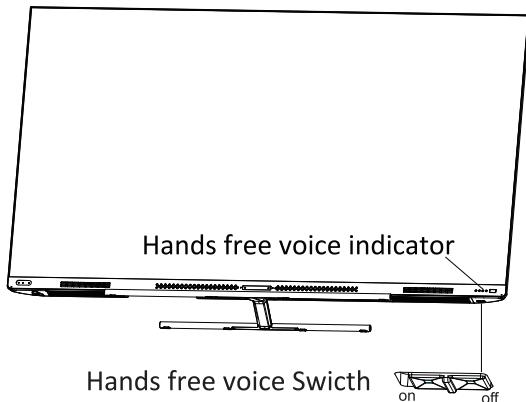

Switch to the left to open the Hands free Voice Control, and to the right to close.

1. Move the switch toward the center of the screen.  
(Open by default)

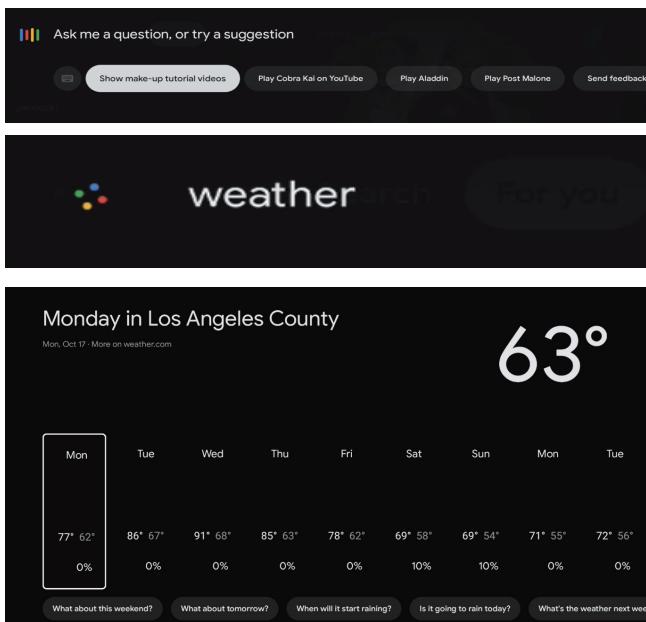

2. Operate the remote control and click the microphone icon. Select settings Google assistant, and select sign in or use assistant without sign in—Allow

3. Continue to click the microphone icon to conduct voice interaction through the wake-up word "Ok Google".

4. Click the microphone icon again. When the prompt "Google assistant is not ready!" is prompted, the system starts the voice module. After the prompt disappears, it can be used. For example, when we say "Ok Google, weather", Hands free voice indicator will light up and feed back the weather conditions.

## NOTE

- This feature requires network support. When the network fails or is restricted, try manually setting the current network date and time.

### 5. Supported Far Field Assistant locales

en-US/es-US, fr-FR, es-ES, ja-JP, ko-KR, de-DE, it-IT, en-GB, en-AU, en-IN/hi-IN, en-CA/fr-CA, es-MX, pt-BR, id-ID, sv-SE, vi-VN

## TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	<ul style="list-style-type: none"><li>This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.</li></ul>
No power	<ul style="list-style-type: none"><li>Check if the TV's AC power cord is plugged into the outlet.</li><li>Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.</li></ul>
No picture	<ul style="list-style-type: none"><li>Check antenna connections at the rear of the TV to see if it is properly connected to the TV.</li><li>Possible broadcast station trouble. Try another channel.</li><li>Adjust the contrast and brightness settings.</li><li>Check the Closed Captions control. Some TEXT modes could block the screen.</li></ul>
Good picture but no sound	<ul style="list-style-type: none"><li>Increase the volume level by pressing the <b>VOL+</b> button on the remote control or on the TV side control panel.</li><li>Press the <b>MUTE</b> button on the remote control to ensure mute is off.</li></ul>
Good sound but poor color	<ul style="list-style-type: none"><li>Adjust the contrast, color and brightness settings.</li></ul>
Poor picture	<ul style="list-style-type: none"><li>Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.</li></ul>
Snowy picture and noise	<ul style="list-style-type: none"><li>Check the antenna connection.</li></ul>
Horizontal dotted line	<ul style="list-style-type: none"><li>This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.</li></ul>
Television not responding to remote control	<ul style="list-style-type: none"><li>Check whether the batteries are working. Replace if necessary.</li><li>Clean the remote control sensor lens on the TV.</li><li>You can still use the buttons on the side of your TV.</li></ul>
Pixels (dots) that are always dark or always lit	<ul style="list-style-type: none"><li>Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.</li></ul>

### NOTE

- This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2021 Dolby Laboratories. All rights reserved.

## PRODUCT SPECIFICATION

### 55" UHD Android LED TV

<b>Television picture quality:</b>	UHD Integrated digital. Screen Size: 139 cm Resolution 3840x2160 pixels 120Hz.
<b>TV System:</b>	PAL-B/G,SECAM-B/G
<b>DTV Tuner Decoder</b>	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
<b>Connectivity:</b>	1 Optical port 2 USB ports 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF sockets 1 EARPHONE port 1 CI slot Supported Systems:PAL+SECAM TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS HDMI Video Input: 480i, 480p, 720p, 1080i, 1080p,2160p WiFi : Standard: IEEE 802.11a/b/g/n/ac ,Frequency: 2.4GHz/5GHz Bluetooth:V5.1
<b>Sound quality:</b>	Stereo sound system. 2x13.5 watts RMS power output. dbx-tv
<b>Standby Power consumption</b>	≤0.5W
<b>Digital features:</b>	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
<b>Additional features:</b>	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). VESA Mount Size: 200x200 mm Package Size (WxHxD): 1360x860x150mm Set Size (WxHxD) with Stand: 1229x782x255mm Set Size (WxHxD) without Stand: 1229x730x68mm Package weight :17.4 kg Set weight with stand: 15.2kg Set weight without stand: 14.0kg

\* The part specifications of this TV set provided here are for reference only.  
Differences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

## PRODUCT SPECIFICATION

### 65" UHD Android LED TV

<b>Television picture quality:</b>	UHD Integrated digital. Screen Size: 165cm Resolution 3840x2160 pixels 120Hz .
<b>TV System:</b>	PAL-B/G,SECAM-B/G
<b>DTV Tuner Decoder</b>	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
<b>Connectivity:</b>	1 Optical port 2 USB ports 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF sockets 1 EARPHONE port 1 CI slot Supported Systems:PAL+SECAM TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS HDMI Video Input: 480i, 480p, 720p, 1080i, 1080p,2160p WiFi : Standard: IEEE 802.11a/b/g/n/ac ,Frequency: 2.4GHz/5GHz Bluetooth:V5.1
<b>Sound quality:</b>	Stereo sound system. 2x13.5 watts RMS power output. dbx-tv
<b>Standby Power consumption</b>	≤0.5W
<b>Digital features:</b>	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
<b>Additional features:</b>	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). VESA Mount Size: 400x200 mm Package Size (WxHxD):1610x1005x175 mm Set Size (WxHxD) with Stand: 1448x906x295mm Set Size (WxHxD) without Stand: 1448x851x68mm Package weight : 25.85kg Set weight with stand: 19.7kg Set weight without stand: 18.4kg

\* The part specifications of this TV set provided here are for reference only.  
Differences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

# Haier

美工资料		HKC 惠利股份有限公司 HKC Corporation Limited			
料号	280201033110	物料名称	英文说明书	版本	V0
国家/订单	Ru	工厂型号	55/65VX PRO	客户型号	55 65 Smart TV S7
规格	142x205mm	比例	1:1	客户品牌	HAIER
设计	Thomas Chang	核准		日期	18 DEC 2022
材质	80g书写纸 黑白印刷 骑马钉				
备注说明					