

USB Flash Drive Clé USB Флэш-накопитель USB USB флеш жетегі

Operating Instructions/Mode d'emploi/Bedienungsanleitung/Manual de instrucciones/Istruzioni per l'uso/Manual de instruções/Gebruiksaanwijzing/Instrukcja obsługi/Návod k obsluze/Használati útmutató/Návod na obsluhu/Kullanma kılavuzu/Посібник з експлуатації/Инструкция по эксплуатации/Пайдалану нұсқаулығы/Οδηγίες λειτουργίας/Kasutusjuhend/Ekspluatācijas instrukcijas/Lietošanas instrukcijas/Bruksanvisning/Navodila za uporabo/Bruksanvisning/Betjeningsvejledning/Käyttöohjeet/Instrucțiuni de utilizare/Инструкции за експлоатация/Уpute za rad/Упутство за употребу/Упатство за употреба

MICROVAULT™
© 2013 Sony Corporation Printed in Taiwan
Отпечатано в Тайване
Тайваньда басып шығарылған

USM-R Series
USM-R Séries
USM-V Series
USM-V Séries
USM-W Series
USM-W Séries

Operating Instructions can be downloaded from the website.
http://www.sony.net/Products/Media/Microvault/support/

WARNING
Keep away from children. If swallowed, promptly see a doctor.
To reduce fire or shock hazard, do not expose the unit to rain or moisture.
To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
For Customers in Europe
This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.
Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)
This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Basic Operation
Be careful when handling the device after extended periods of use as the surface may be hot.
If the device is not recognized by the computer or host device you are using, remove the device, shutdown or restart your computer or host device, and try plugging the device again.
Installing:
Plug the device into the USB port on your computer to play.
Disconnecting:
Please remove the device properly following the proper procedure depending on the OS. Otherwise, data may not be recorded correctly.
LED Indicator: (for USM-R-Series customers)
During the data transfer is in progress, the indicator light is flashing. Please do not remove the device while flashing.
It is strongly recommended that you periodically back up the data written on the unit.
Sony Corporation assumes no liability for any damage or loss of data that may occur.
• Micro Vault is a trademark of Sony Corporation.

