


B220 - M175/M185/M220

Setup Guide

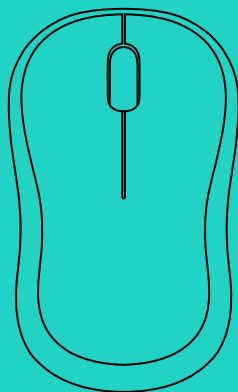

logitech®




Important
Information

logitech


LANGUAGES

English	5	Česká verze	20
Deutsch	6	Slovenčina	21
Français	7	Українська	22
Italiano	8	Eesti	23
Español	9	Latviski	24
Português	10	Lietuvių	25
Nederlands	11	Български	26
Svenska	12	Hrvatski	27
Dansk	13	Srpski	28
Norsk	14	Slovenščina	29
Suomi	15	Română	30
Ελληνικά	16	Türkçe	31
По-руски	17	32	العربية
Po polsku	18	33	עברית
Magyar	19		


1

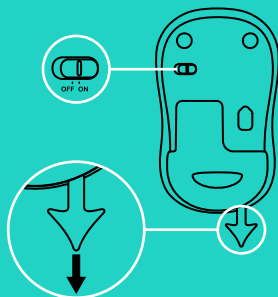

2

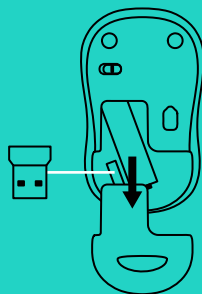


3

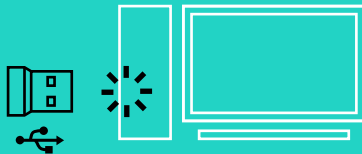

www.logitech.com/support/b220
www.logitech.com/support/m175
www.logitech.com/support/m185
www.logitech.com/support/m220

ФУНКЦИИ МЫШИ

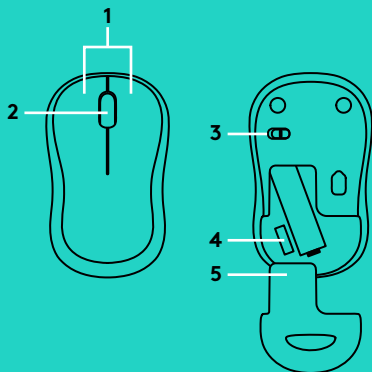

1. Левая и правая кнопки
2. Колесико прокрутки
Нажмите колесико для щелчка средней кнопкой мыши.
Функция может изменяться в зависимости от программы.
3. Ползунковый выключатель
4. Фиксатор крышки батарейного отсека
5. Отсек для хранения USB-наноприемника

УСТРАНЕНИЕ НЕПОЛАДОК

Мышь не работает

- Включена ли мышь?
- Надежно ли подключен приемник к USB-порту?
Попробуйте сменить USB-порт.
- Если приемник подключен к USB-концентратору, попробуйте подключить его непосредственно к USB-порту на компьютере.
- Проверьте правильность расположения батареи мыши.
- Попробуйте работать на другой поверхности. Уберите металлические предметы, расположенные между мышью и приемником.
- Попробуйте подключить приемник к ближайшему к мыши USB-порту.
- Если установлена операционная система Windows®, подключите мышь к приемнику еще раз, воспользовавшись утилитой Connect с сайта www.logitech.com/connect_utility

© 2016 Logitech. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

621-000024.002