封面　　封底

【封面、封底背面不印内容（空白）】

Product
User Manual

oclean

Y10002948

目录

English 2
Français 4
Deutsch 6
Italiano 8
Español 10
한국어 12
Русский 13
Polski 15
Português 17
Lietuvių 19
Svenska 21
Suomi 23
Norsk 24
Dansk 26
Čeština 28
українська 30
magyar 31
Ελληνικά 33
العربية 35
Nederlands 36
Srpski 38
Română 40
Slovenčina 42
Slovenščina 43
Hrvatski 45
български 47
Türkçe 49
Latvian 50
Estonian 52
עברית 54
繁体中文 55
日本語 56
Shqip 58
Қазақша 60

English　French　German　意大利语　西班牙语　韩语　俄语　波兰

Oclean Smart Sonic Electric Toothbrush

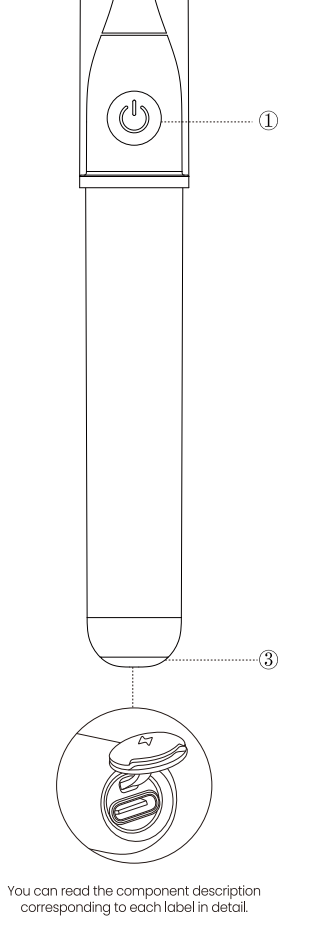

You can read the component description corresponding to each label in detail.

English

Thank you for using the Oclean electric toothbrush

Important safety tips

1. Children over 8 years of age and above and persons with physical, sensory or intellectual defects, or without experience and knowledge may use the appliance under the supervision or guidance of the safe use and aware of the hazards. Children are not allowed to play with this appliance. Children shall not perform cleaning and user maintenance without supervision.
2, this product can only use Oclean special brush head, will not bear all the consequences of non-certified third party brush head.
3. This product is only personal cleaning products and is not recommended for medical use.
4, this product is only for indoor use, do not be placed in the direct sunlight area, it is recommended to be put in the room temperature dry ventilation place.
5. Please keep the body dry before charging, dry with soft cloth, and clean the charging interface with dry cloth regularly to prevent stains from deposition.
6. The appliance can only be supplied at the safety ultra-low voltage corresponding to the sign on the appliance.
7. Do not expose the device or battery to too high temperature. The normal temperature range of battery charging is 0 to 45 degrees.
8. Pay attention to the battery power supply equipment or battery terminals do not be touched by metal objects to avoid the risk of short circuit.

Brush head

When replacing the brush head, please pull out or insert vertically, do not rotate left or right

Dentists recommend changing the brush head once every 2 to 3 months

Oral sensitive patients, such as the following circumstances should pay attention to

People who have just had oral and periodontal surgery or are undergoing treatment.

People with other symptoms in the mouth, including weak dentures or persistent massive bleeding from their gums.

Other oral cavity sensitive and vulnerable populations, etc.

Use of this product is not recommended, or to consult a professional dental practitioner before use.

This product is not suitable for the disabled, mentally ill or lack of relevant experience [including children (0-12 years old)]. Unless used under the supervision of their guardian.

Machine Detailed parts introduction

① **Switch & Mode Button:** Short press the button to turn on the toothbrush. Press the button lightly within 5 seconds to switch modes. The corresponding light of the mode will remind you to breathe. After 5 seconds, the corresponding light of the mode will be on. Short press the button again to turn off the toothbrush.

Mode 5:

- In sensitive mode, the mode corresponds to a light pink light.
- In cleaning mode, the mode corresponds to a blue light.
- In deep cleaning, the mode corresponds to a purple light.
- In whitening mode, the mode corresponds to a white light.
- In massage mode, the mode corresponds to a light green light.

② **Dust cover:**

- Remove the dust cover to cover the brush head to prevent dust.

③ **Type C charging port**

Brushing your teeth healthily

- Move the bristles at a 45 degree Angle and slowly move the toothbrush;
- During the process of brushing, the vibration effect of the toothbrush will have a short pause every 30 seconds, indicating that the brushing position should be changed;
- If there is no active pause, it will automatically turn down after brushing mode.

Charging method:

Wipe the bottom of the toothbrush dry before charging, and charge it with the Type C port at the bottom of the machine. The light flashes to indicate that it is charging. When the light is on, it means that the battery is fully charged, which usually takes 2 hours.

Low power reminder:

When the battery level of the toothbrush is less than 10%, the red light reminds you that it needs to be charged.

⚠

1. Do NOT dismantle, impact, squeeze or put into the fire.
2. If the product is seriously bulging, do not continue to use it.
3. Do NOT expose electrical appliances or batteries to too high temperatures.
4. The battery is prohibited after immersion.
5. Pay attention to the danger of short circuit of the terminal of the battery power supply appliance or the battery by the metal object.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CE Warning

1.the appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

2.children being supervised not to play with the appliance

3.Signal words WARNING, CAUTION, DANGER in uppercase having a height as specified : Uppercase letter of the text explaining the signal word not smaller than 1,6 mm : Moulded in, engraved, or stamped markings either raised above or have a depth below the surface of at least 0,25 mm, unless

4.This appliance contains batteries that are non-replaceable

Before discarding the product, the battery must be removed from the product according to the following steps:

1: Use pliers to cut the upper and lower shells.

2: Disassemble the upper and lower shells and remove the movement.

3: Use pliers to cut the battery wire, motor wire, Type C wire, and remove the PCBA board and battery.

-- Before discarding the device, the battery must be removed from the device;
-- When removing the battery, the device must be powered off;
-- The battery should be disposed of safely.

This device contains a non-replaceable battery. When the battery life ends or leaks, the device and battery must be disposed of properly.

- Product Specifications

Product Name	Oclean Ease Pro Sonic Electric Toothbrush
Product model	N1803
Rated input	5V⎓0.5A*
Rated input power	2.5W
Battery capacity	800mAh
Waterproof level	IPX7
Charging method	Type- C

*When charging, an adapter with an output of 5V⎓0.5A (the maximum power of the output is less than 15W) and in compliance with the requirements of IEC 60335-1 must be used for charging

Manufacturer: Shenzhen Yunding Information Technology Co., Ltd.

Manufacturer Address: 28G, Building 3, Dachong Business Center(Phase 3), No.18, Dachong 1st Road，Dachong Community, Yuehai Street, Nanshan District,Shenzhen City, Guangdong Province, China

EU REP
EU Authorized Representative
Agency Name: Mbrush UAB
European Address: Krokuvos str. 13, 09314 Vilnius, Lithuania
Email: service@mobalt.eu
Post Code: LT44237

FDA Registration Number: 3014246581

Made in China

R-R-yIT-N1803

IPX7

Français

Merci d'utiliser la brosse à dents électrique Oclean

Conseils de sécurité importants

1. Les enfants âgés de 8 ans et plus et les personnes ayant des déficiences physiques, sensorielles ou intellectuelles ou manquant dexpérience et de connaissances peuvent utiliser cet appareil à condition quils soient supervisés ou conseillés pour une utilisation sûre de cet appareil et quils comprennent ses dangers. Les enfants ne sont pas autorisés à jouer avec cet appareil. Les enfants ne doivent pas effectuer le nettoyage et lentretien de lutilisateur sans surveillance.
2. Ce produit ne peut utiliser que des têtes de brosse spéciales Oclean et ne supportera pas toutes les conséquences des têtes de brosse tierces non certifiées.
3. Ce produit est uniquement un produit de nettoyage personnel et nest pas recommandé à des fins médicales.
4. Ce produit est uniquement destiné à une utilisation intérieure. Ne le placez pas dans une zone exposée à la lumière directe du soleil. Il est recommandé de le placer dans un endroit sec et ventilé à température ambiante.
5. Veuillez garder le corps sec avant de charger, sécher avec un chiffon doux et nettoyer régulièrement linterface de charge avec un chiffon sec pour éviter le dépôt de taches.
6. Lappareil ne peut être alimenté quà une très basse tension sûre correspondant à la marque sur lappareil.
7. Ne pas exposer lappareil ou la batterie à une température excessive, la plage de température normale pour la charge de la batterie est de 0 à 45 degrés.
8. Faites attention à ne pas toucher les bornes des équipements alimentés par batterie ou des batteries par des objets métalliques pour éviter le risque de court-circuit.

Tête de brosse

Lorsque vous remplacez la tête de brosse, veuillez retirer ou

葡萄牙　立陶宛　瑞典　芬兰　挪威　丹麦　捷克　乌克兰

匈牙利　希腊语　阿拉伯语　荷兰　塞尔维亚　罗马尼亚　斯洛伐克　斯洛文尼亚　克罗地亚

保加利亚　土耳其　拉脱维亚　爱沙尼亚　希伯来语　繁体　日语　阿尔巴尼亚　哈萨克语

English　French　意大利语　西班牙语　波兰　俄罗斯　德国

版本	制作人	变更说明	日期
V1	陈梓丽	初版发行	20241228

Y10002948-N1 Pro-说明书（34国）-国际版

技术要求：

1.成型尺寸：65X220mm；

2.材质：封面封底100g书纸，内页58g书纸，胶装。

3.双面印刷 单黑 色彩准确，无套印不准等现象；

4.裁切整齐无毛边；

5.其他要求：产品需满足REACH法规及最新RoHS指令要求。
产品需满足欧可林《包装材料来料检验通用标准》。

6.公差：±1mm

7.标注单位mm

审批单位	审批内容	审批人	审批人签名/ 日期
认证	认证名称、型号及制造商地址与证书一致， 警示语合规，元素表正确等	认证负责人	
研发	电性能参数的正确性	硬件负责人	
产品	营销名称，功能说明， 翻译的正确性	产品负责人	宋侃 2025 1-23

包装设计 陈梓丽 20250205