AUDIO OUTPUT FROM
audio output from PC
USB port
② ①
Stereo 3.5mm connectors
USB power cable DC 5V
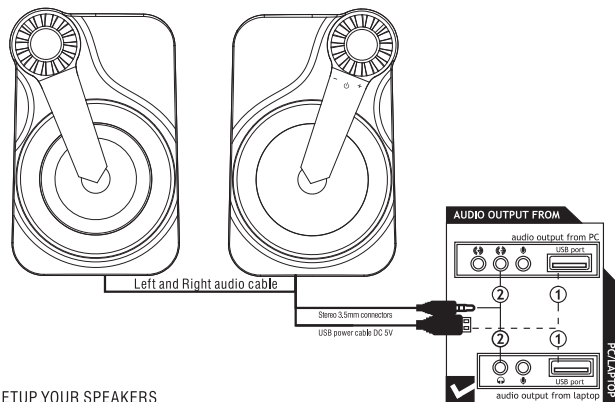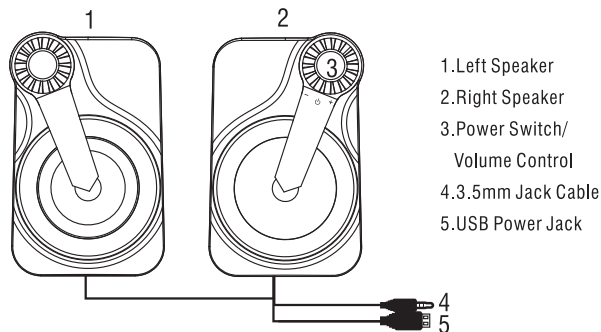② ①
USB port
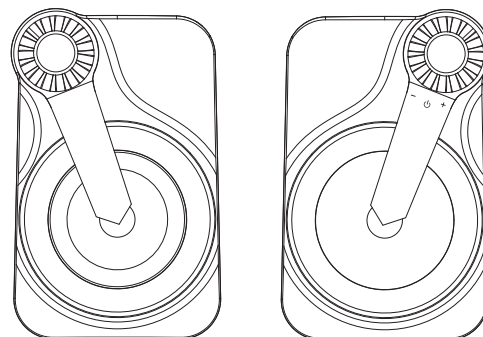audio output from laptop
PC/LAPTOP

Left and Right audio cable

SETUP YOUR SPEAKERS
1.To power on,plug in the USB power jack to any 5V USB slot.
2.Insert the 3.5mm stereo cable into your media device (e.g.media player,laptop,phone etc.)
3.Finally,the laptop will stop its own horn and show the sound through external speakers.
At this time, you will be able to clearly feel the wonderful performance of different voices.

FUNCTIONAL INDICATION

1.Left Speaker
2.Right Speaker
3.Power Switch/
  Volume Control
4.3.5mm Jack Cable
5.USB Power Jack

USER MANUAL

Specifications:
Drive Unit: 2.5"×2
Power Output (RMS): 3W x 2
Frequency Range: 60Hz-20KHz
Input Sensitivity：500mV
Separaticn：≧65dB
Plug: USB 5V +AUX 3.5mm
Power Supply: DC 5V/1A(USB)
Input: AUX
Product Size: W90×D86×H142mm