

Quick Guide

RMX5120

realme



The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.




This product is conformed to High-Resolution Audio standard defined by Japan Audio Society. The High-Resolution Audio logo is used under license from Japan Audio Society.

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.



Greetings from realme mobile

This guide briefly show you how to use the phone and its important functions. For more and detailed information of the phone and user guidance, please visit: www.realme.com/eu/support.

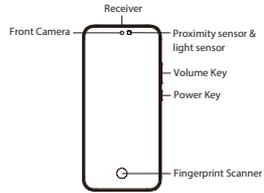

Warning

- Do not place the phone or battery near or inside heating equipment, cooking equipments, high pressure vessels (such as microwave ovens, induction cooker, electric oven, heater, pressure cooker, water heater, gas stove, etc.) to prevent the battery overheating which may lead to an explosion.
- The original charger, data cable and battery shall be used. Unapproved chargers, data cables, or batteries that are not certified by the manufacturer may result in electric shock, fire, explosion, or other hazards.
- Back cover can't be removed.

- When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with temperature ranging from 5°C--35°C.

How to reboot the phone

Press and hold the Power Button and Volume Up Button at the same time until the realme boot animation is displayed to reboot the phone.

How to Transfer Old Mobile Content to a New Mobile

You can use realme Clone Phone to easily transfer photos, videos, music, contacts, messages, apps, etc from your old phone to the new one.

- If you have an old Android phone, first scan the QR code below, then download and install Clone Phone, next open Clone Phone on both the new and old phones, and follow the on-screen instructions to complete the operation.



<https://i.clonephone.coloros.com/download>

- If you have an old iPhone, open Clone Phone on the new phone directly, and follow on-screen instructions to sign in to iCloud account and sync the files.

Standard accessories

- 1 Phone, 1 Charger, 1 USB data cable, 1 Safety Guide, 1 Quick Guide, 1 SIM Ejector Tool, 1 Protective Case.

Specification

Product	RMX5120
Main screen parameter	17.22cm(6.78")
Dimension	162.6×77.6×7.75(mm) 162.6×77.6×7.79(mm)
Battery	6830mAh/26.78Wh(Min) 7000mAh/27.44Wh(Typ)
Camera	200 Megapixels + 8 Megapixels Rear 50 Megapixels Front
Operating temperature	0°C-35°C
SAR Values	CE SAR <2.0W/kg(Head) <2.0W/kg(Body)

Radio Waves Specifications

Radio	Frequency	Max. Output Power
GSM	850MHz	33.3dBm
	900MHz	33.3dBm
	1800MHz	30.3dBm
WCDMA	1900MHz	30.3dBm
	Band 1/2/4/5/6/8/19	24.8dBm
	Band 1/3/20	24.6dBm
LTE FDD	Band 2/7/1	23.8dBm
	Band 4/12/13/17/26/66	24.3dBm
	Band 5/8/18/19/28	24.8dBm
	Band 7	24dBm
	Band 38/40/41/42/43/48	24.3dBm
LTE TDD	n1/n2/n5/n26/n28/n66	24.3dBm
	n3	24dBm
	n7	24.2dBm
	n8/n20	24.3dBm
	n38/n40/n41	23.8dBm
	n71	24.7dBm
	n77	24.7dBm
	n78	26.2dBm
Bluetooth	2.4-2.4835GHz	15.5dBm(EIRP)
2.4G Wi-Fi	2.4-2.4835GHz	18.5dBm(EIRP)
	5.15-5.25GHz	17.5dBm(EIRP)
5G Wi-Fi	5.25-5.35GHz	18dBm(EIRP)
	5.47-5.725GHz	18dBm(EIRP)
	5.725-5.85GHz	14dBm(EIRP)
	13.56MHz	42dBuA/m @10m

- عند الشحن، يرجى وضع الجهاز في بيئة ذات درجة حرارة غرفة عادية وتهوية جيدة. يوصى بشحن الجهاز في بيئة ذات درجة حرارة تتراوح بين 5 درجة مئوية و35 درجة مئوية.

كيفية إعادة تشغيل الهاتف:

اضغط مع الاستمرار على زر التشغيل وزر رفع الصوت في الوقت نفسه حتى يتم عرض الرسم المتحرك لتشغيل هاتف realme لإعادة تشغيل الهاتف.

كيف يمكنني نقل ما تم تخزينه على هاتفي القديم إلى هاتف جديد؟

يمكنك استخدام "استنساخ الهاتف" من realme لنقل الصور ومقاطع الفيديو وملفات الموسيقى و جهات الاتصال والرسائل والتطبيقات وما إلى ذلك بسهولة من هاتفك القديم إلى الهاتف الجديد. إذا كان لديك هاتف Android قديم فقم أولاً بفتح رمز الاستجابة السريعة أثناء، ثم قم بتزليل وثبيت التطبيق وبعد ذلك افتح "استنساخ الهاتف" على كل من الهاتفين الجديد والقديم و اتبع التعليمات الظاهرة على الشاشة لإكمال العملية.



<https://i.clonephone.coloros.com/download>

- إذا كان لديك هاتف iPhone قديم فافتح "استنساخ الهاتف" على الهاتف الجديد و اتبع التعليمات الظاهرة على الشاشة لتسجيل الدخول إلى حساب iCloud ومزامنة الملفات.

الملحقات القياسية

- سيتم تزويدك بالملحقات القياسية التالية: ١ هاتف، ١ شاحن، ١ أداة لإدخال وإخراج بطاقة SIM ١ كابل بيانات USB، ١ دليل أمان، ١ دليل سريع، ١ غطاء حماية.

خالص التحيات من الهاتف المحمول realme

سيظهر لك هذا الدليل كيفية استخدام الهاتف ووظائفه الهامة. يمكنك أيضاً زيارة موقع الويب الرسمي للهاتف realme للحصول على مزيد من المعلومات حول الهاتف.



تحذير:

- لا تضع الهاتف أو البطارية بالقرب من أجهزة التسخين أو الطبخ أو الأواني ذات الضغط العالي أو بداخلها (على سبيل المثال أفران الميكروويف والموقد الذي يعمل بالغاز والفرن الكهربائي والسخان والموقد الذي يعمل بالضغط وسخان المياه وموقد الغاز، وما إلى ذلك) وذلك لمنع سخونة البطارية بدرجة مفرطة مما قد يتسبب في حدوث انفجار.
- يُنصح باستخدام الشاحن والبطارية وكابل البيانات الأصليين. فقد تتسبب الشواحن أو كابلات البيانات أو البطاريات غير المعتمدة من الشركة المصنعة في حدوث صدمة كهربائية أو حريق أو انفجار أو مخاطر أخرى.
- الغطاء الخلفي لا يمكن نزعها.

مواصفات الموجات اللاسلكية

اللاسلكي	التردد	أقصى طاقة لإخراج
GSM	850MHz	33.3dBm
	900MHz	33.3dBm
	1800MHz	30.3dBm
WCDMA	1900MHz	30.3dBm
	Band 1/2/4/5/6/8/19	24.8dBm
	Band 1/3/20	24.6dBm
LTE FDD	Band 2/7/1	23.8dBm
	Band 4/12/13/17/26/66	24.3dBm
	Band 5/8/18/19/28	24.8dBm
	Band 7	24dBm
	Band 38/40/41/42/43/48	24.3dBm
LTE TDD	n1/n2/n5/n26/n28/n66	24.3dBm
	n3	24dBm
	n7	24.2dBm
	n8/n20	24.3dBm
	n38/n40/n41	23.8dBm
	n71	24.7dBm
	n77	24.7dBm
	n78	26.2dBm
Bluetooth	2.4-2.4835GHz	15.5dBm(EIRP)
2.4G Wi-Fi	2.4-2.4835GHz	18.5dBm(EIRP)
	5.15-5.25GHz	17.5dBm(EIRP)
5G Wi-Fi	5.25-5.35GHz	18dBm(EIRP)
	5.47-5.725GHz	18dBm(EIRP)
	5.725-5.85GHz	14dBm(EIRP)
	13.56MHz	42dBuA/m @10m

المواصفات الفنية

طراز المنتج	RMX5120
خصائص شاشة العرض الرئيسية	17.22 مم (6.78 بوصة)
الابعاد	162.6×77.6×7.75 (ملمتر) 162.6×77.6×7.79 (ملمتر)
البطارية	6830mAh/26.78Wh(Min) 7000mAh/27.44Wh(Typ)
الكاميرا	200 ميجابكسل + 8 ميجابكسل خلفية 50 ميجابكسل أمامية
درجة حرارة التشغيل	0°C-35°C
قيم SAR	CE SAR <2.0W/kg (رأس) <2.0W/kg (جسم)