


Tefal®

「X-PLOER SERIES 375+
X-PLOER SERIES 380+」

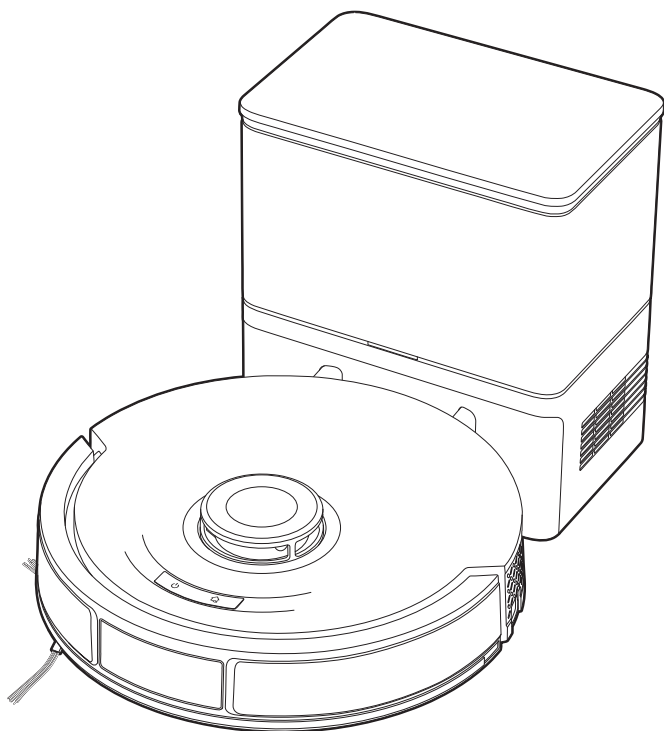

EN User's guide

p. 03

TH คู่มือผู้ใช้

p. 20

User's guide


1. What's in the box?	p. 04
2. Product overview	p. 04
3. Before use	p. 05
4. Install the robot	p. 05
5. Connect the robot to the free app	p. 07
6. Use the robot without the app	p. 08
7. Maintain the robot and the station	p. 09
8. Component replacement frequency	p. 16
9. Do's and don'ts	p. 16
10. Unpair the robot and delete personal data	p. 16
11. Common issues and solutions	p. 17

Please read carefully the "Safety and use instructions" booklet before first use.

For more information:
[**www.tefal.com**](http://www.tefal.com)


1. What's in the box?

EN

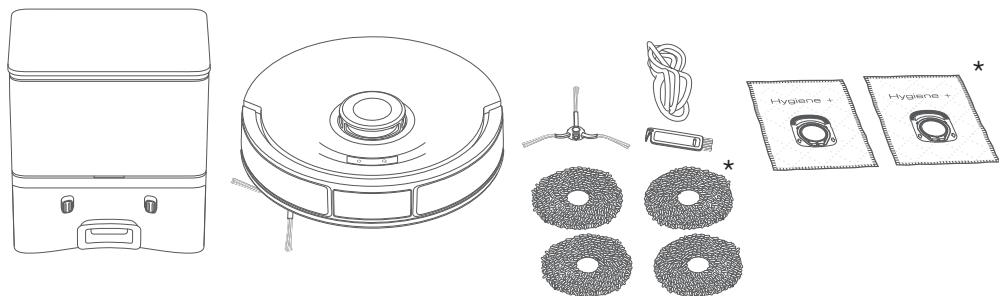

*depending on model

2. Product overview

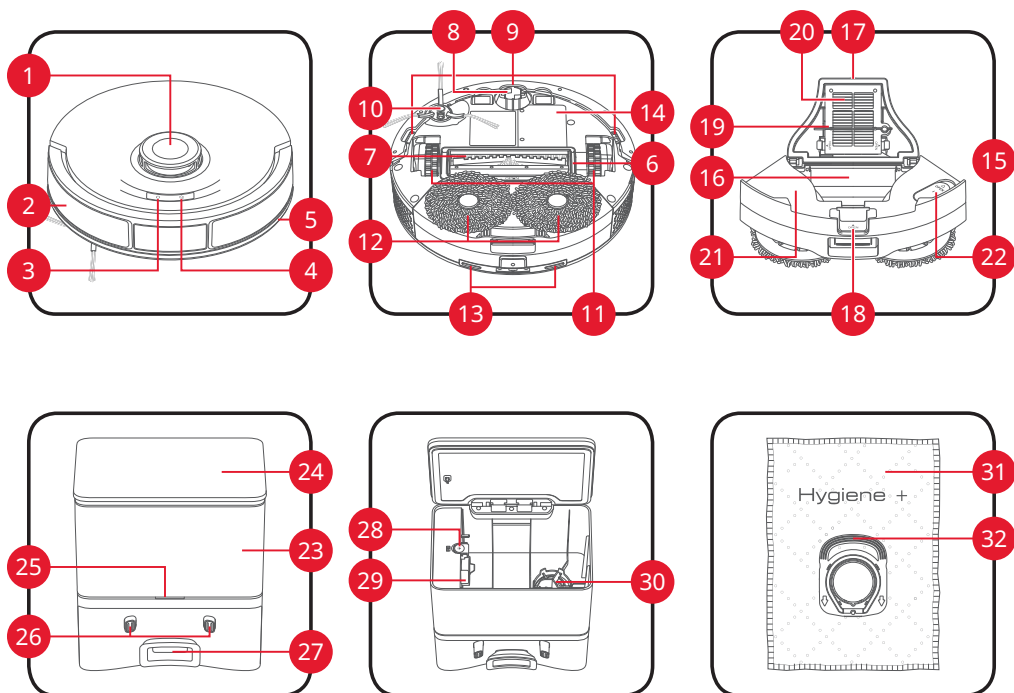

2. Product overview

EN

1. LiDAR
2. Bumper
3. Power/Start/Pause button
 - Press and hold to turn on or off
 - Press to start or pause cleaning
4. Home button
 - Press to return station
5. Anti-collision strip
6. Main brush cover
7. Main brush
8. Front wheel
9. Anti-drop sensors
10. Side Brush
11. Wheel
12. Spinning mops with magnetic holders
13. Charging contacts
14. Battery
15. 2-in-1 dust bin and water tank
16. Dust bin
17. Dust bin lid
18. Dust bin opening
19. Filter frame
20. Filter
21. Water tank
22. Stopper
23. Automatic dust collecting station
24. Station lid
25. Status light indicator
26. Charging contacts
27. Suction inlet
28. Eject button
29. Dust bag handle insertion slot
30. Dust bag chamber
31. Hygiene+ dust bag
32. Hygiene+ dust bag handle

3. Before use



Please read the following tips to improve cleaning efficiency. Tidy up cables, cords, small and loose items. Remove any unstable, fragile, precious or dangerous items from the ground. Make sure each room door is open. Your robot may encounter some difficulties on dark floors and on carpets: with fringes, too thick, with long piles, too light (ex: bathroom carpet). For optimum anti-drop sensors efficiency, remove any item (ex: shoe) from the stairs. When using the robot in a raised area, place a physical barrier at the edge of a drop to prevent accidental falls. Do not stand in narrow spaces, such as hallways so the robot is not blocked.

4. Install the robot







Flash the QR-Code above to know how to install and connect the robot in video. Read the following instructions for more detailed information.

<https://www.youtube.com/playlist?list=PL8Z0ZML7s661Qa45FKQ2Cmvc3Nkj5O76F>


4. Install the robot

EN

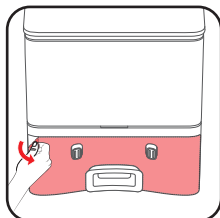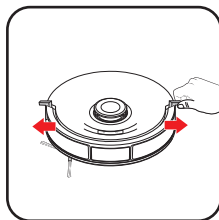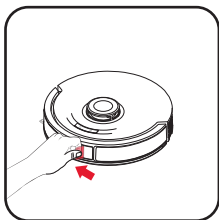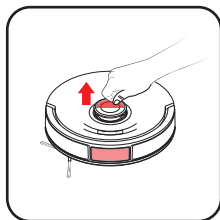


Remove the protections

Remove all protections (protective films and plastic foam protections) on the robot and on the station.

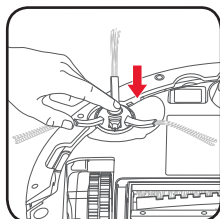


Install the side brush and the mops

Reverse the robot, install the side brush by gently clipping it. The side brush is correctly installed when you hear a click sound.

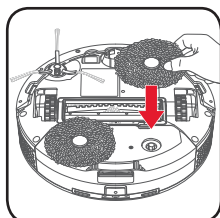





Install the two mops in the two magnetic holders. The mops are correctly installed when you hear a click sound.

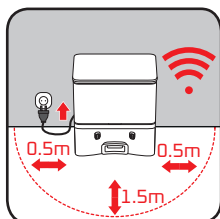

Install the station on a hard and flat floor. Avoid parquet, wooden floors and carpet. Place the station in a clear space against a wall, with no stairs in front of the station. Keep at least 0.5 m of clearance on either side and 1.5 m in front. Make sure the chosen location is close to the Wi-Fi box or has good Wi-Fi signal strength. Keep the area around the station clear from any object, reflective surface, mirror, table and chair. Keep the station away from direct sunlight. Plug the power cable to a power socket. Make sure the power cable remains tidy behind the station and against the wall.

4. Install the robot

EN

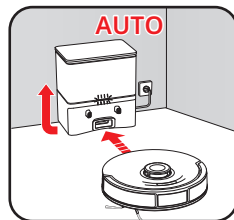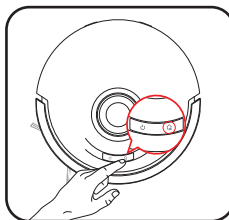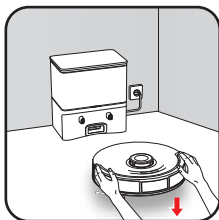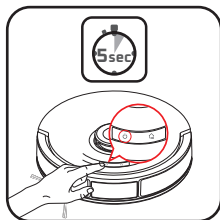

Turn on the robot

Turn the robot on by pressing and holding the ON-OFF button for few seconds until the robot lights turn on. You will hear a beep sound.

Place the robot in front of the station

Place the robot 20–50 cm in front of the station. Press the Home button, the robot will dock automatically to the station. (Do not place the robot manually against the station). Wait 4 hours for the robot to be fully charged. The station light is off when the robot is charging.

Informations

Please note that the robot will turn on automatically when placed in the station. The robot cannot be turned off when charging. Please note that for the first cleaning in a new environment, the robot will create the home map. Do not lift the robot during the first cleaning, it interrupts the map creation. Please make sure that mops are correctly installed before starting a cleaning session. Do not remove mops during cleaning. If you have carpets with fringes, please place barriers around carpets to prevent the robot from getting stuck in the fringes, it prevents the map creation. If you have an outdoor area (garden, balcony, patio, etc.) accessible with a threshold less than 2 cm high or without threshold (for example with a French window, a patio door, a bay window, etc.), please close this access so the robot doesn't go outside your home.

5. Connect the robot to the free app




On your smartphone, open the Google Play Store (Android) or App Store (iOS). Search for Tefal Robots or scan the QR-Code and install the application. Open the app and follow the on-screen instructions to connect your robot.

https://tefalrobots.smart.link/x0zckp7if?appliance_id=APPLIANCE_1247




You can also find the detailed pairing instructions step by step in a PDF document by flashing the QR-Code below.

https://dam.groupeseb.com/m/3fd9efa007195343/original/Rowenta_RR9695WH_IFU.pdf

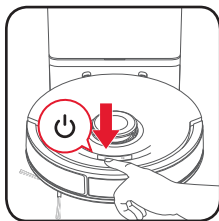


Start cleaning

Press the button "Power" to start automatic cleaning. The robot will scan the area. It will automatically split the room into small zones, first cleans zone edges and then cleans inside the zone in a zig zag. The robot will clean all accessible area, zone by zone. If the robot doesn't start when you press the button "Power", the battery level may be too low, please charge the robot.

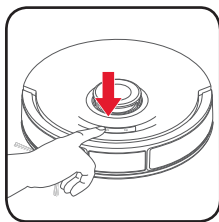


Pause and resume cleaning

Press the button "Power" at any time to pause cleaning and press it again to resume cleaning. If the robot is on standby, press the button "Power" once to wake up the robot and a second time to start cleaning.

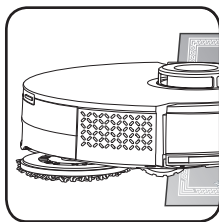

Robot behavior on carpet

If the robot has its rotating mops attached during cleaning, it will use its carpet sensor to detect carpets and avoid them to prevent getting them wet. Please note, you can also set a no-mop zone in the app to avoid carpets.

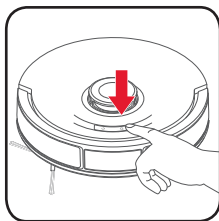

End cleaning

If you start the robot from the station, it will automatically return to its station at the end of the cleaning session or if the battery level is too low. If the battery runs low during the cleaning session, the robot will automatically return to its station to charge. After charging, the robot will resume cleaning where it left off. If the robot is not on its station when it starts cleaning, it will automatically return to its starting point at the end of the cleaning session or if battery level is too low. At the end of the cleaning session, the robot will automatically return to the station. But if you want to manually end the cleaning session, press the "Home" button once to stop the robot at any time and press it again to send the robot back to the station. If the robot fails to find the station, manually place the robot in front of the station and press the "Home" button. Once the robot is docked, the dust collection will be automatically activated for few seconds. Please note that the minimum time interval between two dust collections is 10 minutes.


Station's actions

At the end of the cleaning session, when the robot is docked, the station will automatically :

- recharge the robot's battery
- empty the robot's dust box










Flash the QR-Code to know how to maintain the robot to keep its performance.
Please unplug the station before any manipulation.

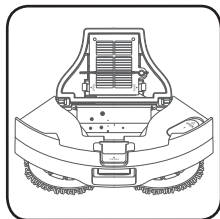

When needed - Clean the dust box








At the end of the cleaning session, the robot returns to its station and automatically empties the dust box, but some dirt may remain in the dust box.

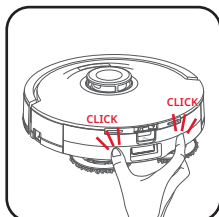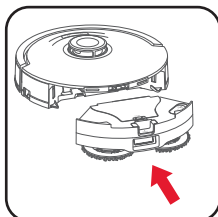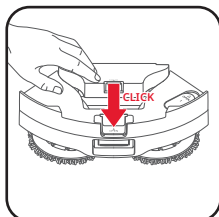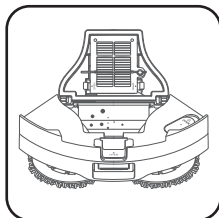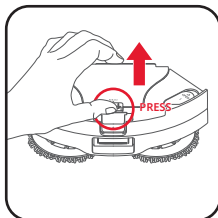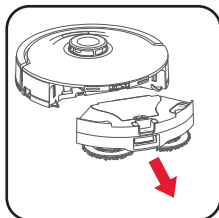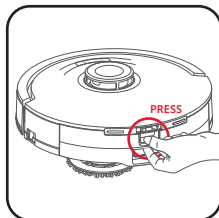

- Separate the 2-in-1 dust bin and water tank from the rest of the robot: press and hold its release buttons and pull it outwards.
- Press and hold the dust bin opening button to open the dust bin

- Empty the dirt into the bin
- Close the dust box
- Place it to its original position in the robot


After each use - Wash the mops

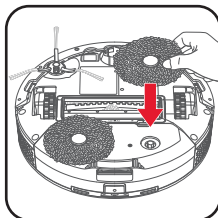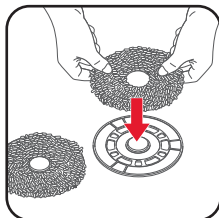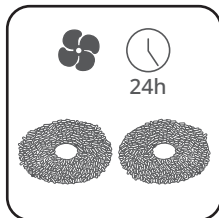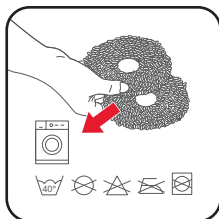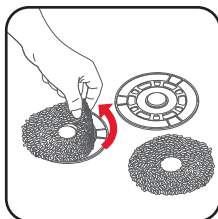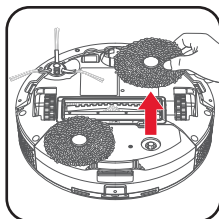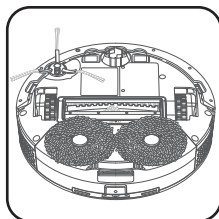

- Turn the robot upside down.
- Pull vertically the mops to remove them from the magnetic holders.
- Unscratch the mop clothes.
- Wash them under water or in the laundry machine at 40°C.


- Let them dry for 24 hours.
- Attach the mop clothes to the mop holder.
- Install the two mops in the two magnetic holders. Please make sure that mops are correctly installed before starting a cleaning session.

Once a week - Clean the filter

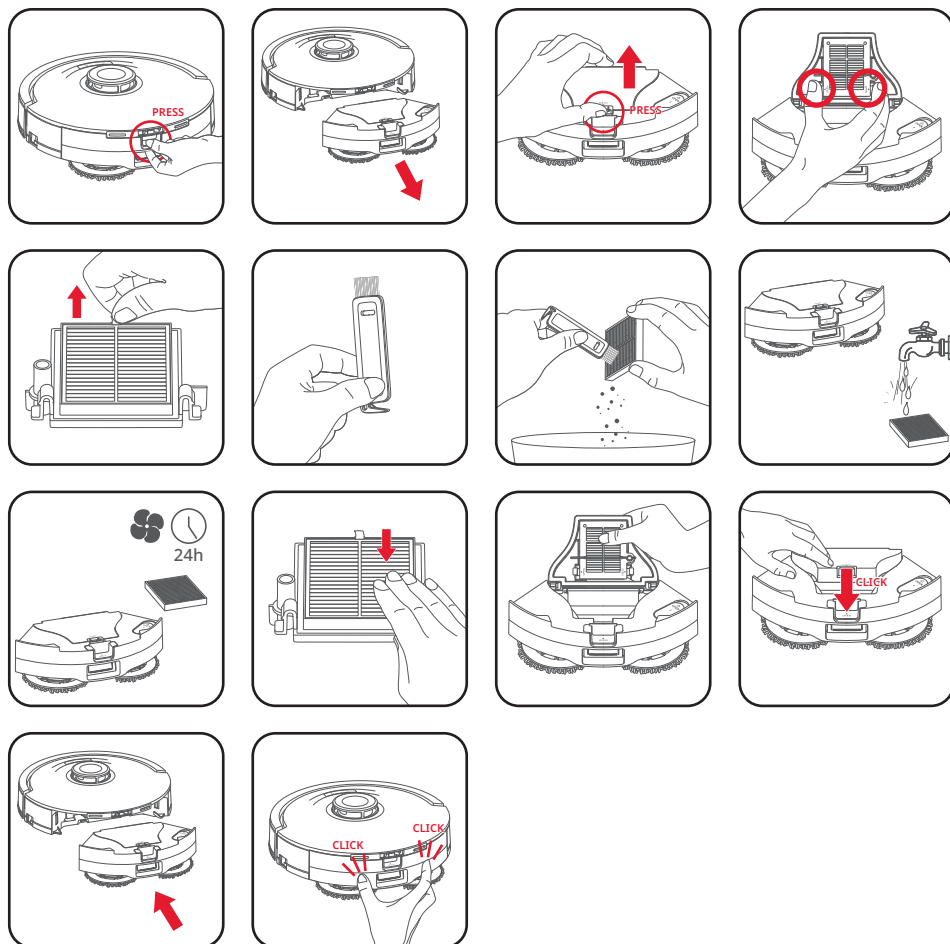

- Separate the 2-in-1 dust bin and water tank from the rest of the robot: press and hold its release buttons and pull it outwards.
- Press and hold the dust bin opening button to open the dust bin
- Grab the filter frame and pull to unclip it from the dust box
- Tap gently the filter above a bin to remove dust. You can use the cleaning tool provided in the packaging to remove dust. You can also wash the filter under water.
- Let it dry for 24 hours.
- Once the filter is fully dried, put it back to its original place. Never use the robot without the filter, it would damage the robot.
- Close the dust box
- Place it to its original position in the robot.







Once a week - Clean the main brush

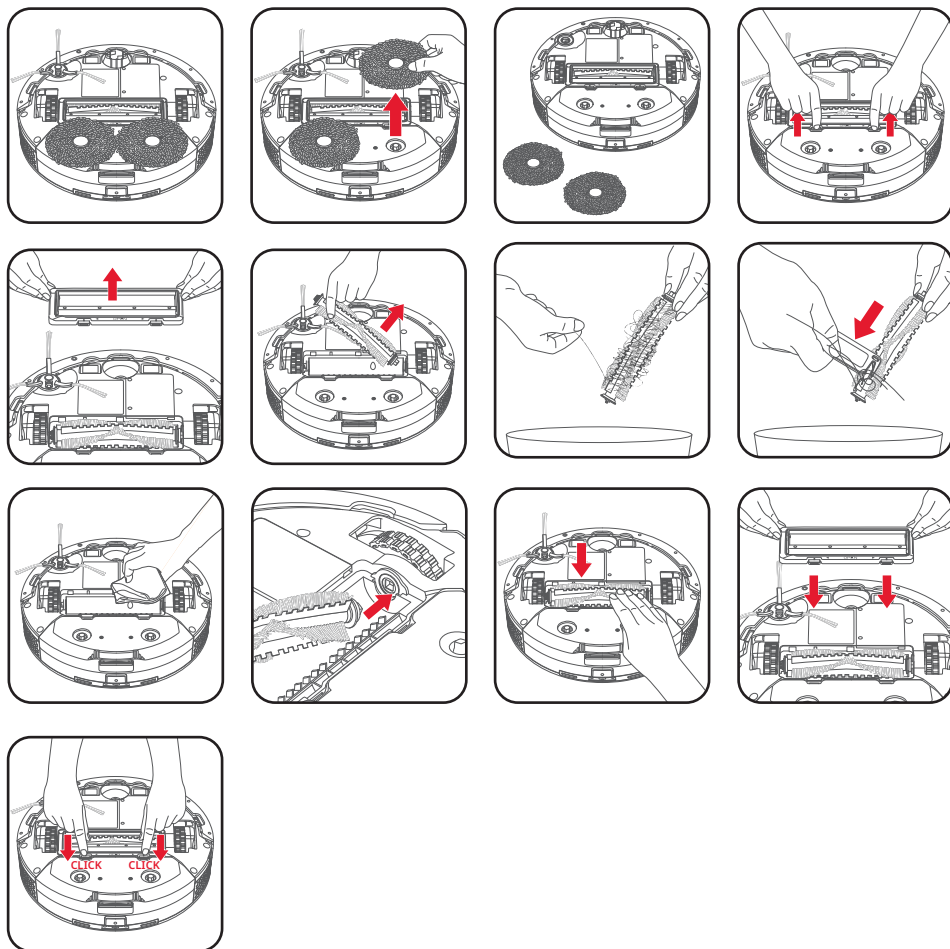

- Turn the robot upside down.
- Pull vertically the mops to remove them from the magnetic holders.
- Press the latches of the brush cover
- Pull to remove it
- Take out the brush
- Get rid of tangled hair. You can use the cleaning tool provided in the packaging to remove tangled hair.





- Clean the main brush compartment and the suction channel with a dry cloth
- Re-install the brush in the robot
- Re-install the brush cover.
- The cover is correctly installed when you hear a click sound.

Once a week - Clean the side brush

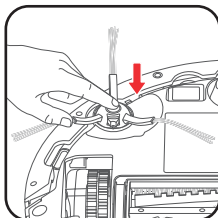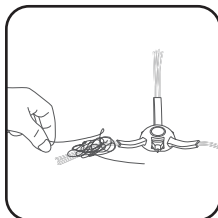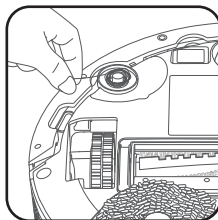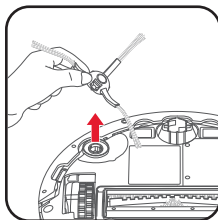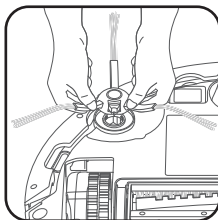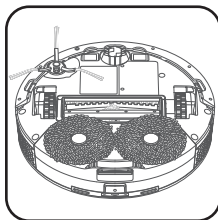



- Turn the robot upside down.
- Take the side brush with two hands by the plastic parts and pull to unclip it. Do not pull by the bristles of the side brush.
- Remove the tangled hair.
- Re-install the side by gently clipping it. The side brush is correctly installed when you hear a click sound.

Once a week - Clean the sensors

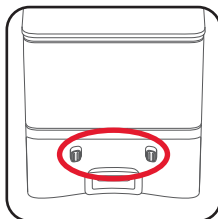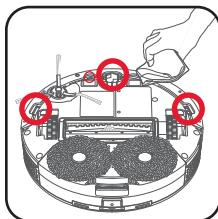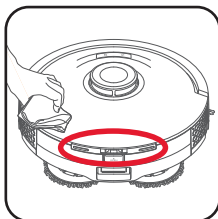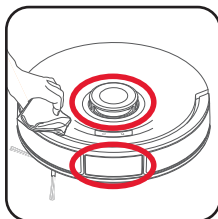

- With a clean, soft and dry cloth, wipe the robot sensors (in front, top, back, side and bottom of the robot), the buttons on the robot, the charging contacts of the robot and the charging contacts of the station.

Once a month - Clean the wheels







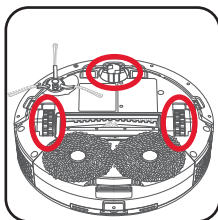
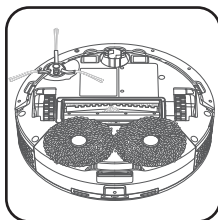


- The wheels may be entangled by hair or dirt. Turn the robot upside down. Clean the wheels by removing the tangled hair. You can remove the caster to remove any dirt before putting it back.

7. Maintain the robot and the station


EN

Every 2 months (depending on actual use) Replace the dust bag

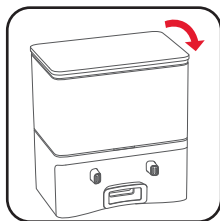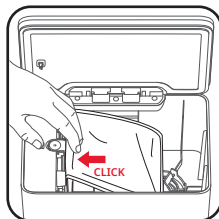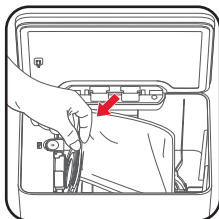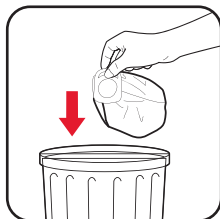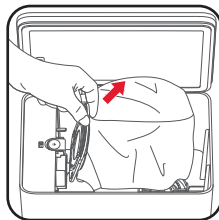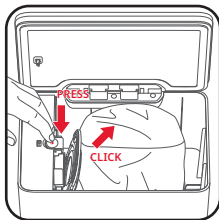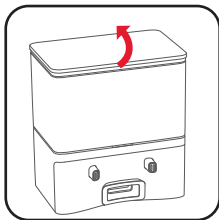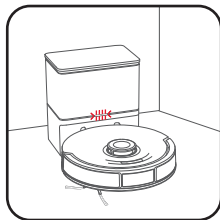

- When the dust bag is full, the light indicator of the station is red.
- Open the station lid.
- Press the Eject button.
- Grab the dust bag handle. Pull to take out the used dust bag.
- Throw it away in the bin.

- Take a new dust bag.
- Install it in the station by sliding the dust bag handle in the insertion slot.
- Clip it to the station
- The dust bag is correctly installed when you hear a "click" sound.

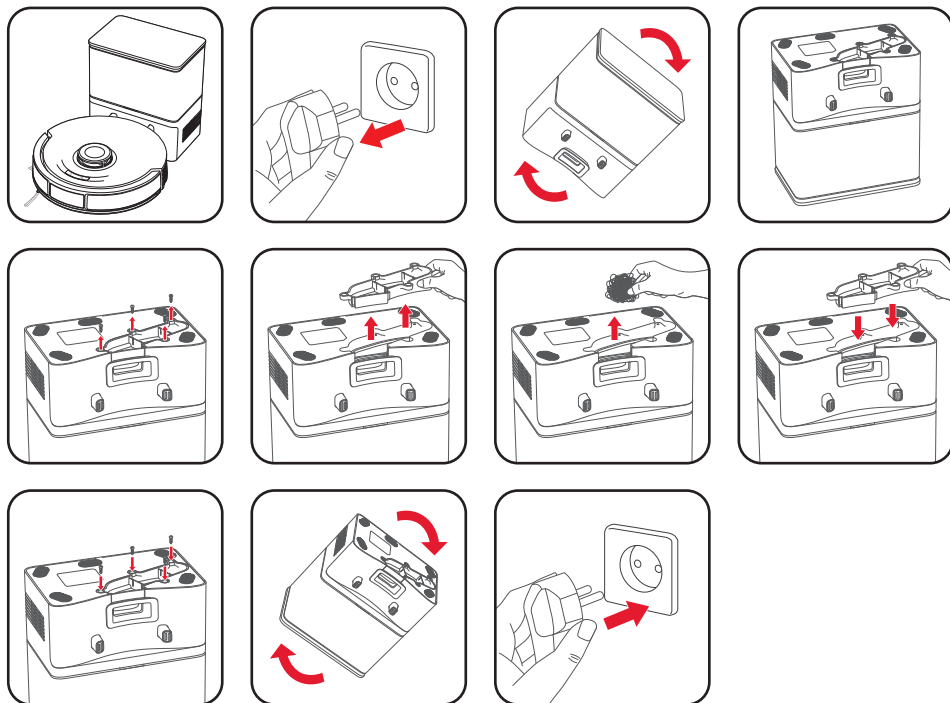

If the light indicator is blinking in red after replacing the dust bag, or if the dust collection stops after a short period of time, a foreign item may block the dust channel of the station

- Unplug the station before any manipulation.
- Do not use blunt object.
- Reverse the station upside down.
- With a screwdriver, remove the 5 screws that hold the cover of the dust channel.
- Remove the cover of the dust channel. Check whether there are foreign matters blocking the dust channel. If the dust channel is blocked, remove the foreign matters with your fingers or with a bottle brush.
- After cleaning the dust channel, please put the cover back and 5 screws back.
- Reverse the station and replug the "power" plug.
- Place the robot in front of the station and press the "Home" button on the robot. The robot will automatically return to the station and start a dust collection for few seconds.
- The light indicator of the station is white for few seconds before the light is off.

8. Component replacement frequency

EN

The replacement frequency is for reference only, if a component or accessory is damaged, it should be replaced promptly to ensure efficient cleaning. Components and accessories can be bought on: www.tefal.com

Component	Cleaning frequency	Replacement frequency
Dust box	When needed	Not applicable
Mops	After each use	After 100 washes
Filter	Once a week	Every 6 months
Main brush	Once a week	If required
Side brush	Once a week	Every 6 months
Sensors	Once a week	Not applicable
Wheels	Once a month	Not applicable
Dust bag	Not applicable	Every 2 months (depending on actual use) Replace the dust bag

9. Do's and don'ts

- The robot has anti-drop sensors to detect stairs. The robot will change direction when detecting them. For optimum anti-drop sensors efficiency, remove any item (ex: shoe) from the stairs. When using the robot in a raised area, place a physical barrier at the edge of a drop to prevent accidental falls.
- Do not shake the robot.
- Do not try to remove the mops during cleaning.
- Do not put water or any wet cloth on the robot.
- Do not charge the robot when the ground is flooded.
- Do not submerge the robot in water.
- Do not use the robot on wet surfaces or surfaces with standing water.
- Do not use the product if the cord or charger is damaged.
- Do not leave children unattended, do not allow children to play with the robot.
- Do not use the robot outside home.
- Do not use the robot in a overheated environment.
- Do not use the robot when the home temperature is below 0°C (32°F) and above 40°C (104°F).
- Do not spread cleaning agents on the floor before using the robot.
- Do not use cleaning agents, aerosol cleaners or cleaning spray to clean the robot, the filter, the station or the dust bag.
- Do not throw the robot in the fire.
- Do not use the robot to clean broken glass.
- Do not walk or climb on the robot, do not move the robot with the foot.
- Do not allow children or pets to ride on the robot.
- Do not put any item on the robot.
- Do not use the robot without the filter, it would damage the robot.
- Before disposing of the device, remove the battery and dispose of it in accordance with local laws and local arrangements. If you have any questions, please contact your product dealer who can tell you what to do.



10. Unpair the robot and delete personal data

To disable Wi-Fi module on robot, simultaneously press the "Home" and "On-Off" buttons during 5 seconds, until you hear a beep sound. The robot will automatically removes its connection to the phone. The 2 buttons will then slowly flash for a few minutes. The robot will automatically removes its connection to the phone and router. Once it is done, you can't go back. To pair again, you will need to do the pairing process again. To delete personal data stored in the robot, please reset the robot. Press and hold the «HOME» button for 15 seconds, until you hear a beep sound.

Fault	Solutions
Cannot start the robot	• Make sure the robot is connected to power supply. • Make sure the battery is fully charged. • Make sure the robot is ON. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Check whether the dust box is properly installed.
The robot suddenly stops working	• Check whether the robot is stuck or blocked by obstacles. • Check whether the battery is too low. Please charge it. • If the problem persists, please switch OFF the robot by pressing and holding the ON-OFF button for 5 seconds. Wait for 30 seconds, and switch ON by pressing the ON-OFF button for 5 seconds to restart it. • The appliance may be overheating: - Stop the appliance and leave cool for at least 1 hour. - If it overheats on repeated occasions, contact the Approved Services Center.
Cannot charge the robot	• Make sure the station is properly connected to the power. • Make sure the robot is ON. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Check whether the indicator on the robot is flashing during charging. • Wipe dust off charging contacts with dry cloth. • Make sure the robot and the station are connected through the charging contacts.
The robot cannot return to the station robot	• Clear the station of objects within 0.5m on the left and right sides and within 1.5m ahead. • Make sure that the robot starts cleaning from the station without abnormal movement. • When the robot is near the station, it can return faster. But if the station is located far away, the robot will need more time to return. Please wait during its return. • Clean the charging contacts with dry cloth.
The cleaning schedule is not executed	• Make sure the robot has been powered on. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Make sure the cleaning schedule has been set correctly in the application at the desired time, and the cleaning schedule is saved. • Check whether the battery level is too low to start cleaning. • The robot will not start any scheduled cleaning when a task is being performed. • Check whether the dust box is properly installed.

Fault	Solutions
The suction is whistling or running is very loud during cleaning	• Check the suction inlet for any obstruction. • Empty the dust bin. • Clean the filter. • Check whether the filter is wet due to water or other liquids on the floor. Let the filter dry naturally thoroughly before use. • Check whether the dust box is properly installed. • Check whether the main brush or side brush is blocked by any foreign item, remove the main brush or side brush and clean it.
The main brush does not rotate	• Check whether the main brush is blocked by any foreign item, remove the main brush and clean it. • Check whether the central brush and the brush cover are correctly installed.
The side brush drops out of place during cleaning	• The side brush is not properly installed, the side brush is properly installed when you hear a click sound.
The mops cannot rotate	• The mops may be blocked by a foreign object, please remove it. • The mops are not correctly installed, the mops are correctly installed when you hear a click sound.
Abnormal action or sweep route of the robot	• Carefully clean the sensors with dry cloth. • Switch OFF the robot by pressing and holding the ON-OFF button for 5 seconds, wait for 30 seconds and switch on by pressing and holding the ON-OFF button for 5 seconds to restart the robot.


Fault	Solutions
The robot cannot connect to your Wi-Fi network	• If you still encounter an error after several unsuccessful attempts : • Make sure the outlet the robot's base is plugged into is powered. • Make sure the robot is close enough to your Wi-Fi router. • Ensure that your Wi-Fi router supports 2.4GHz and 802.11 b/g/n bands as this equipment does not support 5GHz bands. • Check if the automatic reconnection to your domestic Wi-Fi network is correct. • Activate the mobile data of your smartphone. • Don't use a VPN (Virtual Private Network). • Try the process again by selecting the correct Wi-Fi network and entering the correct password. • Keep your phone close to the robot and the station until the end of the pairing process. • After several attempts, switch off and switch on the product. • Reset the robot by pressing and holding the « HOME » button for 15 seconds. • Press and hold for 5 seconds the « HOME » and « ON-OFF » button until the two buttons' lights are blinking and retry the process. • Restart your smartphone. • In case a warning window appears for internet connection, please maintain the connection with the robot. • Make sure the station light indicator is white when it's connected to power and when the robot is not on the station.
The map is lost	• The map may be lost if the robot has been manually moved to another location during cleaning or if the home environment has been changed (moved furniture). Please restart mapping by launching in the app a new exploration or a new cleaning session from the station.
The robot returns to the station before it has finished cleaning	• The battery level may be too low to finish cleaning, the robot will return to the station to charge. When its battery is full, the robot will resume cleaning where it has left to finish cleaning. • The robot may be unable to reach certain areas blocked by furniture or barriers, tidy up these area to make them accessible. • Verify the no go zones and no mop zones set in the application. Add, modify or delete zones according to your needs.
The robot gets stuck	• The robot may be tangled with something, manually remove the blocked item and restart the cleaning session by pressing the ON-OFF button. • The robot may be stuck under furniture with an entrance of similar height, please set a physical barrier or a no go zone in the app. • Rotate and press the wheels to check whether there is any foreign object wrapped or stuck, remove it.

คู่มือผู้ใช้

1. ภายในกล่องมีอะไรบ้าง	p. 21
2. ภาพรวมผลิตภัณฑ์	p. 21
3. ก่อนใช้งาน	p. 22
4. ติดตั้งหุ่นยนต์	p. 22
5. เชื่อมต่อหุ่นยนต์กับแอปฟรี	p. 24
6. ใช้หุ่นยนต์โดยไม่ใช้แอป	p. 25
7. บำรุงรักษาหุ่นยนต์และแท่นชาร์จ	p. 26
8. ความถี่ของการเปลี่ยนส่วนประกอบ	p. 33
9. สิ่งที่ต้องทำและไม่ควรทำ	p. 33
10. ยกเลิกการจับคู่นยนต์และลบข้อมูลส่วนบุคคล	p. 33
11. ปัญหาทั่วไปและวิธีแก้ไข	p. 34


โปรดอ่านคู่มือ “คำแนะนำด้านความปลอดภัยและการใช้งาน” โดยละเอียดก่อนใช้งานครั้งแรก

สำหรับข้อมูลเพิ่มเติม:
www.tefal.com

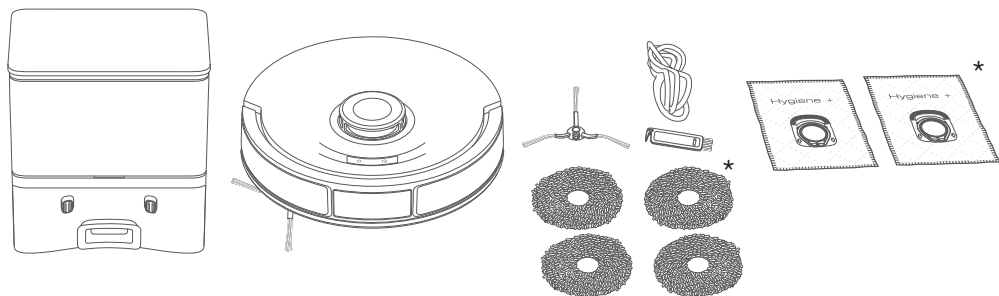


*ขึ้นอยู่กับรุ่น

2. ภาพรวมผลิตภัณฑ์

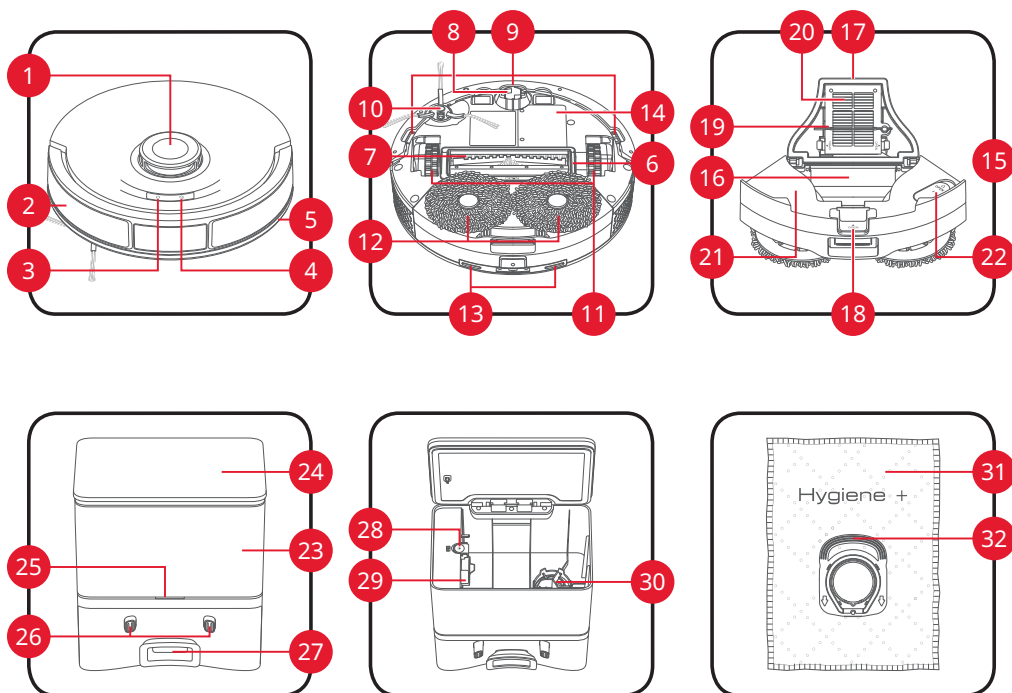

1. LiDAR
2. กันชน
3. ปุ่มเปิด/เริ่มต้น/หยุดชั่วคราว
 - กดค้างเพื่อเปิดหรือปิด
 - กดเพื่อเริ่มหรือหยุดการทำความสะอาดชั่วคราว
4. ปุ่ม Home
 - กดเพื่อกลับไปยังแท่นชาร์จ
5. แถบป้องกันการกระแทก
6. ฝาครอบแปรงหลัก
7. แปรงหลัก
8. ล้อด้านหน้า
9. เซ็นเซอร์ป้องกันการตกหล่น
10. แปรงด้านข้าง
11. ล้อ
12. ผ้าถูพื้นแบบหมุนพร้อมตัวยึดแม่เหล็ก
13. หน้าสัมผัสสำหรับชาร์จไฟ
14. แบตเตอรี่
15. ถังเก็บฝุ่นและถังบรรจุน้ำแบบ 2-in-1
16. ถังเก็บฝุ่น
17. ฝาปิดถังเก็บฝุ่น
18. ช่องเปิดของถังเก็บฝุ่น
19. ครอบครอบตัวกรอง
20. ตัวกรอง
21. ถังบรรจุน้ำ
22. จุกปิด
23. แท่นชาร์จระบบเก็บฝุ่นอัตโนมัติ
24. ฝาปิดแท่นชาร์จ
25. ไฟแสดงสถานะ
26. หน้าสัมผัสสำหรับชาร์จไฟ
27. ช่องดูดเข้า
28. ปุ่มปลด
29. ช่องใส่ด้ามจับถุงเก็บฝุ่น
30. ช่องใส่ถุงเก็บฝุ่น
31. ถังเก็บฝุ่น Hygiene+
32. ด้ามจับถุงเก็บฝุ่น Hygiene+

3. ก่อนใช้งาน

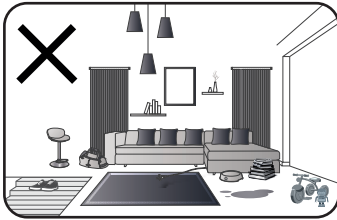





โปรดอ่านคู่มือฉบับต่อไปนี้อย่างละเอียดเพื่อปรับปรุงประสิทธิภาพการทำความสะอาด จัดระเบียบสายเคเบิล สายไฟ วัตถุขนาดเล็กและเคลื่อนที่ได้ นำสิ่งของที่ไม่มั่นคง แดกหักง่าย มีค่า หรือเป็นอันตรายออกจากพื้น ตรวจสอบให้แน่ใจว่าประตูของแต่ละห้องเปิดอยู่ หุ่นยนต์ของคุณอาจทำงานได้ยากบนพื้นสีเข้มและระบบพรมซึ่งมีขอบหนาเกินไป มีขนยาว หรือเบาเกินไป (เช่น พรมห้องน้ำ) เพื่อให้เซ็นเซอร์ป้องกันการตกหล่นมีประสิทธิภาพสูงสุด ให้นำสิ่งกีดขวาง (เช่น รองเท้า) ออกจากพื้นได้ เมื่อใช้งานหุ่นยนต์ในพื้นที่สูง ให้วางที่กั้นไว้กับบริเวณขอบเพื่อป้องกันการตกหล่นโดยไม่ตั้งใจ ห้ามยืนในพื้นที่แคบ เช่น โถงทางเดิน เพื่อไม่กีดขวางหุ่นยนต์

4. ติดตั้งหุ่นยนต์




สแกนรหัส QR ด้านบนเพื่อเรียนรู้วิธีการติดตั้งและเชื่อมต่อหุ่นยนต์ในวิดีโอ โปรดอ่านคำแนะนำต่อไปนี้สำหรับข้อมูลเพิ่มเติมโดยละเอียด

<https://www.youtube.com/playlist?list=PL8Z0ZML7s661Qa45FKO2Cmvc3Nkj5O76F>

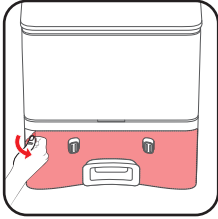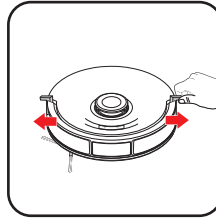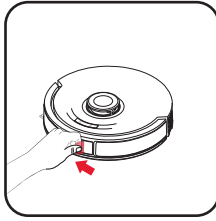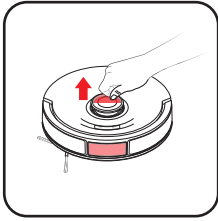


ถอดอุปกรณ์ป้องกัน

เอาการป้องกันทั้งหมดออก (ฟิล์มป้องกันและโฟมพลาสติก) บนหุ่นยนต์และสถานี

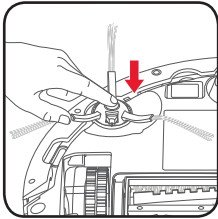


ติดตั้งแปรงข้างและผ้าเช็ดพื้น

กลุ่มด้านหุ่นยนต์ ติดตั้งแปรงด้านข้างด้วยการหนีบเบาๆ แปรงด้านข้างจะได้รับการติดตั้งอย่างถูกต้องเมื่อได้ยินเสียงคลิก

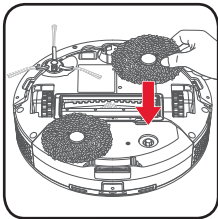





ติดตั้งผ้าถูพื้นทั้งสองชิ้นกับตัวยึดแม่เหล็กทั้งสองฝั่ง ผ้าถูพื้นจะได้รับการติดตั้งอย่างถูกต้องเมื่อคุณได้ยินเสียงคลิก

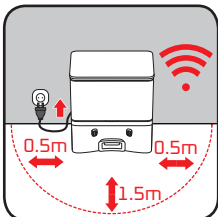

ติดตั้งแท่นชาร์จบนพื้นแข็งและราบเรียบ หลีกเลี่ยงพื้นพาร์เก้ พื้นไม้ และพรม วางแท่นชาร์จในพื้นที่โล่ง โดยพองกับกำแพงโดยไม่มีบันไดอยู่ด้านหน้าของแท่น รักษาระยะห่างอย่างน้อย 0.5 ม. จากแต่ละด้านและจากด้านบนหน้า 1.5 ม. ตรวจสอบให้แน่ใจว่าตำแหน่งที่เลือกอยู่ใกล้กับปลั๊ก Wi-Fi หรือมีสัญญาณ Wi-Fi ที่มีความเข้มของสัญญาณดี จัดพื้นที่รอบๆ แท่นชาร์จให้ปราศจากสิ่งของ พื้นผิวสะท้อนแสง กระดาษ ไม้ และเก้าอี้ หลีกเลี่ยงไม่ให้แท่นชาร์จสัมผัสกับแสงแดดโดยตรง เสียบสายจ่ายไฟเข้ากับเต้ารับไฟฟ้า ตรวจสอบให้แน่ใจว่าสายไฟเป็นระเบียบที่ด้านหลังแท่นชาร์จและติดกับผนัง

4. ติดตั้งหุ่นยนต์

TH

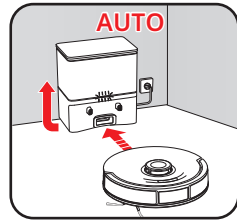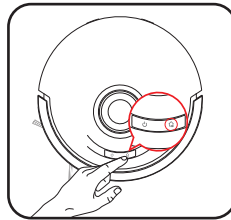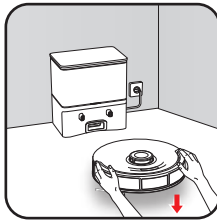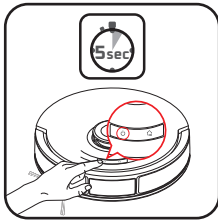

เปิดหุ่นยนต์

เปิดหุ่นยนต์โดยการกดปุ่ม ON-OFFค้างไว้สองสามวินาทีจนกระทั่งไฟหุ่นยนต์ติดขึ้น คุณจะได้ยินเสียงบีบ

วางหุ่นยนต์ไว้หน้าฐาน

วางหุ่นยนต์ให้ห่างจากสถานี 20-50 ซม. กดปุ่มโฮม หุ่นยนต์จะเชื่อมต่อกับสถานีโดยอัตโนมัติ (อย่าวางหุ่นยนต์เข้ากับสถานีด้วยตนเอง) รอ 4 ชั่วโมงจนกว่าหุ่นยนต์จะชาร์จเต็ม ไฟสถานีจะปิดเมื่อหุ่นยนต์กำลังชาร์จ

ข้อมูล

โปรดทราบว่าหุ่นยนต์จะเปิดโดยอัตโนมัติเมื่อวางไว้ในแท่นชาร์จ จะไม่สามารถปิดหุ่นยนต์ได้ในขณะที่กำลังชาร์จ โปรดทราบว่าสำหรับการทำความสะอาดครั้งแรกในสภาพแวดล้อมใหม่ หุ่นยนต์จะสร้างแผนที่บ้าน ห้ามยกหุ่นยนต์ไประหว่างการทำความสะอาดครั้งแรก เนื่องจากจะทำให้การสร้างแผนที่หยุดชะงัก โปรดตรวจสอบให้แน่ใจว่าผ้าปูพื้นติดตั้งอย่างถูกต้องก่อนที่จะเริ่มทำความสะอาด ห้ามถอดผ้าปูพื้นออกไประหว่างทำความสะอาด หากคุณมีพรมที่มีขอบ โปรดวางที่กั้นรอบๆ พรมเพื่อป้องกันไม่ให้หุ่นยนต์ติดอยู่ที่ขอบ ซึ่งจะทำให้ไม่สามารถสร้างแผนที่ได้ หากคุณมีพื้นที่กลางแจ้ง (สวน ระเบียง ลานบ้าน ฯลฯ) ที่มีทางเข้าที่มีธรณีประตูสูงน้อยกว่า 2 ซม. หรือไม่มีธรณีประตู (เช่น มีหน้าต่างแบบฝรั่งเศส ประตูบานเลื่อน หน้าต่างที่ยื่นจากผนัง ฯลฯ) โปรดปิดประตูเพื่อไม่ให้หุ่นยนต์ออกไปนอกบ้านของคุณ

5. เชื่อมต่อหุ่นยนต์กับแอปฟรี




เปิด Google Play Store (Android) หรือ App Store (iOS) บนสมาร์ตโฟนของคุณ ค้นหา "Rowenta Robots" หรือสแกนรหัส QR และติดตั้งแอปพลิเคชัน เปิดแอปและปฏิบัติตามคำแนะนำบนหน้าจอเพื่อเชื่อมต่อหุ่นยนต์ของคุณ

https://tefalrobots.smart.link/x0zckp7if?appliance_id=APPLIANCE_1247




คุณยังสามารถดูคำแนะนำในการจับคู่โดยละเอียดแบบทีละขั้นตอนในเอกสาร PDF ด้วยการสแกนรหัส QR ด้านล่าง

https://dam.groupeseb.com/m/3fd9efa007195343/original/Rowenta_RR9695WH_IFU.pdf

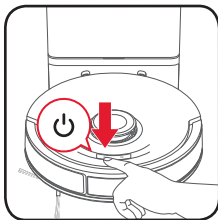


เริ่มทำความสะอาด

กดปุ่ม “เปิด/ปิด” เพื่อเริ่มการทำความสะอาดอัตโนมัติ หุ่นยนต์จะสแกนพื้นที่ หุ่นยนต์จะแบ่งห้องออกเป็นโซนเล็กๆ โดยอัตโนมัติ โดยทำความสะอาดขอบนอกของโซนก่อน จากนั้นจึงทำความสะอาดภายในโซนด้วยรูปแบบซิกแซก หุ่นยนต์จะทำความสะอาดพื้นที่ที่เข้าถึงได้ทีละโซน หากหุ่นยนต์ไม่เริ่มทำงานเมื่อคุณกดปุ่ม “เปิด/ปิด” หุ่นยนต์อาจมีแบตเตอรี่ต่ำเกินไป โปรดชาร์จหุ่นยนต์

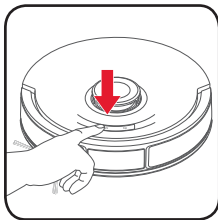


การหยุดการทำความสะอาดชั่วคราวและดำเนินการต่อ

กดปุ่ม “เปิด/ปิด” เมื่อใดก็ได้เพื่อหยุดการทำความสะอาดชั่วคราว และกดอีกครั้งเพื่อทำความสะอาดต่อ หากหุ่นยนต์อยู่ในโหมดสแตนด์บาย กดปุ่ม “เปิด/ปิด” หนึ่งครั้งเพื่อให้หุ่นยนต์ทำงานอีกครั้ง และกดอีกครั้งเพื่อเริ่มทำความสะอาด

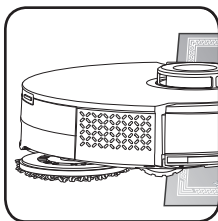

การทำงานของหุ่นยนต์บนพร

หากคุณเริ่มการทำงานของหุ่นยนต์จากแท่นชาร์จ หุ่นยนต์จะใช้เซ็นเซอร์ตรวจสอบเพื่อตรวจจบบรรยากาศและหลีกเลี่ยงเพื่อป้องกันไม่ให้รบกวนเปียก โปรดทราบว่าความสามารถถึงค่าชั่วโมงลูฟฟ์ได้ในแอปเพื่อหลีกเลี่ยงไม่ให้ถูกรบกวนได้เช่นกัน

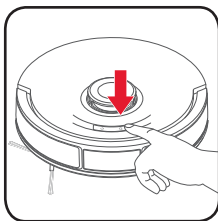

สิ้นสุดการทำความสะอาด

หากคุณเริ่มการทำงานของหุ่นยนต์จากแท่นชาร์จ หุ่นยนต์จะกลับไปแท่นชาร์จโดยอัตโนมัติเมื่อสิ้นสุดการทำความสะอาดหรือเมื่อระดับแบตเตอรี่ต่ำเกินไป หากแบตเตอรี่เหลือน้อยระหว่างเซชันการทำความสะอาด หุ่นยนต์จะกลับไปแท่นชาร์จเพื่อชาร์จไฟโดยอัตโนมัติ หลังจากการชาร์จ หุ่นยนต์จะทำความสะอาดต่อจากจุดที่หยุดไว้ หากหุ่นยนต์ไม่ได้อยู่บนแท่นชาร์จเมื่อเริ่มทำความสะอาด หุ่นยนต์จะกลับไปยังจุดเริ่มต้น ณ เวลาที่สิ้นสุดการทำความสะอาดโดยอัตโนมัติหรือหากระดับแบตเตอรี่ต่ำเกินไป เมื่อสิ้นสุดการทำความสะอาด หุ่นยนต์จะกลับไปแท่นชาร์จโดยอัตโนมัติ แต่หากคุณต้องการสิ้นสุดการทำความสะอาดด้วยตนเอง ให้กดปุ่ม “Home” หนึ่งครั้งเพื่อหยุดหุ่นยนต์ได้ทุกเมื่อ และกดอีกครั้งเพื่อให้หุ่นยนต์กลับไปยังแท่นชาร์จ หากหุ่นยนต์ไม่พบแท่นชาร์จ ให้วางหุ่นยนต์ไว้ด้านหน้าแท่นชาร์จด้วยตนเองและกดปุ่ม “Home” เมื่อหุ่นยนต์เข้าสู่แท่นชาร์จแล้วระบบเก็บฝุ่นจะทำงานโดยอัตโนมัติเป็นเวลาสองถึงสามวันถัดไป โปรดทราบว่าระยะเวลาขึ้นอยู่ระหว่างวันที่เก็บฝุ่นสองครั้งคือ 10 นาที


หน้าที่ของแท่นชาร์จ

เมื่อทำความสะอาดเสร็จสิ้น เมื่อหุ่นยนต์เชื่อมต่อกับแท่นชาร์จ แท่นชาร์จจะดำเนินการต่อไปนี้โดยอัตโนมัติ:

- ชาร์จแบตเตอรี่หุ่นยนต์
- เทฝุ่นออกจากกล่องเก็บฝุ่นของหุ่นยนต์











สแกนรหัส QR เพื่อทราบวิธีการบำรุงรักษาหุ่นยนต์เพื่อคงประสิทธิภาพไว้
ถอดปลั๊กแท่นชาร์จก่อนการดำเนินการใดๆ.

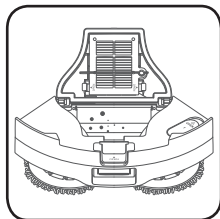

เมื่อจำเป็น - ทำความสะอาดกล่องเก็บฝุ่น








เมื่อทำความสะอาดเสร็จสิ้น หุ่นยนต์จะกลับไปแท่นชาร์จและเก็บบริชจากกล่องเก็บฝุ่นโดยอัตโนมัติ แต่สิ่ง
สกปรกบางส่วนอาจยังคงตกค้างอยู่ในกล่องเก็บฝุ่น

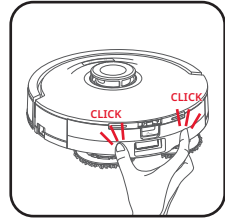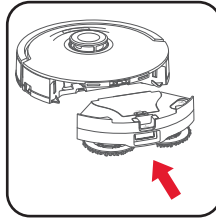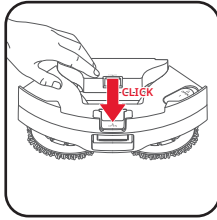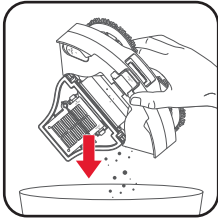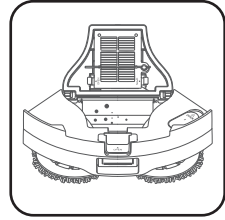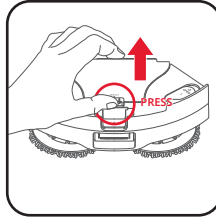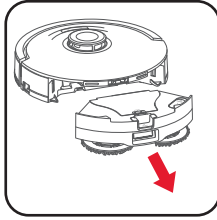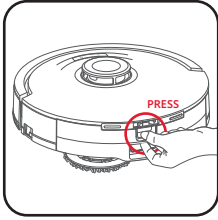

- แยกถังเก็บฝุ่นและถังบรรจุน้ำแบบ 2-in-1 ออกจากตัวหุ่นยนต์: กดปุ่มปลดล็อกค้างไว้แล้วดึงออกด้านนอก
- กดปุ่มเปิดถังเก็บฝุ่นค้างไว้เพื่อเปิดถังเก็บฝุ่น

- เทสิ่งสกปรกลงในถังขยะ
- ปิดกล่องเก็บฝุ่น
- ประกอบกลับเข้าไปยังตำแหน่งเดิมในหุ่นยนต์


ล้างผ้าถูพื้นหลังการใช้งานทุกครั้ง

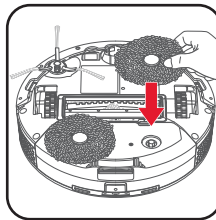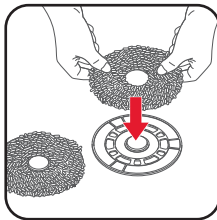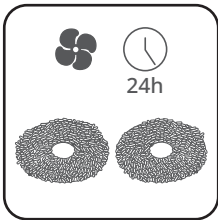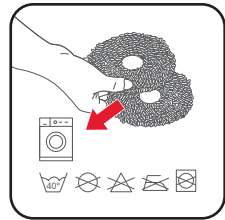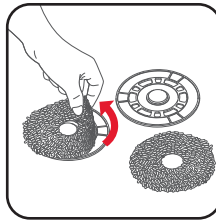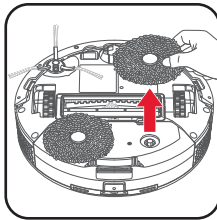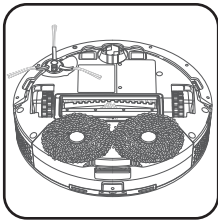

- คว่ำหุ่นยนต์ลง
- ดึงผ้าถูพื้นออกมามตรงๆ เพื่อถอดออกจากตัวยึดแม่เหล็ก
- แคะผ้าถูพื้นออก
- ชักด้วยน้ำหรือในเครื่องซักผ้าที่อุณหภูมิ 40°C
- ทิ้งไว้ให้แห้งเป็นเวลา 24 ชั่วโมง

- ติดผ้าถูพื้นเข้ากับตัวยึดผ้าถูพื้น
- ติดตั้งผ้าถูพื้นทั้งสองชิ้นกับตัวยึดแม่เหล็กทั้งสองฝั่ง โปรดตรวจสอบให้แน่ใจว่าผ้าถูพื้นติดตั้งอย่างถูกต้องก่อนที่จะเริ่มทำความสะอาด


สัปดาห์ละครั้ง - ทำความสะอาดตัวกรอง

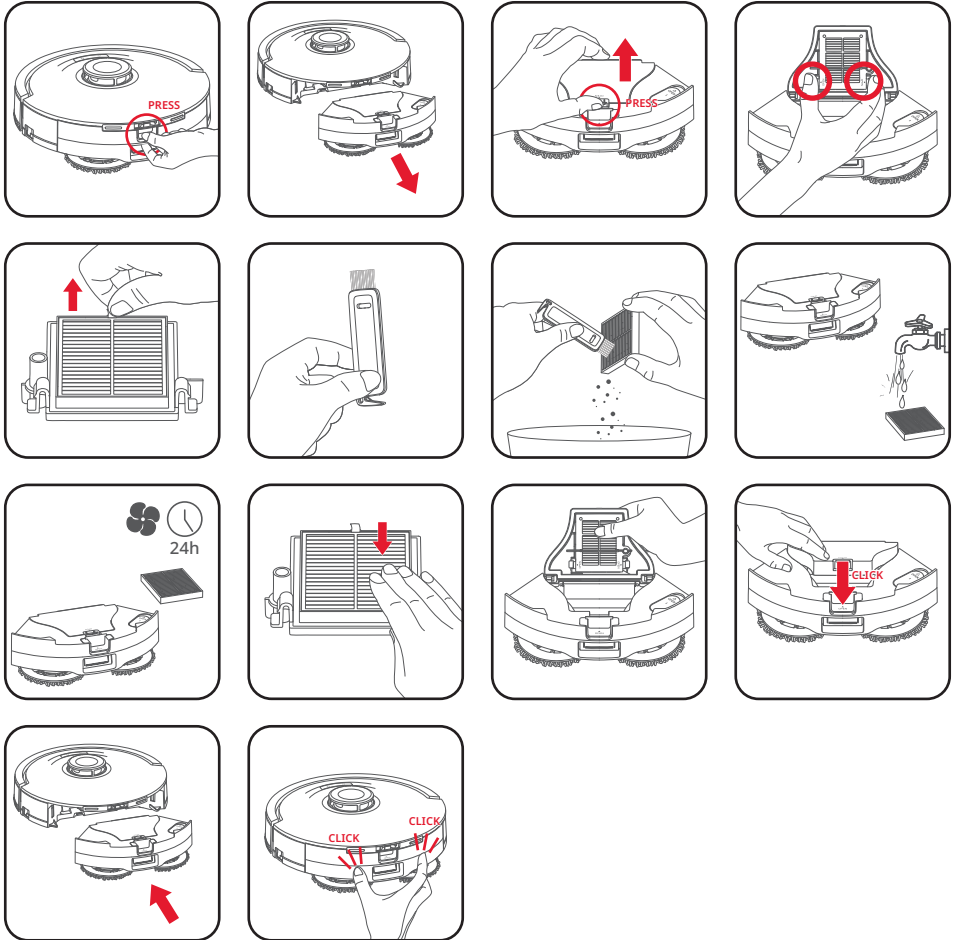

- แยกถังเก็บฝุ่นและถังบรรจุน้ำแบบ 2-in-1 ออกจากตัวหุ่นยนต์: กดปุ่มปลดล็อกค้างไว้แล้วดึงออกด้านบน
- กดปุ่มเปิดถังเก็บฝุ่นค้างไว้เพื่อเปิดถังเก็บฝุ่น
- จับกรอบครอบตัวกรองแล้วดึงเพื่อปลดออกจากกล่องเก็บฝุ่น
- เอาตัวกรองเหนือถังขยะเบาๆ เพื่อจัดฝุ่น คุณสามารถใช้เครื่องมือทำความสะอาดที่ให้นาในบรรจุภัณฑ์เพื่อจัดฝุ่นได้ คุณยังสามารถล้างทำความสะอาดตัวกรองได้เช่นกัน
- ทิ้งไว้ให้แห้งเป็นเวลา 24 ชั่วโมง

- เมื่อตัวกรองแห้งสนิทแล้ว ให้ใส่เข้าไปยังตำแหน่งเดิม ห้ามใช้หุ่นยนต์โดยไม่มีตัวกรอง เพราะจะทำให้หุ่นยนต์เสียหายได้
- ปิดกล่องเก็บฝุ่น
- ประกอบกลับเข้าไปยังตำแหน่งเดิมในหุ่นยนต์







สัปดาห์ละครั้ง - ทำความสะอาดแปรงหลัก

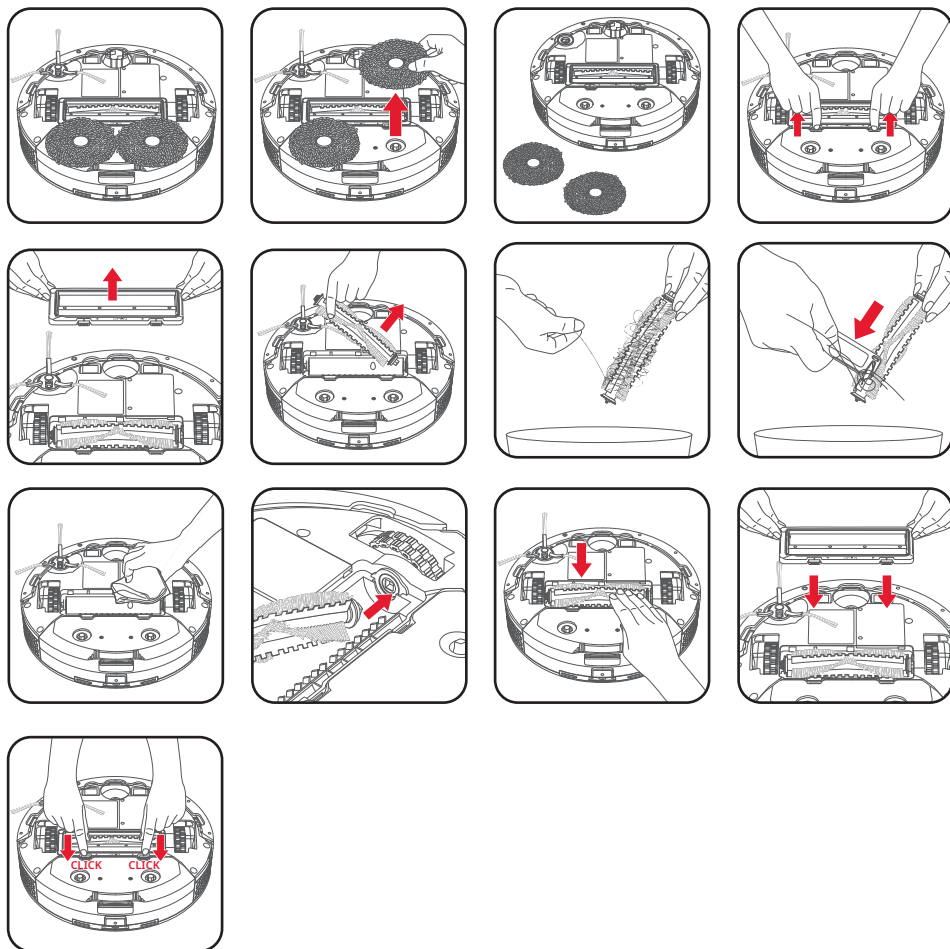

- คว่ำหุ่นยนต์ลง
- ดึงผ้าคลุมออกมาตรงๆ เพื่อถอดออกจากตัวยึดแม่เหล็ก
- กดสลักฝาครอบแปรง
- ดึงออก
- นำแปรงออกมา
- กำจัดเส้นผมที่ติดพันอยู่ออก คุณสามารถใช้เครื่องมือทำความสะอาดที่ให้มีในบรรจุภัณฑ์เพื่อกำจัดเส้นผมที่ติดพันอยู่ได้





- ทำความสะอาดช่องแปรงหลักและช่องดูดด้วยผ้าแห้ง
- ติดตั้งแปรงกลับเข้าไปในหุ่นยนต์
- ติดตั้งฝาครอบแปรงกลับเข้าที่
- ฝาครอบจะได้รับการติดตั้งอย่างถูกต้องเมื่อคุณได้ยินเสียงคลิก

สัปดาห์ละครั้ง - ทำความสะอาดแปรงด้านข้าง

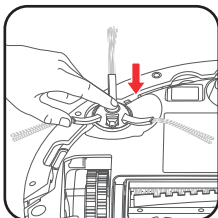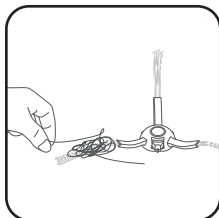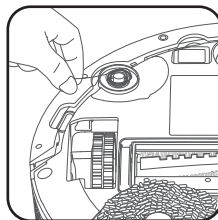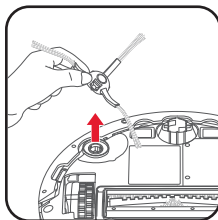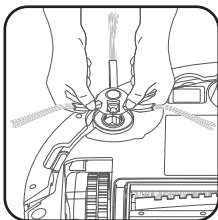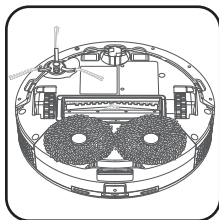



- คว่ำหุ่นยนต์ลง
- จับแปรงด้านข้างโดยใช้มือทั้งสองข้างจับส่วนที่เป็นพลาสติก แล้วดึงเพื่อปลดล๊อค อย่าดึงที่ขนแปรงของแปรงด้านข้าง
- กำจัดเส้นผมที่ติดพันอยู่ออก
- ติดตั้งแปรงด้านข้างอีกครั้งด้วยการหนีบเบาๆ แปรงด้านข้างจะได้รับการติดตั้งอย่างถูกต้องเมื่อได้ยินเสียงคลิก

สัปดาห์ละครั้ง - ทำความสะอาดเซ็นเซอร์

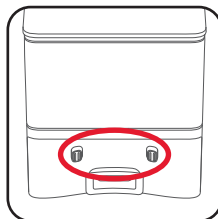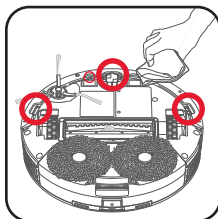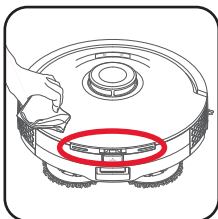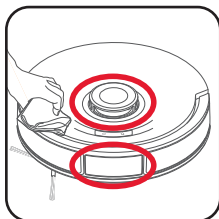









- ใช้ผ้าสะอาด นุ่ม และแห้งเช็ดเซ็นเซอร์ของหุ่นยนต์ (ด้านหน้า ด้านบน ด้านหลัง ด้านข้าง และด้านล่างของหุ่นยนต์) ปุ่มบนหุ่นยนต์ หน้าสัมผัสสำหรับชาร์จไฟของหุ่นยนต์ และหน้าสัมผัสสำหรับชาร์จไฟของแท่นชาร์จ

เดือนละครั้ง - ทำความสะอาดล้อ

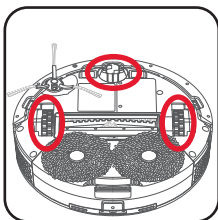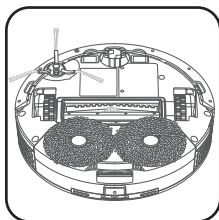


- ล้ออาจมีเส้นผมหรือสิ่งสกปรกติดพันอยู่ คว่ำหุ่นยนต์ลง ทำความสะอาดล้อด้วยการขัดเส้นผมที่พันอยู่ออก คุณสามารถถอดล้อออกเพื่อขัดสิ่งสกปรกก่อนที่จะใส่กลับเข้าไป

เปลี่ยนถุงเก็บฝุ่น ทุกๆ 2 เดือน (ขึ้นอยู่กับการใช้งานจริง)

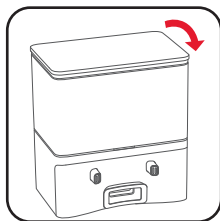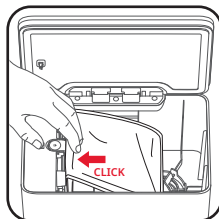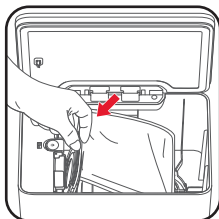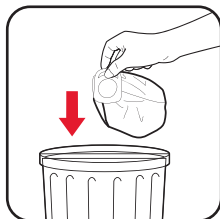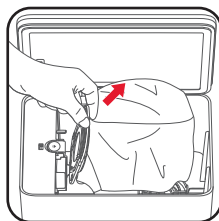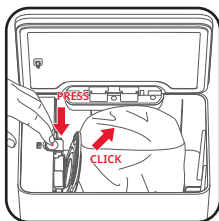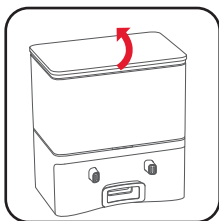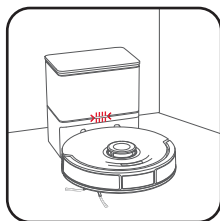

- เมื่อถุงเก็บฝุ่นเต็ม สัญญาณไฟของแท่นชาร์จจะเป็นสีแดง
- เปิดฝาปิดแท่นชาร์จ.
- กดปุ่ม Eject.
- จับที่จับถุงเก็บฝุ่น ดึงออกเพื่อนำถุงที่ใช้แล้วออก
- ทิ้งลงในถังขยะ

- เตรียมถุงเก็บฝุ่นใบใหม่
- ติดตั้งลงในแท่นชาร์จโดยการเลื่อนด้านจับถุงเก็บฝุ่นเข้าไปในช่องใส่
- หนีบเข้ากับแท่นชาร์จ
- ถุงเก็บฝุ่นจะได้รับการติดตั้งอย่างถูกต้องเมื่อคุณได้ยินเสียง "คลิก"

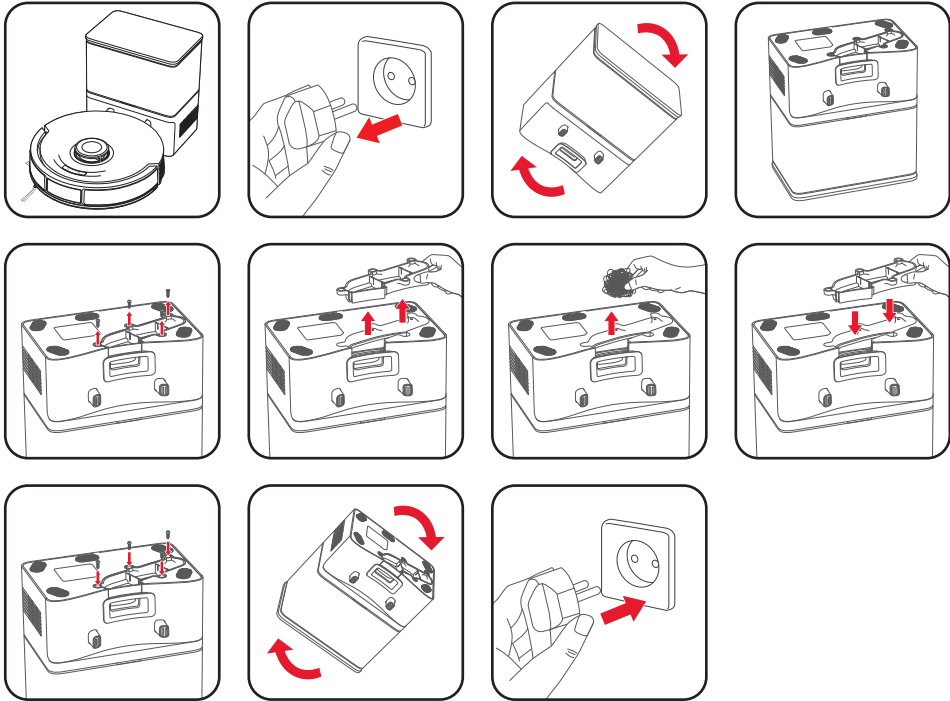

หากไฟสัญญาณกะพริบเป็นสีแดงหลังจากเปลี่ยนถังเก็บฝุ่น หรือหากระบบเก็บฝุ่นหยุดทำงานหลังจากผ่านไปครึ่งหนึ่ง สิ่งแปลกลบอมอาจจุดต้นช่องเก็บฝุ่นของแท่นชาร์จได้

- ถอดปลั๊กแท่นชาร์จก่อนการดำเนินการใดๆ.
- ห้ามใช้วัตถุทู่ๆ.
- กลับด้านแท่นชาร์จโดยคว่ำหน้าลง
- ใช้ไขควงถอดสกรู 5 ตัวที่ยึดฝาปิดช่องเก็บฝุ่นออก
- ถอดฝาปิดช่องเก็บฝุ่นออก ตรวจสอบว่ามีสิ่งแปลกปลอมกีดขวางช่องเก็บฝุ่นหรือไม่ หากช่องเก็บฝุ่นอุดตัน ให้ใช้นิ้วหรือแปรงทำความสะอาดเพื่อขจัดสิ่งแปลกปลอมออก
- หลังจากทำความสะอาดช่องเก็บฝุ่นแล้ว โปรดติดตั้งฝาปิดและสกรูอีก 5 ตัวกลับเข้าที่
- กลับด้านแท่นชาร์จและเสียบ “ปลั๊กไฟ” อีกครั้ง
- วางหุ่นยนต์ด้านหน้าแท่นชาร์จและกดปุ่ม “Home” บนตัวหุ่นยนต์ หุ่นยนต์จะกลับไปแท่นชาร์จโดยอัตโนมัติและเริ่มการเก็บฝุ่นเป็นเวลาสองถึงสามวินาที
- ไฟแสดงสถานะของแท่นชาร์จจะเป็นสีเขียวเป็นเวลาสองถึงสามวินาทีก่อนที่ไฟจะดับลง

8. ความถี่ของการเปลี่ยนส่วนประกอบ

TH

ความถี่ในการเปลี่ยนมีไว้เพื่อการอ้างอิงเท่านั้น หากส่วนประกอบหรืออุปกรณ์เสริมเสียหาย ควรเปลี่ยนทันทีเพื่อการทำมาความสะอาดมีประสิทธิภาพ สามารถซื้อส่วนประกอบและอุปกรณ์เสริมได้ที่: www.tefal.com

ส่วนประกอบ	ความถี่ในการทำมาความสะอาด	ความถี่ในการเปลี่ยน
กล่องเก็บฝุ่น	เมื่อจำเป็น	ไม่สามารถระบุได้
ผ้าถูพื้น	หลังการใช้แต่ละครั้ง	หลังจากซัก 100 ครั้ง
ตัวกรอง	สัปดาห์ละครั้ง	ทุก 6 เดือน
แปรงหลัก	สัปดาห์ละครั้ง	หากจำเป็น
แปรงด้านข้าง	สัปดาห์ละครั้ง	ทุก 6 เดือน
เซ็นเซอร์	สัปดาห์ละครั้ง	ไม่สามารถระบุได้
ล้อ	เดือนละครั้ง	ไม่สามารถระบุได้
ถุงเก็บฝุ่น	ไม่สามารถระบุได้	เปลี่ยนถุงเก็บฝุ่น ทุกๆ 2 เดือน (ขึ้นอยู่กับการใช้งานจริง)

9. สิ่งที่ต้องทำและไม่ควรทำ

- หุ่นยนต์มีเซ็นเซอร์ป้องกันการตกหล่นเพื่อตรวจจับบันได หุ่นยนต์จะเปลี่ยนทิศทางเมื่อตรวจจับบันไดได้ เพื่อให้เซ็นเซอร์ป้องกันการตกหล่นมีประสิทธิภาพสูงสุด ให้นำสิ่งกีดขวาง (เช่น รองเท้า) ออกจากบันได เมื่อใช้งานหุ่นยนต์ในพื้นที่ยกสูง ให้วางที่กันไว้ที่บริเวณขอบเพื่อป้องกันการตกหล่นโดยไม่ได้ตั้งใจ
- ห้ามเขย่าหุ่นยนต์
- อย่าพยายามถอดผ้าถูพื้นออกในระหว่างทำมาความสะอาด
- ห้ามวางน้ำหรือผ้าเปียกใดๆ
- ลงบนหุ่นยนต์ ห้ามชาร์จหุ่นยนต์ขณะที่พื้นมีน้ำท่วม
- ห้ามจุ่มหุ่นยนต์ลงในน้ำ
- ห้ามใช้หุ่นยนต์บนพื้นผิวที่เปียกหรือพื้นผิวที่มีน้ำขัง
- ห้ามใช้ผลิตภัณฑ์ทำความสะอาดหรือสารเคมีที่มีความเสียหาย
- ห้ามปล่อยเด็กไว้โดยไม่มีผู้ดูแล ห้ามปล่อยให้เด็กเล่นกับหุ่นยนต์
- ห้ามใช้หุ่นยนต์บนอกบันได
- ห้ามใช้หุ่นยนต์ในสภาพแวดล้อมที่มีความร้อนสูงเกินไป
- ห้ามใช้หุ่นยนต์เมื่ออุณหภูมิในบ้านต่ำกว่า 0°C (32° F) และสูงกว่า 40°C (104°F)
- ห้ามเทสารทำความสะอาดลงบนพื้นก่อนใช้งานหุ่นยนต์
- ห้ามใช้น้ำยาทำความสะอาด น้ำยาฟ้น หรือสเปรย์ทำความสะอาดในการทำมาความสะอาดหุ่นยนต์ แทนชาร์จ หรือถุงเก็บฝุ่น
- ห้ามโยนหุ่นยนต์ในกองไฟ
- ห้ามใช้หุ่นยนต์เพื่อทำความสะอาดกระจกแตก
- ห้ามเดินหรือปีนขึ้นบนหุ่นยนต์ ห้ามเคลื่อนย้ายหุ่นยนต์ด้วยเท้า
- ห้ามปล่อยให้เด็กหรือสัตว์เลี้ยงขึ้นขึ้นบนหุ่นยนต์
- ห้ามวางสิ่งของใดๆ บนหุ่นยนต์
- ห้ามใช้หุ่นยนต์โดยไม่มีตัวกรอง เพราะจะทำให้หุ่นยนต์เสียหายได้
- ก่อนทิ้งของปรกรณ์ ให้ถอดแบตเตอรี่และทิ้งตามกฎหมายและการดำเนินการของท้องถิ่น ถ้ามีข้อสงสัย โปรดติดต่อตัวแทนจำหน่ายผลิตภัณฑ์ของคุณที่จะบอกคุณว่าควรทำอย่างไร



10. ยกเลิกการจับคู่หุ่นยนต์และลบข้อมูลส่วนบุคคล

หากต้องการปิดใช้งานโมดูล Wi-Fi บนหุ่นยนต์ ให้กดปุ่ม "Home" และ "เปิด/ปิด" พร้อมกันเป็นเวลา 5 วินาที จนกว่าคุณจะได้ยินเสียงบีบ หุ่นยนต์จะลบการเชื่อมต่อกับโทรศัพท์โดยอัตโนมัติ จากนั้นปุ่มทั้ง 2 จะกะพริบซ้ำๆ เป็นเวลาสองสามนาที หุ่นยนต์จะลบการเชื่อมต่อกับโทรศัพท์และเราเตอร์โดยอัตโนมัติ เมื่อเสร็จแล้ว คุณจะไม่สามารถยกเลิกได้ หากต้องการจับคู่อีกครั้ง คุณจะต้องดำเนินการจับคู่อีกครั้ง หากต้องการลบข้อมูลส่วนบุคคลที่จัดเก็บไว้ในหุ่นยนต์ โปรดรีเซ็ตหุ่นยนต์ กดปุ่ม « HOME » ค้างไว้ 15 วินาที จนกระทั่งคุณได้ยินเสียงบีบ

ข้อผิดพลาด	วิธีแก้ปัญหา
ไม่สามารถเริ่มการทำงานของหุ่นยนต์ได้	- ตรวจสอบให้แน่ใจว่าหุ่นยนต์เชื่อมต่อกับแหล่งจ่ายไฟ - ตรวจสอบให้แน่ใจว่าได้ชาร์จแบตเตอรี่เต็มแล้ว - ตรวจสอบให้แน่ใจว่าหุ่นยนต์เปิดอยู่ กดปุ่ม ON-OFFค้างไว้ 5 วินาทีจนกว่าไฟหุ่นยนต์จะติด - ตรวจสอบว่าถ่วงเก็บฝุ่นนั้นติดตั้งอย่างถูกต้องหรือไม่
หุ่นยนต์หยุดทำงานกะทันหัน	- ตรวจสอบว่าหุ่นยนต์ติดขัดหรือมีสิ่งกีดขวางหรือไม่ - ตรวจสอบว่าแบตเตอรี่ต่ำเกินไปหรือไม่ โปรดทำการชาร์จ - หากปัญหายังคงดำเนินอยู่ โปรดปิดหุ่นยนต์โดยกดปุ่ม ON-OFFค้างไว้ 5 วินาที รอ 30 วินาที และเปิดเครื่องโดยกดปุ่ม ON-OFFค้างไว้ 5 วินาทีเพื่อรีเซ็ต - เครื่องใช้ของคุณอาจมีความร้อนเกิน: - หยุดเครื่องใช้แล้วปล่อยให้เย็นลงประมาณ 1 ชั่วโมง - หากเกิดภาวะความร้อนเกินขึ้นซ้ำหลายๆ ครั้ง โปรดติดต่อศูนย์บริการที่ได้รับอนุญาต
ไม่สามารถชาร์จหุ่นยนต์ได้	- ตรวจสอบให้แน่ใจว่าได้เชื่อมต่อแท่นชาร์จกับแหล่งจ่ายไฟอย่างถูกต้อง - ตรวจสอบให้แน่ใจว่าหุ่นยนต์เปิดอยู่ กดปุ่ม ON-OFFค้างไว้ 5 วินาทีจนกว่าไฟหุ่นยนต์จะติด - ตรวจสอบว่าไฟแสดงสถานะบนตัวหุ่นยนต์กะพริบหรือไม่ระหว่างการชาร์จ - เช็ดฝุ่นออกจากหน้าสัมผัสสำหรับชาร์จไฟด้วยผ้าแห้ง - ตรวจสอบให้แน่ใจว่าหุ่นยนต์และแท่นชาร์จเชื่อมต่อกันผ่านหน้าสัมผัสสำหรับชาร์จไฟ
หุ่นยนต์ไม่สามารถกลับสู่แท่นชาร์จได้	- นำวัตถุออกจากบริเวณโดยแท่นชาร์จภายในระยะ 0.5 ม. ทางด้านซ้ายและขวา และภายในระยะ 1.5 ม. ด้านหน้า - ตรวจสอบให้แน่ใจว่าหุ่นยนต์เริ่มทำความสะอาดจากแท่นชาร์จโดยไม่มีการเคลื่อนที่อย่างผิดปกติ - เมื่อหุ่นยนต์อยู่ใกล้แท่นชาร์จ หุ่นยนต์จะกลับเข้าที่ได้เร็วขึ้น แต่หากแท่นชาร์จตั้งอยู่ห่างออกไป หุ่นยนต์จะใช้เวลาในการกลับเข้าที่นานขึ้น โปรดรอระหว่างที่หุ่นยนต์กลับเข้าที่ - ทำความสะอาดหน้าสัมผัสสำหรับชาร์จไฟด้วยผ้าแห้ง
ไม่มีการดำเนินการตามกำหนดเวลาการทำความสะอาด	- ตรวจสอบให้แน่ใจว่าได้เปิดหุ่นยนต์แล้ว กดปุ่ม ON-OFFค้างไว้ 5 วินาทีจนกว่าไฟหุ่นยนต์จะติด - ตรวจสอบให้แน่ใจว่าได้ตั้งกำหนดเวลาทำความสะอาดในแอปพลิเคชันอย่างถูกต้องในเวลาที่ต้องการ และได้บันทึกกำหนดเวลาการทำความสะอาด - ตรวจสอบว่าระดับแบตเตอรี่ต่ำเกินไปที่จะเริ่มทำความสะอาดหรือไม่ - หุ่นยนต์จะไม่เริ่มทำความสะอาดตามกำหนดเวลาในขณะที่กำลังดำเนินการ - ตรวจสอบว่าถ่วงเก็บฝุ่นนั้นติดตั้งอย่างถูกต้องหรือไม่
การดูดฝุ่นมีเสียงหรือทำงานด้วยเสียงดังมากขณะทำความสะอาด	- ตรวจสอบช่องดูดเพื่อหาสิ่งกีดขวาง - เทฝุ่นออกจากช่องเก็บฝุ่น - ทำความสะอาดตัวกรอง - ตรวจสอบว่าแผ่นกรองเปียกเนื่องจากน้ำหรือของเหลวอื่นๆ บนพื้นหรือไม่ ปล่อยให้แผ่นกรองแห้งสนิทโดยธรรมชาติก่อนใช้งาน - ตรวจสอบว่าถ่วงเก็บฝุ่นนั้นติดตั้งอย่างถูกต้องหรือไม่ - ตรวจสอบว่ามีสิ่งแปลกปลอมอุดตันแปรงหลักหรือแปรงด้านข้างหรือไม่ ถอดแปรงหลักหรือแปรงด้านข้างออกและทำความสะอาด

ข้อผิดพลาด	วิธีแก้ปัญหา
แปรงหลักไม่หมุน	- ตรวจสอบว่ามีสิ่งแปลกปลอมอุดตันแปรงหลักหรือไม่ นำแปรงหลักออกและทำความสะอาด - ตรวจสอบว่าได้ติดตั้งแปรงหลักและฝาปิดแปรงอย่างถูกต้องหรือไม่
แปรงด้านข้างหลุดออกระหว่างทำความสะอาด	ติดตั้งแปรงด้านข้างไม่ถูกต้อง แปรงด้านข้างจะติดตั้งอย่างถูกต้องเมื่อคุณได้ยินเสียงคลิก
ผ้าถูพื้นไม่หมุน	- อาจมีวัตถุแปลกปลอมติดอยู่ที่ผ้าถูพื้น โปรดนำออก - ติดตั้งผ้าถูพื้นไม่ถูกต้อง ผ้าถูพื้นจะติดตั้งอย่างถูกต้องเมื่อคุณได้ยินเสียงคลิก
การทำงานหรือเส้นทางทำความสะอาดของหุ่นยนต์ผิดปกติ	- ทำความสะอาดเซนเซอร์ด้วยผ้าแห้งอย่างระมัดระวัง - ปิดสวิตช์หุ่นยนต์โดยกดปุ่ม ON-OFF ค้างไว้ 5 วินาที รอเป็นเวลา 30 วินาทีและเปิดสวิตช์โดยกดปุ่ม ON-OFF ค้างไว้ 5 วินาทีเพื่อรีเซ็ตการหุ่นยนต์
หุ่นยนต์ไม่สามารถเชื่อมต่อกับเครือข่าย Wi-Fi ของคุณได้	- หากคุณยังคงพบข้อผิดพลาดหลังจากพยายามหลายครั้งแล้ว โปรดดำเนินการดังนี้ - ตรวจสอบว่าเด้ารับที่เสียบปลั๊กฐานหุ่นยนต์อยู่มีไฟเข้า - ตรวจสอบว่าหุ่นยนต์อยู่ใกล้กับเราเตอร์ Wi-Fi มากพอ - ตรวจสอบว่าเราเตอร์ Wi-Fi รองรับย่านความถี่ 2.4GHz และ 802.11 b/g/n เนื่องจากอุปกรณ์นี้ไม่รองรับความถี่ 5GHz - ตรวจสอบว่าการเชื่อมต่อใหม่อัตโนมัติกับเครือข่าย Wi-Fi ภายในบ้านของคุณถูกต้องแล้ว - เปิดใช้งานอินเทอร์เน็ตบนสมาร์โฟนของคุณ - อย่าใช้ VPN (เครือข่ายส่วนตัวแบบเสมือน) - ลองอีกครั้งโดยเลือกเครือข่าย Wi-Fi ที่ถูกต้องและใส่รหัสผ่านที่ถูกต้อง - นำโทรศัพท์ของคุณไว้ใกล้กับหุ่นยนต์และแท่นชาร์จจนกว่าจะสิ้นสุดกระบวนการจับคู่ - หลังจากพยายามแล้วหลายครั้งแล้ว ให้ปิดและเปิดเครื่องอีกครั้ง - รีเซ็ตหุ่นยนต์ด้วยการกดปุ่ม « HOME » ค้างไว้ 15 วินาที - กดปุ่ม « HOME » และปุ่ม « ON-OFF » ค้างไว้ 5 วินาทีจนกว่าไฟของทั้งสองปุ่มจะกะพริบ จากนั้นลองดำเนินการอีกครั้ง - รีเซ็ตการสมาร์กโฟนของคุณ - ในกรณีที่หน้าตาค่าเตือนปรากฏขึ้นสำหรับการเชื่อมต่ออินเทอร์เน็ต โปรดรักษาการเชื่อมต่อกับหุ่นยนต์ไว้ - ตรวจสอบให้แน่ใจว่าไฟแสดงสถานะของแท่นชาร์จเป็นสีขาวเมื่อเสียบปลั๊กอยู่และเมื่อหุ่นยนต์ไม่ได้อยู่บนแท่นชาร์จ
แผนที่สูญหาย	แผนที่อาจสูญหายหากมีการเคลื่อนย้ายหุ่นยนต์ไปยังตำแหน่งอื่นด้วยมือในระหว่างการทำงานสะอาด หรือหากสภาพแวดล้อมภายในบ้านมีการเปลี่ยนแปลง (เฟอร์นิเจอร์ถูกเคลื่อนย้าย) โปรดรีเซ็ตการแผนที่โดยเริ่มต้นการสำรวจใหม่ในแอป หรือเริ่มต้นเซชันการทำความสะอาดใหม่จากแท่นชาร์จ

ข้อผิดพลาด	วิธีแก้ปัญหา
หุ่นยนต์จะกลับไปแท่นชาร์จก่อนเสร็จสิ้นการทำความสะอาด	- ระดับแบตเตอรี่อาจต่ำเกินกว่าจะทำความสะอาดให้เสร็จสิ้น หุ่นยนต์จะกลับไปแท่นชาร์จเพื่อชาร์จแบตเตอรี่ เมื่อแบตเตอรี่เต็ม หุ่นยนต์จะทำความสะอาดต่อจากจุดที่ค้างไว้เพื่อทำความสะอาดให้เสร็จสิ้น - หุ่นยนต์อาจไม่สามารถเข้าไปในบางพื้นที่ซึ่งมีเฟอร์นิเจอร์หรือสิ่งกีดขวาง ให้เก็บกวาดบริเวณเหล่านี้เพื่อให้หุ่นยนต์สามารถเข้าถึงได้ - ตรวจสอบโซนห้ามเข้าและโซนห้ามถูพื้นที่กำหนดไว้ในแอปพลิเคชัน เพิ่ม แก้ไข หรือลบโซนตามความต้องการของคุณ
หุ่นยนต์ติดขัด	- หุ่นยนต์อาจติดพันกับบางสิ่งบางอย่าง หรือนำวัตถุที่ขวางออกด้วยตนเองและเริ่มเซสชันการทำความสะอาดใหม่ด้วยการกดปุ่ม START - หุ่นยนต์อาจติดอยู่ที่ใต้เฟอร์นิเจอร์ที่มีความสูงใกล้เคียงกัน โปรดตั้งค่าอุปสรรคขัดขวางหรือโซนห้ามเข้าในแอป - หมุนและกดล้อเพื่อตรวจสอบว่ามีวัตถุแปลกปลอมเกี่ยวพันหรือติดอยู่หรือไม่ จากนั้นให้นำออก

