



92*90mm, 80克书纸


1 封面

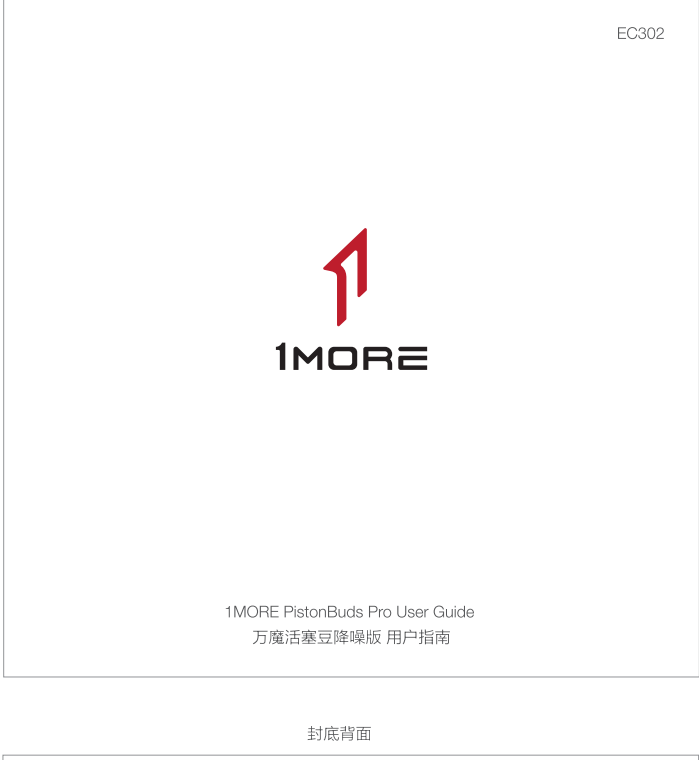


封底背面



3

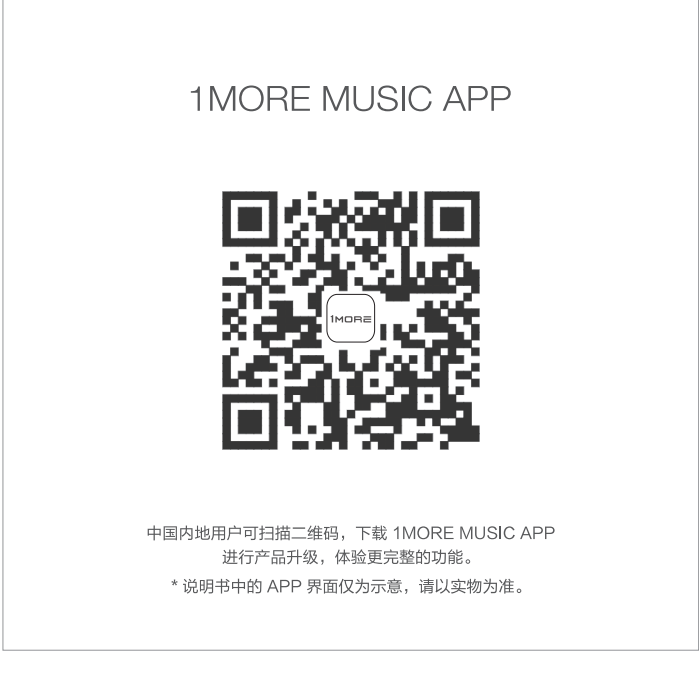


2 封面背面





封底



4

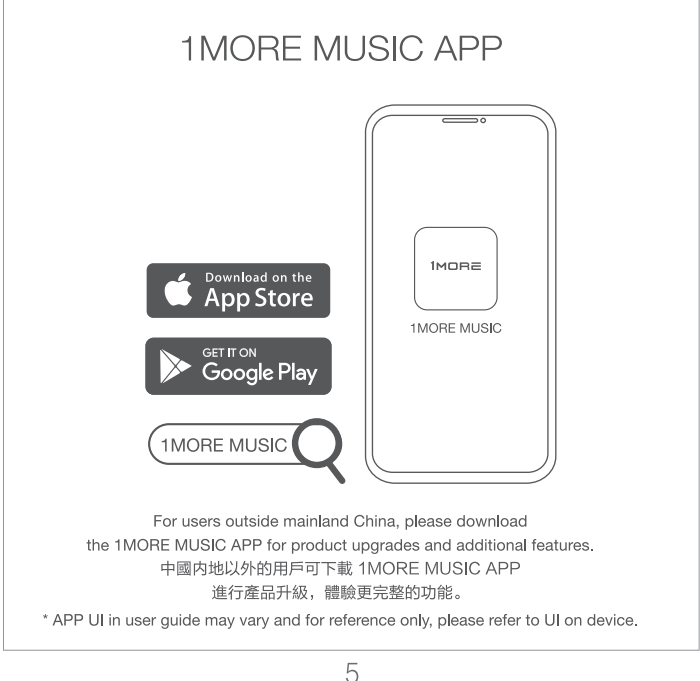

5

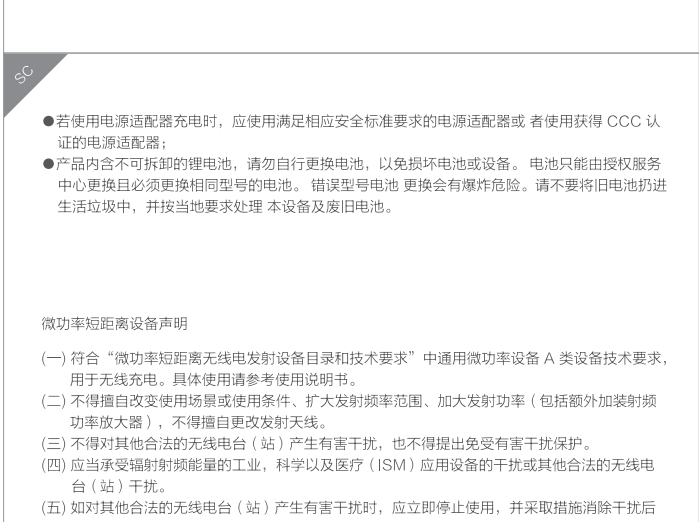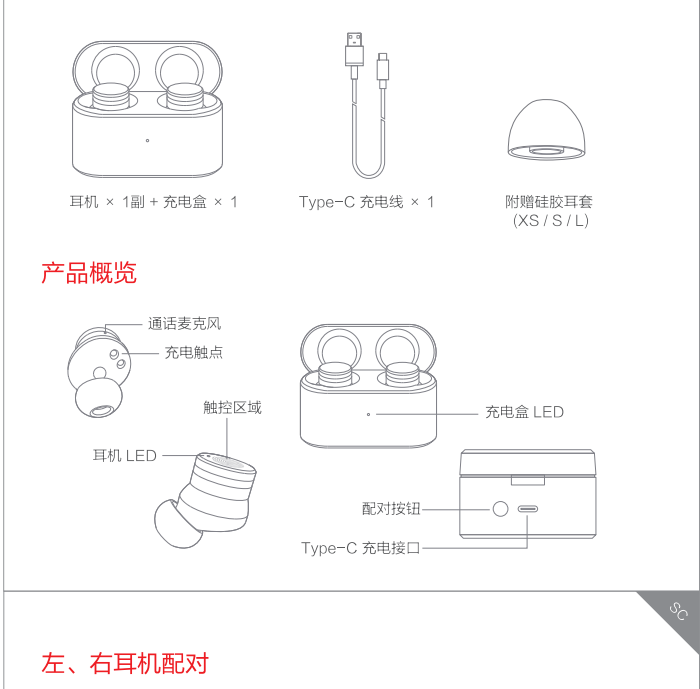

警告

- 请勿以任何理由进行、维修或改装耳机，否则可能会导致火灾甚至彻底损坏本产品；
- 请勿将设备置于温度过低或过高（0℃ 以下或者 45℃ 以上）的环境下；
- 请勿在大量天气下使用本产品，否则可能会导致设备工作异常，并增加触电的危险；
- 请勿用酒精及其它挥发性液体擦拭本产品；
- 请勿将本产品与液体接触；
- 遵守所在地区或国家的相关规定，驾车时请勿使用本产品；
- 请勿试图拆卸、修理或改本产品，否则可能导致火灾甚至彻底损坏本产品；
- 在使用本产品时，请将本产品的指示灯远离儿童和动物的眼睛；
- 请勿在大量天气下使用本产品，否则可能会导致设备工作异常，并增加触电的危险；
- 请勿拆卸、刺穿、压榨本产品或将其置于水中；
- 如果皮肤接触部位出现红肿迹象，请立即停止使用并寻求医疗救助；
- 为了防止可能出现出现的听力损伤，请勿长时间用高音量使用本产品；
- 为了防止可能出现出现的听力损伤，请勿长时间用高音量使用本产品；
- 本设备并非玩具，可能包含部分小零件，请将设备及其配件放置儿童接触不到的地方；
- 将电池放入火中或热烤箱中，或机械地粉碎或切割电池，可能导致爆炸；
- 将电池放在极高温的环境中，可能导致爆炸或易燃液体或气体泄漏；
- 极低电压下的电池，可能导致爆炸或易燃液体或气体泄漏；
- 产品信息和认证标志位于充电盒内；
- 不要将电池放入垃圾填埋场处理的垃圾中。处理电池时，应遵守当地法律法规；
- 更换设备不正确的方式，会破坏防护措施（如着火、爆炸、泄漏腐蚀性电解液等）；
- 不要将电池放入垃圾填埋场处理的垃圾中。处理电池时，应遵守当地法律法规；
- 只使用由合格制造商提供的合格充电器；


FAQ

1. 耳机无法开机，该如何解决？
请确认耳机有电，若耳机没有电，请充电 30 分钟以上再开机。
2. 耳机与手机蓝牙无法正常连接，连接时间久，该如何解决？
1) 如左、右耳机无法配对：仅一个耳机可与手机连接时，可将左、右耳机放入盒中，快速三击配对按钮，选择设备名，耳机即可与手机连接。
2) 如需与新手机连接，开机且非通话状态下，将左、右耳机放入盒中，快速三击配对按钮，在新手机蓝牙列表里选择耳机蓝牙名，耳机将与新手机进行蓝牙配对。
3. 安卓系统手机连接耳机成功，无法听到音乐，该如何解决？
在手机与手机连接成功后，点击所连接设备名称右边的图标，进入后确保“媒体音频”选项已被开启。
4. 在安卓系统手机连接耳机成功，无法通话，该如何解决？
在手机与手机连接成功后，点击所连接设备名称右边的图标，进入后确保“手机音频”选项已被开启。
5. 蓝牙耳机连接不稳定，出现断断续续，该如何解决？
1) 请尽量缩短设备与耳机之间的距离，避开障碍物；
2) 请远离强干扰源（Wi-Fi、GPS 等）；
3) 请确保手机天线不被遮挡。
6. 使用第三方音乐播放软件时，为什么部分播放功能与说明书定义不一致？
1) 手机软件与第三方软件因定义不同而导致耳机播放功能有差异；
2) 建议从正规渠道购买手机系统自带音乐播放器。
7. 调节耳机音量到最大后，声音仍很小，该如何解决？
在不需的手持设备系统内（如安卓），耳机音量加减功能与手机音量加减功能是独立操作状态，请根据您的具体需求，分别调节手机及耳机的音量。
8. 初次使用 1MORE MUSIC APP，无法正确连接对应的耳机，该如何解决？
安卓手机用户进入 1MORE MUSIC APP 页面时，请选择“始终允许”获取设备的定位信息。

* 更多更详细的产品实际使用问题解析，请登录 1MORE 官方网站“技术支持”项进行查询。


EN

Placement

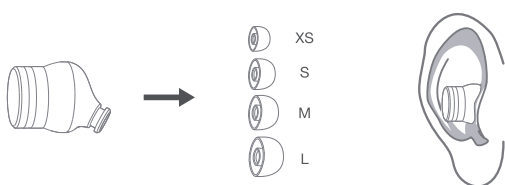

XS
S
M
L

Power

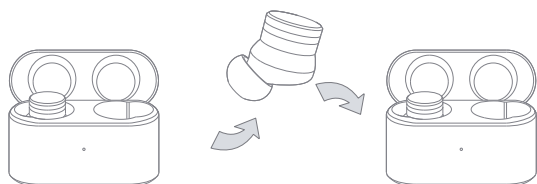

Power On: Open the charging case (with charge), the headphones will turn on automatically.

Power Off: Put the headphones back into the charging case and close the lid, they will automatically turn off and start charging.

* Above functions are available for either earbud in individual or Stereo mode.

EN

Charging Methods



With the Type-C cable, a full charge will take around 2 hours. A green light on the charging case indicates full battery.

With the charging case, a full charge will take around 1 hour. The red lights on the headphones will turn off indicating charging is complete.

Battery Status Display in 1MORE MUSIC APP

Battery status of headphones and charging case will be displayed in 1MORE MUSIC APP.



EN

Auto Pause/Play:

Playback will auto pause when it detects the earbuds are removed from the ears, it will auto play when it detects they are on again. Smart Playback can be turned off via 1MORE MUSIC APP.



Switch Listening Modes

The default setting of the earbuds are "ANC Off"



Switch Listening Modes: Long press the touch control area on either earbud.

EN

1MORE (1) Year Limited Warranty

1MORE warrants to the original retail purchaser that this product is to be free from defective materials and workmanship for a period of one year from the date of purchase if it is properly used and maintained. If this product proves defective in either material or workmanship, 1MORE, at its option, will (a) repair the product with new or refurbished parts, or (b) replace the product with an equivalent new or refurbished product, at no charge for parts or labor. If the product model is no longer available and cannot be repaired effectively or replaced with an identical model, 1MORE at its sole option may replace the unit with a current model of equal or greater value. In some cases, modification to the mounting surface may be required where a new model is substituted. 1MORE assumes no responsibility or liability for such modification. TO OBTAIN A REPAIR OR REPLACEMENT UNDER THE TERMS OF THIS WARRANTY, PLEASE RETURN TO THE ORIGINAL DEALER FIRST AND THE ORIGINAL DEALER SHALL REPAIR THE PRODUCT WITH NEW OR REFURBISHED PARTS OR REPLACE THE PRODUCT WITH AN EQUIVALENT NEW OR REFURBISHED PRODUCT. You will be required to submit a proof of purchasing details, including but not limited to a receipt or sales invoice. Return shipping for exchanges/repairs is the sole responsibility of the original retail purchaser.

Limitations:

- This limited warranty does not cover the failure of the product resulting from improper installation, misuse, abuse, accident, neglect, mishandling, or wear from ordinary use or environmental deterioration.
- This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product.
- This limited warranty is null and void for products not used in accordance with 1MORE's instructions.
- This limited warranty is null and void for products with altered or missing serial numbers and for products not purchased from an AUTHORIZED dealer.
- This limited warranty terminates if you sell or otherwise transfer this product to another party.

EN

FAQ

1. Why the headphones cannot be turned on?
Check if your headphones have enough battery life. If not, please charge them for at least 30 minutes.

2. Why the headphones cannot connect to my cellphone, or take a long time to connect?
1) If the left & right earbuds cannot be paired and only one earbud can be connected to the phone, please put the two earbuds back into the case, triple click the pairing button on the case, search for earbuds' name in your phones Bluetooth settings and tap to connect.
2) To connect with a new phone, put the earbuds back into the case, triple click the pairing button when the phone is powered on (no music or phone calls), search for earbuds' name in your phones Bluetooth settings and tap to connect.

3. Why the headphones cannot play music after successfully connecting to my Android device?
After pairing successfully, on the Bluetooth menu of your device, tap the icon on the right of your device name and make sure the "Media Audio" option is on.

4. Why there is no sound from the headphones while making phone calls after successfully connecting to my Android device?
After pairing successfully, on the Bluetooth menu of your device, tap the icon on the right of your device name and make sure the "Phone Audio" option is on.

5. Why the Bluetooth connection is not stable and causes some interruptions?
1) Try shortening the distance between your headphones and device. Avoid solid barriers in between.
2) Please keep away from strong interference sources, such as Wi-Fi and GPRS.
3) Please make sure the Bluetooth antenna of your device is not blocked.

6. Why some control functions do not match those in the manual while using third party music/video player Apps?
Your operating system and the third party music/video player apps may have different settings for the control functions. We recommend that you use the music/video player apps that your device has originally provided.

7. I turned the headphones up to the maximum volume, but why the actual volume still sounds low?
In different operating systems, especially some Android systems, the headphones and your device have separate volume control systems. Please adjust the volume controls on both the device and the headphones according to your preferences.

8. Why are my headphones not able to connect to 1MORE MUSIC APP for the primary use?
For Android users, please click "Allow all the time" to access to the location information of your device when entering 1MORE MUSIC APP. Or adjust this option in your settings for this app.

* For more detailed product FAQs, please visit the product support section under www.1more.com

EN

Warning

Replacement of a battery with an incorrect type that can defeat a safeguard (such as catching fire, explosion, leakage of corrosive electrolyte etc);

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

⎓ The symbol indicates DC voltage.

 RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2014/53/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

 To prevent possible hearing damage, do not listen at high volume levels for long periods.

EN

The SAR limit of USA (FCC) is 1.6 W/kg for head averaged over one gram of tissue. Device types EC302 (FCC ID: 2ASDIEC302) has also been tested with 0mm against this SAR limit.

IC regulatory conformance
This device complies with CAN ICES-003 (B)/NMB-003(B). This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
Cet appareil est conforme à la norme CAN ICES-003 (B)/NMB-003 (B). Cet appareil contient des émetteurs / récepteurs exempt(s) de licence qui sont conformes aux RSS exemptées de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes:
(1) Cet appareil ne doit pas provoquer d'interférences.
(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

The SAR limit of Canada (ICES) is 1.6 W/kg for head averaged over one gram of tissue. Device types EC302 (IC:24662-EC302) has also been tested with 0mm against this SAR limit.

EN

Inside The Box




Headphones x 1 Pair
Charging Case x 1

Type-C Charging Cable x 1

Silicone Ear Tips x 3 Pairs
(XS / S / L)

Product Overview

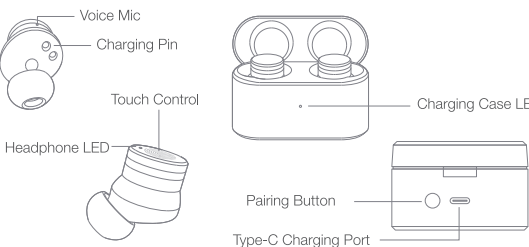

Voice Mic
Charging Pin

Touch Control

Headphone LED


Charging Case LED

Pairing Button

Type-C Charging Port

EN

Headphones Pairing

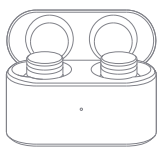

The Left and Right headphones will automatically pair to each other after the lid is open when they are in the case (with charge).

Bluetooth Pairing To The Device

1. To connect to your device during first use, turn the headphones on to enter pairing mode. The headphones will enter sleep mode if not paired to a device within 3 minutes.
2. After the first successful pairing, headphones will automatically connect to your device when the case lid is opened.
3. To pair with a new device: put headphones back into the case, click the pairing button for 3 times when powered on (no music or phone calls) to re-enter pairing mode.



* Above functions are available for either earbud in individual or Stereo mode.

EN

Battery Notification




Low Battery Alert: When there is 25-30 minutes of use time left, you will hear a voice prompt.

Tap the touch control area of the headphones to control phone calls and music playback.

Touch Controls

Tap the touch control area of the headphones to control phone calls and music playback.

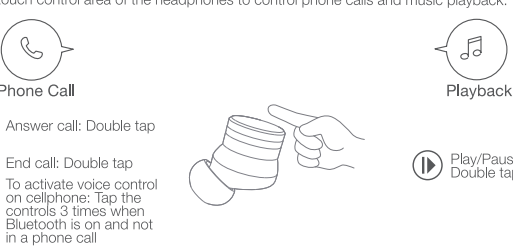

Phone Call

Answer call: Double tap

End call: Double tap

To activate voice control on cellphone: Tap the controls 3 times when Bluetooth is on and not in a phone call

Playback

Play/Pause: Double tap

* Reject Call: Long press 2 seconds.
* To control the music playback or volume adjustment, please set it up on 1MORE MUSIC APP or operate on the connected mobile phone or devices.
* Above functions are available for either earbud in individual or Stereo mode.
* Above functions may vary with different devices.

EN

Multiple noise cancellation options are available via 1MORE MUSIC APP:

① ANC Mode: suitable for aviation, highspeed train, metro etc.

② Pass-through Mode: Lets in environmental sounds so you don't need to take out the earbuds to hear what is going on around you.

③ WNR (Wind Noise Resistance): To lessen the annoying wind noise.

Once the Listening mode has been set up in the APP, they will be memorized by the headphones allowing you to switch modes based on your settings.

EN

Extra Functions

1. If the earbuds cannot pair normally when powered on, open the case and quickly click the pairing button 3 times to reset the Left & Right pairing process.

2. Unpair the Connected Device: Put the earbuds into the case, press and hold the pairing button for 8 seconds.

3. OTA Firmware Update:
It can be synchronously upgraded via the 1MORE MUSIC APP while the Left and Right earbuds are connected to each other with at least 50% battery.

* Functions of 1MORE MUSIC APP may vary with different cellphones or operating systems. For more details, please contact our customer service.

EN

We Appreciate Your Business

We know you will enjoy new 1MORE headphones as much as we do. At 1MORE, we value your satisfaction. If you would like more details on this product or any of our other products, please visit us online by scanning the QR code. Go to www.1more.com and sign up for VIP, and 1MORE will treat you like one.

EN

Tips

1. Please read this instruction manual carefully and retain for future reference.
2. Please fully charge the battery before first use.
3. If the headphones have been unused for more than 3 months, we recommend that you charge them. This will improve battery capacity.
4. Only use charging cables and adapters that are FCC (Federal Communications Commission) approved.
5. In dry environments, static electricity may numb your ear. This is not related to the quality of the product.

EN

Safety Information

1. Never disassemble the headphones. There are no user-serviceable parts inside.
2. Do not expose the headphones to temperatures below 32 °F (0 °C) or to temperatures above 113 °F (45 °C).
3. Do not use the headphones in a thunderstorm. This could prevent the headphones from working properly, and also increase your chance of being electrically shocked.
4. Do not use oil or any volatile liquid to clean this product.
5. Do not listen at high volumes for extended periods of time.
6. Do not use the headphones in traffic. Do not use the headphones any time it would be dangerous to be unaware of noises around you.
7. Adult supervision is required for children of age 6 and under.

EN

WEEE

Electrical and electronic equipment, parts and batteries marked with this symbol must not be disposed of with normal household wastage, it must be collected and disposed of separately to protect the environment.

Your 1MORE retailer will advise you of the correct way of disposal in your country.

EN

Safety Caution

Do not expose batteries or battery packs to excessive heat such as sunshine, fire or the like.

EN

CE

Declaration of Conformity Hereby, TiniLab Acoustic Technology Limited declares that the radio equipment type 1MORE PistonBuds Pro Wireless Headphones of EC302 is in compliance with Directive 2014/53/EU. The full text of the UK declaration of conformity is available at the following internet address:www.1more.com

Hereby, TiniLab Corporation declares that the radio equipment type Wireless Headphones is in compliance with UK Radio Equipment Regulations (SI 2017/1206). The full text of the UK declaration of conformity is available at the following internet address: www.1more.com

EU regulatory conformance:
RF exposure information: The EIRP power of the device at maximal case is below the exempt condition, 20mW specified in EN62479: 2010.
RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation(1999/519/EC).
Declaration for EU Compliance
Operation Frequency/Max. EIRP: 2402-2480MHz, 10 dBm.

EN

FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information
Unique Identifier:
Trade Name: 1MORE
Model No.: EC302
Responsible Party – U.S. Contact Information
1MORE USA, Inc.
Address: 10225 Barnes Canyon Road, Suite A202, San Diego, California, 92121
Tel: 1-855-551-6673
E-Mail: support@1moreusa.com

EN

Name: Wireless Earphones
Model: EC302
Headphone Weight: 4.5 g
Case Weight: 30.5 g
Product Weight: 39.5 g
Headphone Size: 17×18×21.4 mm
Case Size: 58×23×37.7 mm
Headphone Battery Capacity: 38 mAh
Case Battery Capacity: 410 mAh
Headphone Charging Time: 1h
Case Charging Time: 2h
Playtime* (ANC On):
Headphone Fully Charged: 5h
Headphones & Case Fully Charged: 20h


Playtime* (ANC Off):
Headphone Fully Charged: 7.5h
Headphones & Case Fully Charged: 30h
Impedance: 16 Ω
Wireless Range: 10 m
Bluetooth: Bluetooth® 5.2
Bluetooth Protocol: HFP / A2DP / AVRCP
Input: 5V==0.5A
Working Temperature: 0 °C ~ 45 °C
Frequency Band: 2.400 GHz ~ 2.4835 GHz

The specifications are acquired from laboratory tested data.
* The playback time, tested under the laboratory condition of AAC format and 50% volume, may vary with different device setting, environments, usage and other factors.

Manufacturer: TiniLab Corporation
Address: No. 3333, Xianglian Avenue, Tower A, 35th Floor, Tanglang City, Nanshan District, Shenzhen, China
Product information can be found at www.1more.com
Made in China


TC

耳機佩戴

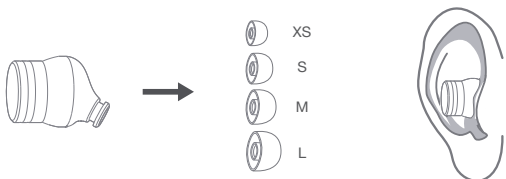

XS
S
M
L

開、關機

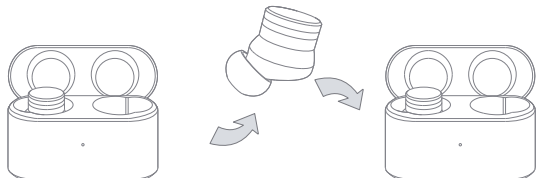

在充電盒有電的狀態下，打開盒蓋，耳機即開機。

關機：將耳機放入盒中，關閉盒蓋，即關機充電。

* 上述功能適用於單、雙模式使用時的任一耳機。

TC

充電




使用 Type-C 充電線充電，一次充滿需約 2 小時。滿電時充電盒 LED 綠燈長亮。

使用充電盒給耳機充電，一次充滿需約 1 小時。當充滿電時，耳機 LED 燈熄滅。

1MORE MUSIC APP 電量顯示

耳機與充電盒的電量狀態將在 1MORE MUSIC APP 中顯示。

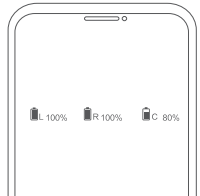

TC

自動暫停 / 播放：

播放時取下耳機，播放自動暫停；再次戴上，自動續播。1MORE MUSIC APP 可關閉“自動播放”功能。



切換聆聽模式

左、右耳機的出廠設置均為：ANC Off



可長觸左/右耳機觸控區域進行切換

TC

保固範圍

1MORE保證消費者自初次購買之日起一年內，對1MORE產品在正常使用途中材料和工藝上的缺陷進行保修。在保固範圍內，1MORE會直接受理您的申訴（包括從1MORE授權的經銷商處購買的1MORE產品）。在保固期內，1MORE將自行決定修理或更換有缺陷產品或按照購買價格進行退款。本保固不適用於天災意外或使用、保養、維修不當，或是其他不是由材料、工藝上的缺陷引起的情况。完整的保固細節請登錄www.1more.com 查看。

感謝您的購買


我們知道您會享受並喜愛1MORE耳機。在1MORE 我們格外重視您的滿意度，如果您想要了解更多產品的訊息請掃描背面的二維條碼，進入www.1more.com 登錄成為VIP，1MORE將提供您尊榮的服務。

NCC

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前述合法通信，指依電信管理法規定作業之無線電通信。
低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

TC

包裝內容

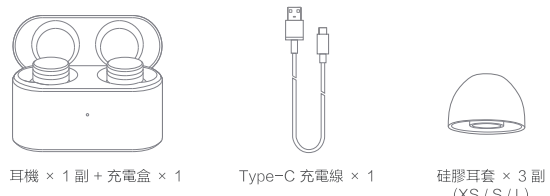


耳機 × 1 副 + 充電盒 × 1

Type-C 充電線 × 1

硅膠耳套 × 3 副 (XS / S / L)

產品概覽

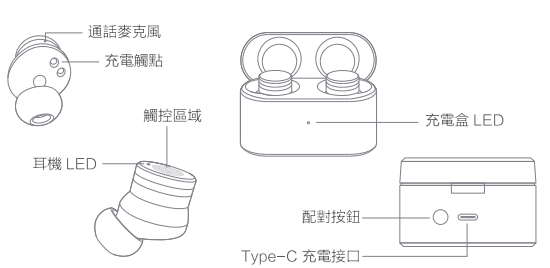


通話麥克風
充電觸點
耳機 LED
觸控區域
充電盒 LED
配對按鈕
Type-C 充電接口

TC

左、右耳機配對

在充電盒有電狀態下，如左、右耳機置於盒內，打開盒蓋，左、右耳機即自動配對。

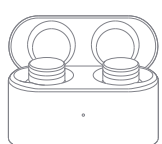

TC

耳機與藍牙設備配對連接

- 首次連接，開機後即進入搜索配對。如 3 分鐘後無法正常連接，耳機將進入休眠模式。
- 已連接過設備的耳機，將自動與該設備進行藍牙連接。
- 耳機與新設備連接：將耳機置於盒中，非通話狀態下，三擊配對按鈕，即可與新設備進行配對連接。

* 上述功能適用於單、雙模式使用時的任一耳機。



TC

電量提示



低電量提示：當耳機還能使用約 25 ~ 30 分鐘時，耳機將播放提示音。

當充電盒的電量不足以給耳機供電時，充電盒的 LED 將閃紅燈。

TC

觸控功能

觸摸耳機感應區域可操控通話和播放功能。



通話

接聽：短觸 2 次

掛斷：短觸 2 次

手機語音助手：藍牙連接，非通話時短觸 3 次



播放

播放 / 暫停：短觸 2 次

* 拒接電話：長觸 2S 。
* 選曲及音量調節，可通過 1MORE MUSIC APP 進行設置或在手機等設備端進行操作。
* 上述功能適用於單、雙模式使用時的任一耳機。
* 以上功能定義因設備不同可能略有差異。

TC

其它功能

在 1MORE MUSIC APP 中可切換選擇更多降噪模式：

- ① 降噪：適用於航空、高鐵、地鐵等場景。
- ② 通透模式：戴著耳機，也不錯過外界聲音信息。
- ③ 抗風噪：有效減少風噪干擾。

在 APP 中設置聆聽模式後，該模式將記憶於耳機中，此時長觸耳機切換聆聽模式將以 APP 設置過的模式為準。

其它功能

1. 如開機時，左、右耳機無法正常配對，打開盒蓋，3 連擊充電盒配對按鈕，進入強制配對。
2. 清除手機連接記錄：
將左、右耳機放入充電盒中，長按充電盒配對按鈕 8 秒，強制清除手機連接記錄。
3. OTA 韌體升級：左、右耳機藍牙連接且電量不低於 50% 時，可直接在 1MORE MUSIC APP 上同步升級。

* 1MORE MUSIC APP 的所有功能，在不同手機及操作系統上或有不同，請聯繫客服了解更多詳情。

TC


產品名稱：無線耳機
型號： EC302
耳機重量（單個）： 4.5 g
充電盒重量： 30.5 g
整機重量： 39.5 g
耳機尺寸： 17 × 18 × 21.4 mm
充電盒尺寸： 58 × 23 × 37.7 mm
耳機電池容量（單個）： 38 mAh
充電盒電池容量： 410 mAh
耳機充電時間： 1 小時
充電盒充電時間： 2 小時
播放時長*（降噪開）：
單耳滿電： 5 小時
搭配充電盒滿電： 20 小時

播放時長*（降噪開）：
單耳滿電： 7.5小時
搭配充電盒滿電： 30 小時
喇叭阻抗： 16 Ω
通訊距離： 10 米（在空曠環境下）
藍牙規範： Bluetooth® 5.2
藍牙協議： HFP / A2DP / AVRCP
輸入： 5V=0.5A
工作溫度： 0℃ ~ 45℃
頻率波段： 2.400 GHz ~ 2.4835 GHz


規格參數為實驗室測試數據。
* 播放時長為 AAC 格式、50% 音量條件下的實驗室測算數據，依設備設置、環境、使用情況及諸多其他因素可能有所差異。

製造商：萬魔聲學股份有限公司
地址：深圳市南山區留仙大道 3333 號塘朗城 A 座 35 樓

イヤホンの装着方法

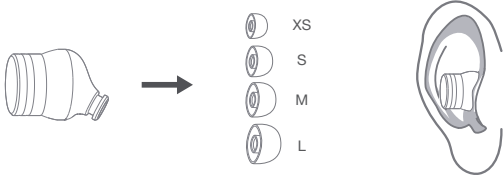

パワーオン/オフ

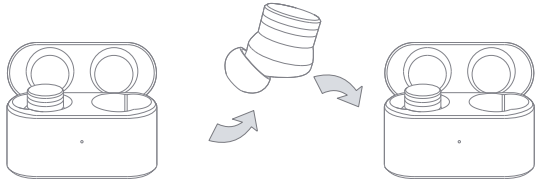

パワーオン: 充電ケースを開けるとヘッドホンの電源が自動的に入ります。

パワーオフ: イヤホンを充電ケースに戻し、ケースの蓋を閉めると、イヤホンが自動パワーオフになります。

* 上記の操作方法は片側イヤホンの単体使用時と左右ペアリング使用時の両方に適応します。

充電



充電ケースの充電方法:
充電ケースを充電するには、付属のUSB Type-C ケーブルをご使用下さい。
およそ2時間で充電が完了します。充電完了すると充電ケースのLEDが緑色に点灯します。

イヤホンの充電方法:
充電ケースにイヤホンを入れると充電が開始され、イヤホンのLEDが赤色に点灯します。
フル充電にはおよそ60分かかります。満充電後、イヤホンのLEDが消灯します。

1MORE MUSIC アプリ バッテリー残量表示

イヤホンと充電ケースのバッテリー残量は1MORE MUSIC アプリに表示されます。



自動再生 / 停止:

音楽再生時、イヤホンを耳から取り外すと、音楽の再生が自動で停止します。
音楽停止時、イヤホンを耳に装着すると、音楽の再生が自動で開始します。
これらの機能は1MORE MUSIC アプリでON/OFF設定可能。



モード切替

イヤホンの初期設定では「ANC Off」になっています。



リスニングモードの切り替え: 左右イヤホンどちらかのタッチコントロールエリアを長押しします。


保証規定

お買い上げ製品は、一般家庭内での使用を目的としております。
正しい使用方法に従った上で製品が正常に動作しなかった場合、下記保証規定により、お買い上げ日より1年間の無料修理をさせていただきます。
お買い上げの際の領収書またはレシートは、保証開始日の目安とさせていただきます。修理の際にはこれらのご提示が必要となりますので、大切に保管して頂きますようお願い致します。
なお、保証期間経過後も修理対応はさせていただきますが、その際は有償修理となりますので、予めご了承ください。
免責事項、保証対象外部材などについては、1MOREの公式サイトwww.1more.comにてご確認のほど、お願い申し上げます。

お買い上げありがとうございます

1MORE製品をお買い上げ頂き有難う御座います。商品についての最新情報は最後のページのQRコードをスキャン、または1MORE公式サイトwww.1more.comにてご確認ください。
ご登録頂くと限定の特典、コンテンツを提供させて頂いております。

内容物

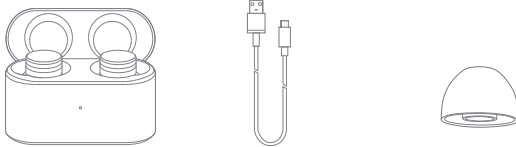


イヤホン本体 × 1組
充電ケース × 1


Type-C 充電ケーブル × 1

シリコン製イヤーチップ × 3ペア
(XS / S / L)

製品紹介

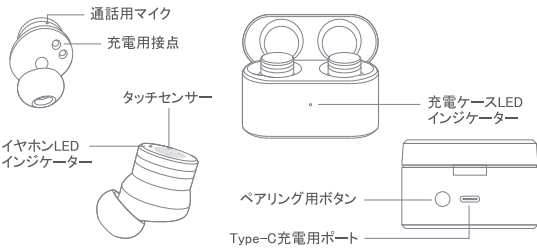

左、右イヤホンのペアリング

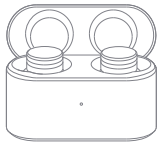

イヤホンが充電ケースに入った状態で、ケースの蓋を開けると、イヤホンが自動でパワーオンとなり、自動で左右をペアリングします。(充電ケースにバッテリー残量があることが前提となります。)

イヤホンとBluetooth機器とのペアリング

- 初回使用時、パワーオンと同時にペアリングモードに入り、親機イヤホンのLEDが赤色と青色が交互に点滅します。(その際、3分以内にデバイスとペアリングが完了しない場合は自動でスリープモードになります。)
- 一度デバイスとのペアリングに成功している場合、パワーオンと同時にペアリングモードに入り、記録済みデバイスに接続します。
- イヤホンが充電ケースに入った状態で、充電ケースのペアリング用ボタンを3回押すと、イヤホンは記録済みデバイスに接続せず、ペアリングモードに入ります。(通話中を除く)



* 上記操作はイヤホンの単体使用、及び左右ペアリング使用、両方に適応します。

バッテリー残量通知



バッテリー残量が少ない場合の通知: イヤホンの使用時間が残り25 ~ 30分になると、イヤホンから提示音がアナウンスされます。



充電ケースのバッテリー残量の通知: 充電ケースのバッテリー残量が左右のイヤホンに必要な充電量より少ない場合、充電ケースのLEDが1秒間に1回、赤色に点滅します。LEDが1秒毎に点滅し、10回行われます。

タップ操作

バッテリー残量が少ない場合の通知: イヤホンの使用時間が残り25 ~ 30分になると、イヤホンから提示音がアナウンスされます。



応答: 2回タップ



再生/停止: 2回タップ




その他の機能


- パワーオン時、左右のイヤホンが正常にペアリングできない場合、充電ケースのペアリングボタンを3回クリックすると、再びペアリングモードに入ります。
- 左右イヤホンのペアリング記録をクリアする方法:
両イヤホンを充電ケースに入れ、充電ケースのペアリングボタンを約8秒間長押し。
- OTAファームウェアのアップデートを行う場合:
ヘッドホン左右のバッテリーが50%以上で接続されている状態であれば、「1MORE MUSIC APP」を介して同期的にアップデートすることができます。

* 1MORE MUSIC APPは接続機器によってファームウェアアップデートできない場合がございます。お困りの方、お気軽にカスタマサポートにご連絡くださいませ。


Déballez la boîte

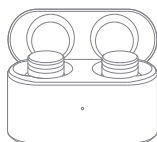

Vue d'ensemble du produit

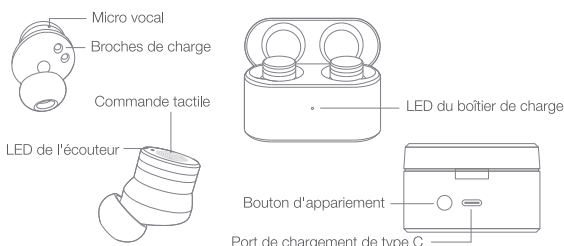

Couplage des écouteurs gauche et droit

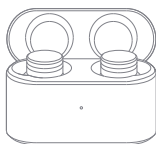

Jumelage de casques avec des périphériques Bluetooth

1. Pour vous connecter à votre appareil lors de la première utilisation, mettez les écouteurs en marche pour passer en mode d'appairage. Les écouteurs passeront en mode veille s'ils ne sont pas appairés à un appareil dans les 3 minutes.
2. Après le premier couplage réussi, les écouteurs se connecteront automatiquement à votre appareil.
3. Pour effectuer un jumelage avec un nouvel appareil: remettez les écouteurs dans leur étui, cliquez trois fois sur le bouton de jumelage lorsque ce dernier est activé (pas de musique ni d'appels téléphoniques) pour revenir en mode de jumelage.



Conseils concernant la batterie



Commandes tactiles

Avertissement de batterie faible: Lorsqu'il reste 25-30 minutes de temps d'utilisation, vous entendrez un message vocal.



-  Répondre fin à l'appel: double-cliquez
-  Mettre fin à l'appel: double-cliquez
-  Pour activer le contrôle vocal sur le téléphone portable : Tapez 3 fois sur les commandes lorsque Bluetooth est activé et qu'il n'y a pas d'appels téléphoniques




- * Rejeter l'appel : Appuyez longuement pendant 2 secondes.
- * Pour changer de chanson ou contrôler le volume, veuillez faire la configuration sur 1MORE MUSIC APP ou les faire fonctionner sur un téléphone ou un appareil mobile couplé.
- * Les fonctions ci-dessus sont disponibles pour les écouteurs en mode individuel ou stéréo.
- * Les fonctions ci-dessus peuvent être différentes sur différents téléphones.

Fonctions supplémentaires


1. Si les écouteurs ne peuvent pas se coupler normalement à la mise sous tension. Ouvrez le boîtier, cliquez rapidement 3 fois sur le bouton de couplage du boîtier pour lancer la recherche initiale du couplage Gauche et Droit.
2. Pour dissocier le téléphone portable:
Mettez les deux écouteurs G & D dans le boîtier, puis appuyez sur le bouton de couplage du boîtier pendant 8 secondes.
3. Mise à jour du micrologiciel OTA :
Vous pouvez effectuer une mise à jour synchrone via l'application 1MORE MUSIC APP lorsque les écouteurs gauche et droit sont connectés l'un à l'autre avec une batterie à 50% de charge au minimum.

* Les fonctions de 1MORE MUSIC APP peuvent varier selon les téléphones portables ou les systèmes d'exploitation. Pour plus de détails, veuillez contacter notre service clientèle.

Placement

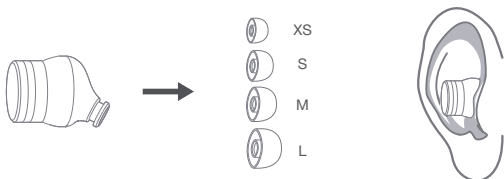

Alimentation

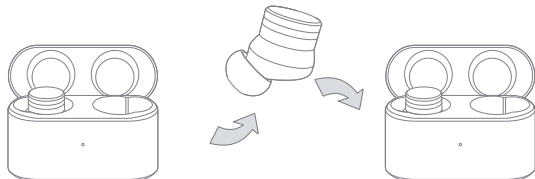


* Les fonctions ci-dessus sont disponibles pour les écouteurs en mode individuel ou stéréo.

Chargement



Affichage de l'état de la batterie dans 1MORE MUSIC APP

L'état de la batterie des écouteurs et du boîtier de chargement sera affiché dans 1MORE MUSIC APP.

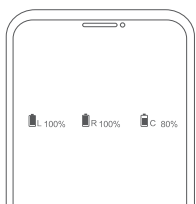

Auto Pause / Lecture:

Pause automatique lors de la lecture lorsque vous vous les détachez des oreilles, lecture automatique quand vous les remettez.
Pour désactiver la lecture automatique, connectez les écouteurs à l'application 1MORE MUSIC.



Changer les modes d'écoute

Le réglage par défaut des écouteurs est "ANC Off"



Garantie Limitée

Les produits 1MORE sont garantis contre les défauts de matériaux et de fabrication pour une période d'un an à partir de la date d'achat au détaillant lors d'un usage en conformité avec le mode d'emploi de 1MORE. Sous cette garantie, votre requête peut être dirigée vers 1MORE, même si vous avez acheté le produit à un tiers agréé. Durant la période de garantie, 1MORE, en tant que seule option, réparera ou remplacera les pièces d'origines défectueuses ou manquantes. 1MORE ne sera pas responsable des dommages résultant d'accidents, ou d'un usage, d'une maintenance ou réparation incorrects, ou d'autres causes qui ne sont pas des défauts de matériaux ou fabrication. Pour les détails complets de la garantie, veuillez visiter le site www.1more.com

Nous Apprécions Votre Business

Nous savons que vous profiterez du nouvel Ecouteur Piston 1MORE comme nous le faisons. A 1MORE, nous apprécions votre satisfaction.

Si vous voulez plus de détails sur ce produit ou n'importe quel autre produit, veuillez nous visiter en scannant le code QR ci-dessous.

Allez sur le site www.1more.com et inscrivez-vous comme VIP et 1MORE vous considérera en tant que tel.

CE

Par la présente, Tiinlab, déclare que le casque sans fil est conforme à l'exigence essentielle et aux dispositions pertinentes de la directive 2014/53/EU.

UA

Як носити

XS

S

M

L

Живлення

Ввімкнення живлення: Відкрийте чохол для зарядки (з зарядкою), навушки вмикаються автоматично.

Вимкнення живлення: Покладіть навушки назад до зарядного кейсу та закрийте кришку, вони автоматично вимкнуться та розпочнеться зарядка.

* Вищевказані функції доступні при індивідуальному використанні навушника, коли він використовується як самостійний пристрій, або коли використовуються обидва навушки, в стерео-режимі.

UA

Заряджання

Заряджання зарядного кейсу за допомогою Type-C кабелю. Повна зарядка триватиме близько 2 години, а зелений індикатор вказує на те, що батарея повністю заряджена.

Заряджання навушників за допомогою зарядного кейсу. Повна зарядка триватиме близько 1 год. Після завершення зарядки червоний індикатор згасне.

Відображення стану батареї в музичному додатку 1MORE

Стан батареї навушників і зарядного футляра буде відображатися в додатку 1MORE MUSIC.

IL 100%

R 100%

C 80%

UA

Автоматичне Відтворення/Пауза:

Відтворення музики призупиниться автоматично, коли ви дістанете навушник з вуха. Коли ви знов вставите навушник у вухо, відтворення музики відновиться. Щоб вимкнути функцію автоматичного відтворення, підключіть навушки до додатка музики 1MORE.

Перемикання режимів прослуховування: на будь-якому з навушників, натисніть і утримуйте сенсорну область керування.

UA

1MORE ГАРАНТІЯ ПРОДУКЦІЇ

• Ця обмежена гарантія не поширюється на відмову виробу внаслідок неправильного встановлення, неправильного використання, зловживання, нещасного випадку, недбалого ставлення, неправильного поводження або зносу від звичайного використання або погіршення стану навколишнього середовища.

• Ця обмежена гарантія не поширюється на косметичні пошкодження, у тому числі на пошкодження фарби, або на пошкодження інших компонентів або приміщень, які можуть виникнути з будь-якої причини з виходу з ладу виробу.

• Ця обмежена гарантія є недійсною для товарів, які не використовуються відповідно до інструкцій 1MORE.

• Ця обмежена гарантія є недійсною та недійсною для виробів із зміненими або відсутніми серійними номерами та для продуктів, які не придбані у авторизованого дилера.

• Ця обмежена гарантія припиняється, якщо ви продаєте або іншим чином передаєте цей продукт іншій стороні.

UA

Комплектація

Навушки x 1 пара

Зарядний кейс x1

Type-C Зарядний кабель x 1

Силиконові амбушюри (XS / S / L)

Огляд товару

Мікрофон для розмов

Зарядні контакти

Сенсорне управління

Навушки LED

Зарядний футляр LED

Кнопка сполучення

Порт зарядки Тип-C

UA

З'єднання навушників

Лівий та правий навушники автоматично з'єднуються між собою після відкриття кришки, коли вони знаходяться в кейсі (із зарядкою).

UA

Bluetooth з'єднання з пристроєм

1. Для того щоб підключитися до пристрою під час першого використання, увімкніть навушки, щоб увійти в режим сполучення. Навушки будуть у сплячому режимі, якщо протягом 3 хвилин їх не буде пов'язано з пристроєм.

2. Після першого підключення навушки автоматично підключатимуться до вашого пристрою.

3. Для утворення пари з новим пристроєм: покладіть навушки назад у футляр, натисніть кнопку пари 3 рази при включенні живлення (без музики або телефонних дзвінків), щоб знову увійти в режим утворення пари.

* Вищевказані функції доступні при індивідуальному використанні навушника, коли він використовується як самостійний пристрій, або коли використовуються обидва навушки, в стерео-режимі.

UA

Сповіщення про заряд батареї

Попередження про низький заряд батареї: ви почуєте звуковий сигнал, коли залишиться 25-30 хвилин використання.

Коли заряд кейсу низький, LED індикатор горить червоним.

Сенсорні елементи керування

Телефонними дзвінками та музикою можна керувати, торкнувшись зовнішньої сторони навушників.

Телефонні виклики

Відтворення музики

Відповіді виклик: двічі торкніться

Завершити виклик: двічі торкніться

Голосове управління на мобільному телефоні: торкніться 3 рази, коли Bluetooth увімкнено та немає телефонних дзвінків

Відтворення/Пауза: двічі торкніться

* Відхилення дзвінка: утримуйте і утримуйте 2 секунди.

* Для зміни звуку або управління гучністю, встановіть 1MORE MUSIC APP або використовуйте підключений мобільний телефон або пристрій.

* Вищевказані функції доступні при індивідуальному використанні навушника, коли він використовується як самостійний пристрій, або коли використовуються обидва навушки, в стерео-режимі.

* Вищевказані функції можуть відрізнятися, в залежності від пристрою.

UA

Додаткові функції

1. Якщо навушки не можуть встановити з'єднання один з одним під час ввімкнення, відкрийте зарядний кейс, та швидко тричі натисніть кнопку встановлення з'єднання на кейсі, аби розпочати з'єднання.

2. Роз'єднання навушників та пристрою: покладіть навушки у зарядний кейс, після чого натисніть та утримайте кнопку встановлення з'єднання на кейсі протягом 8 секунд.

3. Оновлення мікропрограми OTA: Його можна синхронно оновлювати за допомогою програми 1MORE MUSIC APP, тоді як лівий і правий навушки з'єднані один з одним із зарядом акумулятора щонайменше на 50%.

* Функції музичного додатка 1MORE можуть відрізнятися в залежності від різних мобільних телефонів або операційних систем. Для отримання більш детальної інформації, будь ласка, зв'яжіться з нашою службою підтримки клієнтів.