ROIDMI Cordless Vacuum Cleaner Operation Manual

Read manual before use. Keep it well for future reference.

Pictures are for reference only, actual product may vary.

Scan the QR code for manuals in multiple languages

ROIDMI

EN Page1-9

RU ..... Стр. 10-18

CONTENTS

1. Latest operating instructions 2
2. Explanation of symbols 2
3. Safety instructions 2
4. Product overview 4
5. Parts and accessories 4
6. Assembly 5
7. Operation 5
8. Cleaning and maintenance 7
9. Troubleshooting 8
10. Technical data 8
11. Disposal 8
12. Warranty and limitations of liability 9

1.Latest operating instructions

Scan the QR code to download in multiple languages

Keep the latest version of the operation manual available at the following Internet address:

https://www.roidmi.com/support/faqqa_vid3

2. Explanation of symbols

This lightning symbol marks a hazard in case when there is a potential risk of personal injury, such as electric shock, burns.

An exclamation mark is a triangle indicates important instructions in this operating manual that carefully have to be observed.

The arrow symbol indicates specific tips and advice on operation.

3. Safety instructions

Please read carefully before use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following. READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury or death.

WARNING — To reduce the risk of fire, electric shock, or injury:

WARNING!

If the charging cord is damaged, it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard. Before charging, read the instructions.

After Without use, only do not expose to rain.

Use only the specified charger when recharging the rechargeable battery provided by manufacturer.

Do not use any other charger to recharge the battery provided by manufacturer and do not try recharge other types of battery with this charger. Also do not try to charge non-rechargeable batteries with this charger.

Do not use the charger in the rain or in wet conditions. If the charger has been exposed to water, immediately unplug it from the power outlet. Do not touch the charger if it is connected to the mains voltage. Disconnect the mains voltage before any maintenance or cleaning. Failure to do so increases the risk of electric shock.

Cleaning and user maintenance shall not be made by children without supervision.

Children should not play with the appliance.

Do not use the appliance for medical purposes.

Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.

Use only as described in this manual. Use only manufacturer's recommended attachments.

Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

Do not pull cord, carry by cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

Do not handle plug or appliance with wet hands. Do not put any object into openings or nozzle. Do not use with any object into openings. Do not use with any opening blocked keep free of dust, lint, and anything that may reduce air flow.

Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

Turn off all controls before unplugging.

Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

Do not use without dust bin and/or filters in place.

Prevent unintentional starting. Ensure the switch is in the off position before connecting to a power outlet, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.

Use only as described in this manual. Use only manufacturer's recommended attachments. Improper use can cause injury.

Prevention safety measures reduce the risk of starting the appliance accidentally.

11. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

12. Use appliance only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

13. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make an electrical connection between one terminal and another. Shorting the battery terminals together may cause burns or a fire.

14. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

15. Do not use battery packs or appliances that are damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

16. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 265°F (130°C) may cause explosion.

17. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

18. Battery pack should only be replaced by qualified repair service using only identical replacement parts. This will ensure that the safety of the product is maintained.

19. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care. Improper service or repairs can create an electrical hazard or injury if done improperly or by improperly trained people.

20. The plug must be removed from the socket-outlet.

21.The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

SAVE THESE INSTRUCTIONS

Household use only.

CAUTION:

1. Make sure the plug is well inserted to avoid electric shock and fire.

2. Ensure that the voltage of the power supply and outlet is consistent with the product's rated voltage, unusual small and overloading charging or short circuit may cause fire and electric shock.

3. Cleaning and user maintenance shall not be made by children without supervision.

4. Children should not play with the appliance.

5. Do not use the appliance for medical purposes.

6. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.

7. Use only as described in this manual. Use only manufacturer's recommended attachments.

8. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

9. Do not pull cord, carry by cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

10. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

11. Do not handle plug or appliance with wet hands. Do not put any object into openings or nozzle.

12. Do not use any object into openings. Do not use with any opening blocked keep free of dust, lint, and anything that may reduce air flow.

13. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

14. Turn off all controls before unplugging.

15. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

16. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

17. Do not use without dust bin and/or filters in place.

18. Prevent unintentional starting. Ensure the switch is in the off position before connecting to a power outlet, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.

19. Use only as described in this manual. Use only manufacturer's recommended attachments. Improper use can cause injury.

20. Prevention safety measures reduce the risk of starting the appliance accidentally.

21. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

4.Product overview

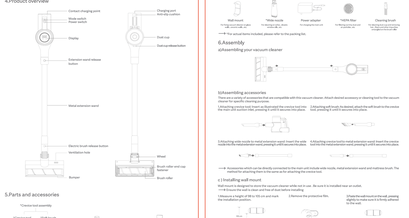

5.Parts and accessories

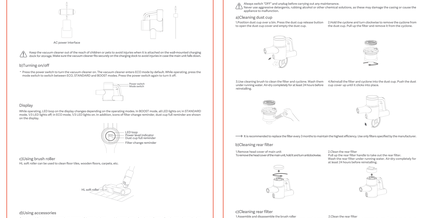

6.Assembly

a)Assembling your vacuum cleaner

b)Assembling accessories

1.Attach the wide nozzle to the vacuum cleaner compatible with the vacuum cleaner. Attach desired accessory or cleaning tool to the vacuum cleaner for specific cleaning purposes.

2.Attaching crevice tool: Insert as illustrated the crevice tool into the main unit until it clicks, pulling it slightly to ensure the attachment is secure.

3.Attaching soft brush: As desired, attach the soft brush to the crevice tool, pushing it until it clicks and ensuring it is secure.

4.Attaching crevice tool for metal extension wand: Insert the crevice tool into the metal extension wand until it clicks, ensuring a secure connection.

5.Attaching wide nozzle to metal extension wand: Insert the wide nozzle into the metal extension wand until it clicks, ensuring a secure connection.

→→ Accessories which can be directly connected to the main unit include wide nozzle, metal extension wand and mattress brush. The mattress brush can be attached directly to the main unit or the metal extension wand.

c) Installing wall mount

Wall mount is designed to store the vacuum cleaner while not in use. Be sure it is installed near an outlet.

→→ It is best the wall is clean and free of dust before installing

1.Measure a height of 39 to 55 cm and mark Installation Position.

2.Remove the protective film.

3.Fasten the wall mount to the wall, pressing slightly to make sure it is firmly adhered to the wall.

7.Operation

a)Charging

→→ Fully charge the vacuum cleaner before first use.

1.Insert the charging port into the charging port on the vacuum cleaner, then connect the other end of the power adapter to a power outlet.

2.While charging, the battery level icon on the display increases and the LED lights up gradually. Upon full charge, the number turns to 100 and the LED bars fully light up.

8.Cleaning and maintenance

Always switch "OFF" and unplug before carrying out any maintenance.

Never use aggressive detergents, rubbing alcohol or other chemical solutions, as these may damage the casing or cause the surface to become cloudy.

a)Cleaning dust cup

1.Pulsator dust cup over sides. Press the dust cup release button to open the dust cup cover and empty the dust cup.

2.Hold the cyclone and turn clockwise to remove the cyclone from the dust cup. Pull up the filter and remove it from the cyclone.

3.Use cleaning brush to clean the filter and cyclone. Wash them under running water. Air-dry completely for at least 24 hours before reinstalling.

4.Reinstall the filter and cyclone into the dust cup. Push the dust cup cover up until it clicks into place.

→→ It is recommended to replace the filter every 3 months to maintain the highest efficiency. Use only filters specified by the manufacturer.

b)Cleaning rear filter

1.Remove head cover of main unit

2.Lift the rear filter. Pinch the tabs on both sides and remove the rear filter. Rinse the filter under running water. Air-dry completely for at least 24 hours before reinstalling.

3.Place the new filter

4.Fit up the new filter. Pinch the tabs on both sides and press down until it clicks into place.

c)Cleaning rear filter

1.Assemble and disassemble the brush roller

Machine brush: for the surfaces of beds, curtains and other textile surfaces, and relaxing sofas.

Mattress brush: for the surfaces of beds, curtains and other textile surfaces, and relaxing sofas.

Pull down the brush roller and cap fastener

Disassemble

d) Cleaning mattress brush

Pull down the brush roller and cap fastener to remove the cap. Take out the mattress brush roller and wash it under running water. Air-dry completely for at least 24 hours before reinstalling.

Pull down the end cap fastener

1. Reinstall the brush roller and the end cap fastener.

9.Troubleshooting

To reduce the risk of shock and unintended operation, turn off power and unplug the appliance before servicing.

Problem description	Possible causes	Possible solutions
Vacuum cleaner will not turn on	Battery pack is not fully charged or discharged	Fully charge the battery pack
Motor does not work	Dust bin is full	Empty the vacuum cleaner
	Dust bin not properly installed	Empty the dust cup
	Filter is not properly installed/clogged	Clean or change the filter
	Filter is full of dust	Clean or change the filter
	Cyclone blocked by paper or wool fibers	Remove the cyclone and clean it
	Cyclone blocked by paper or wool fibers	Remove the cyclone and clean it
Display screen not on during charging	Power adapter not plugged in properly	Plug in power adapter properly
Offset on the brush roller does not clean	Wheel/suspension has fallen out/the brushes	Check or change the wheel

→→ If any other cases of this solution explained above did not solve the problem, please contact us at service@roidmi.com.

10.Technical data

a) Vacuum cleaner

Product model	XCQ08RM	Charging time	≤ 5.5 hours
Battery brush model	XCQ08RM	Running time	approx. 60 min (ECO mode)
Motor brush model	XCW08RM	Running time	approx. 30 min (STANDARD mode)
Rated charging voltage	25.2 V	Running time	approx. 15 min (BOOST mode)
Rated charging voltage	25 V	Dust cup capacity	approx. 0.6 L
Lithium battery capacity	2400 mAh/ 60.5Wh	Noise	≤84dB(A)
Rated power	450 W	Weight (net)	approx. 3.7kg (7.1kg)
Motor Power	400 W (Electric brush)	Weight (net)	approx. 3.7kg
Motor Power	50 W (Electric brush)		

b)Power adapter

Rated input voltage	100-240V~
Rated input current	1.5A
Rated output voltage	25 V
Rated output current	0.6 A
Product model	Suitable: KA2007A-0300WW01, European Union: KA2007A-0300EU01, Australia: KA2007A-0300AU01, United Kingdom: KA2007A-0300GB01, United States: KA2007A-0300US01, Japan: KA2007A-0300BJ01, Taiwan: KA2007A-0300TW01, China: KA2007A-0300CN01

11.Disposal

Correct disposal of this product

This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

12.Warranty and limitations of liability

The product is guaranteed for a period of 24 months from the date of purchase against any failure resulting from manufacturing or material defects. This warranty does not cover damage caused by improper installation, improper use, or normal wear and tear.

Where specifically, the warranty does not cover:

- Damage or problems caused by improper use, accident, alteration or electrical connection of improper intensity or voltage.
- Damage or problems caused by improper installation, improper use, improper repair, abuse, neglect or misuse.
- Failure of the battery due to overcharging or failure to observe the safety instructions explained in this instruction manual.
- Cosmetic damage, including scratches, dents, or any other element.
- Damage caused by any intervention carried out by an unauthorized person.
- Defects caused by normal wear and tear or due to normal ageing of the product.
- Damage caused by external factors or circumstances.
- Product failures due to the use of third party software by modify, change or adapt the existing software.
- Product failures caused by use without accessories approved by the manufacturer.
- Overload products.

Terms and conditions of implementation:

To exercise the warranty, please contact the purchased product in the customer service desk of your retail outlet with your proof of purchase (receipt, invoice, ...), the product and its supplied accessories, with its original packaging.

It is important to keep the date of purchase, the model and the serial or IMEI number on hand as information (this information is required to process your request and is specified on your proof of purchase).

Failing this, you must ensure the product with the accessories is necessary for its proper operation (power supply, adapter, etc.) in the best condition, in its original packaging, the attestation serves only within the limits of its purpose, either:

- Repair or replace defective parts.
- Exchange the returned product with a product that has at least the same functionality and that is equivalent in terms of performance.
- Refund the product at the purchase price of the product mentioned on the proof of purchase.

If one of these Transitions is used, this does not give rise to the extension or renewal of the warranty period.

Made in China

Manufacturer: ROIDMI INFORMATION TECHNOLOGY CO., LTD.

Address: R-CENLINK, NO. 1688 HONGMEI ROAD, LIFE SCIENCE AND TECHNOLOGY PARK, HUIZHOU DISTRICT, HUIZ., GANGDU, PRC

Executive standards:

IEC 61558-2-6:2009+A1:2017/BS EN 61558-2-6:2009+A1:2017/AS/NZS 61558.2.6:2017/IEC 60335-2-29:2016+A1:2019/IEC 60335-2-29:2016+A1:2019/BS EN 60335-2-29:2016+A11:2018+A1:2019+A2:2021/BS EN 60335-2-29:2016+A11:2018+A1:2019+A2:2021/AS/NZS 60335.2.29:2019+A1:2020+A2:2021/IEC 62233:2008/BS EN 62233:2008/AS/NZS 4474.1:2018+A1:2020+A2:2021/IEC 62321-7-2:2017/BS EN 62321-7-2:2017/AS/NZS 62321.7.2:2021/IEC 62321-5:2013/BS EN 62321-5:2014/AS/NZS 62321.5:2021

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

For more manuals, warranty information:

Corporate website: www.roidmi.com/en

Customer service: service@roidmi.com, Check the website www.roidmi.com/en

XCQ08RM_UM_EN_Rev.01.2023

СОДЕРЖАНИЕ

1. Актуальное руководство по эксплуатации 11
2. Условные обозначения 11
3. Инструкции по технике безопасности 11
4. Обзор изделия 13
5. Детали и принадлежности 13
6. Сборка 14
7. Эксплуатация 14
8. Очистка и обслуживание 16
9. Поиск и устранение неисправностей 17
10. Технические данные 17
11. Утилизация 17
12. Гарантия и ограничение ответственности 18

1.Актуальное руководство по эксплуатации

Отсканируйте QR-код, чтобы загрузить руководство на нескольких языках.

Сохраняйте последнюю версию руководства по эксплуатации доступ к интернет-ресурсу http://www.roidmi.com/support/faqqa_vid3

2. Условные обозначения

Молния в треугольнике указывает на возможную угрозу травмы, такую как удар электрическим током, ожоги.

Восклицательный знак внутри треугольника обозначает важные указания в данном руководстве по эксплуатации, которые должны быть соблюдены.

Стрелка с кончиком обозначает конкретные советы и рекомендации по эксплуатации.

3.Инструкции по технике безопасности

Пожалуйста, прочтите внимательно перед использованием.

ВАЖНЫЕ УКАЗАНИЯ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ

При использовании электрических приборов всегда следует соблюдать основные меры предосторожности, включая следующие. ПЕРЕД ИСПОЛЬЗОВАНИЕМ ДАННОГО ПРИБОРА ОЗНАКОМЬТЕСЬСО ВСЕМИ ИНСТРУКЦИЯМИ. Несоблюдение предупреждений и инструкций может привести к поражению электрическим током, возгоранию и/или к серьезным травмам или смерти.

ВНИМАНИЕ! — Для снижения риска пожара, поражения электрическим током или травмированием:

ПРЕДУПРЕЖДЕНИЕ!

1. В случае повреждения шнура питания необходимо обратиться к изготовителю, в сервисную службу изготовителя или аналогично квалифицированным лицам, чтобы не допустить возникновения опасной ситуации.

2. Перед зарядкой ознакомьтесь с инструкцией.

3. Только для использования в помещении, не подвергайте защитной среде.

4. Для зарядки аккумулятора использовать только зарядное устройство, поставляемое производителем.

5. Не используйте для зарядки аккумулятора, поставляемого производителем, Не пытайтесь использовать другие виды батарей с этим зарядным устройством. Также не заряжайте одноразовые аккумуляторы с помощью данного зарядного устройства.

6. Не заряжайте аккумулятор в дождливую погоду. Если зарядное устройство было подвергнуто воздействию воды, немедленно отключите его от розетки. Не прикасайтесь к зарядному устройству, если оно подключено к сети. Перед любым обслуживанием или чисткой отключите напряжение сети. Невыполнение этого увеличивает риск поражения электрическим током.

7. Чистка и пользовательское обслуживание не должны выполняться детьми без надлежащего контроля.

8. Не позволяйте детям играть с прибором.

9. Не используйте для медицинских целей.

10. Не разрешайте использовать в качестве игрушки. Необходимо внимательно следить за детьми, домашними животными и растениями.

11. Используйте только по назначению, как описано в этом руководстве. Используйте только те насадки, которые рекомендованы производителем.

12. Не используйте поврежденный шнур или вилку. Если прибор не работает должным образом, уронен, поврежден, оставлен на улице или попал в воду, верните его в сервисный центр.

13. Не тяните за шнур, не используйте шнур как ручку, не закрывайте дверь на шнуре и не тяните шнур вокруг острых предметов. Не переезжайте шнур. Не допускайте контакта шнура с нагретыми поверхностями.

14. Не вынимайте вилку из розетки, потянув за шнур. Чтобы вынуть вилку из розетки, возьмитесь за вилку, а не за шнур.

15. Не прикасайтесь к вилке или прибору мокрыми руками. Не вставляйте предметы в отверстия и отверстия в корпусе. Не используйте с открытыми или заблокированными отверстиями. Не допускайте скопления пыли.

16. Волосы, свободная одежда, пальцы и все части тела должны находиться на расстоянии от отверстий и подвижных деталей.

17. Перед отсоединением выключите все элементы управления.

18. Не используйте для сбора легковоспламеняющихся или горючих жидкостей, таких как бензин, или в помещениях, в которых они могут быть.

19. Не собирайте предметы горящие или дымящиеся предметы, такие как сигареты, спички или горячий пепел.

20. Не используйте без установленного пылесборника и фильтра.

21. Предотвратите непреднамеренное включение. Перед подключением к розетке, поднятием или переноской прибора убедитесь, что выключатель находится в положении выключено. Переноска прибора с пальцем на выключателе или включение прибора с включенным выключателем приглашает к несчастным случаям.

22. Используйте только по назначению, как описано в этом руководстве. Используйте только те насадки, которые рекомендованы производителем. Неправильное использование может привести к травме.

23. Предотвратить предпринятые меры безопасности снижают риск запуска прибора случайно.

24. Перезарядка только с зарядным устройством, указанным производителем. Зарядное устройство, подходящее для одного типа аккумулятора, может создавать опасность возгорания при использовании с другим блоком аккумулятора.

25. Используйте аккумуляторы только со специально предназначенными для них аккумуляторными блоками. Использование других аккумуляторных блоков может привести к пожарам или травмам.

26. Когда аккумуляторный блок не используется, держите его подальше от других металлических предметов, таких как скрепки, монеты, ключи, гвозди, винты или другие мелкие металлические предметы, которые могут сделать электрическое соединение между одним выводом и другим. Замыкание выводов аккумулятора вместе может привести к ожогам или возгоранию.

27. При жестких условиях эксплуатации жидкость может быть выброшена из аккумулятора; избегайте контакта. В случае случайного контакта промойте водой. Если жидкость попадает в глаза, дополнительно обратитесь за медицинской помощью. Жидкость, выброшенная из аккумулятора, может вызвать раздражение или ожоги.

28. Не используйте аккумуляторные блоки или приборы, которые повреждены или изменены. Поврежденные или измененные аккумуляторы могут иметь непредсказуемое поведение, приводящее к возгоранию, взрыву или травме.

29. Не подвергайте аккумуляторный блок или прибор воздействию огня или чрезмерной температуры. Воздействие пламени или температуры выше 265 °F (130 °C) может привести к взрыву.

30. Следуйте всем инструкциям по зарядке и не заряжайте аккумуляторный блок или прибор за пределами диапазона температур, указанного в инструкциях. Неправильная зарядка или зарядка при температурах, выходящих за пределы указанного диапазона, может повредить аккумулятор и увеличить риск возгорания.

31. Аккумуляторный блок должен заменяться только квалифицированным сервисным центром с использованием идентичных запасных частей. Это гарантирует сохранение безопасности продукта.

32. Не пытайтесь модифицировать или ремонтировать прибор или блок аккумуляторов, кроме случаев, указанных в инструкциях по эксплуатации и уходу. Неправильное обслуживание или ремонт могут создать электрическую опасность или травму, если они выполнены неправильно или необученными людьми.

33. Вилка должна быть вынута из розетки.

34.Прибор не предназначен для использования людьми (включая детей) с ограниченными физическими, сенсорными или умственными способностями, или не обладающими достаточным опытом и знаниями, за исключением случаев, когда они используют его под присмотром или получили указания по использованию.

СОХРАНИТЕ ДАННУЮ ИНСТРУКЦИЮ

Только для бытового использования.

ПРЕДОСТЕРЕЖЕНИЕ:

1.Убедитесь, что вилка вставлена надлежащим образом, чтобы избежать поражения электрическим током, перегрева, замыкания и возгорания.

2.Убедитесь, что напряжение сети и розетки соответствует номинальному напряжению изделия, чрезмерно маленькие зарядки и короткое замыкание могут привести к возгоранию и поражению электрическим током.

3.Чистка и пользовательское обслуживание не должны выполняться детьми без надлежащего контроля.

4.Не позволяйте детям играть с прибором.

5.Не используйте для медицинских целей.

6.Не позволяйте использовать в качестве игрушки. Необходимо внимательно следить за детьми, домашними животными и растениями.

7.Используйте только по назначению, как описано в этом руководстве. Используйте только те насадки, которые рекомендованы производителем.

8.Не используйте поврежденный шнур или вилку. Если прибор не работает должным образом, уронен, поврежден, оставлен на улице или попал в воду, верните его в сервисный центр.

9.Не тяните за шнур, не используйте шнур как ручку, не закрывайте дверь на шнуре и не тяните шнур вокруг острых предметов. Не переезжайте шнур. Не допускайте контакта шнура с нагретыми поверхностями.

10.Не вынимайте вилку из розетки, потянув за шнур. Чтобы вынуть вилку из розетки, возьмитесь за вилку, а не за шнур.

11.Не прикасайтесь к вилке или прибору мокрыми руками. Не вставляйте предметы в отверстия и отверстия в корпусе.

12.Не используйте для сбора легковоспламеняющихся или горючих жидкостей, таких как бензин, или в помещениях, в которых они могут быть.

13.Не собирайте предметы горящие или дымящиеся предметы, такие как сигареты, спички или горячий пепел.

14.Не используйте без установленного пылесборника и фильтра.

15.Предотвратите непреднамеренное включение. Перед подключением к розетке, поднятием или переноской прибора убедитесь, что выключатель находится в положении выключено. Переноска прибора с пальцем на выключателе или включение прибора с включенным выключателем приглашает к несчастным случаям.

16.Используйте только по назначению, как описано в этом руководстве. Используйте только те насадки, которые рекомендованы производителем. Неправильное использование может привести к травме.

17.Предотвратить предпринятые меры безопасности снижают риск запуска прибора случайно.

18.Перезарядка только с зарядным устройством, указанным производителем. Зарядное устройство, подходящее для одного типа аккумулятора, может создавать опасность возгорания при использовании с другим блоком аккумулятора.

4. Обзор изделия

5. Детали и принадлежности

Настенное крепление
Щелевая насадка
Адаптер питания
HEPA фильтр
Щетка для очистки
Штекерная часть
Переключатель режимов
Переключатель питания
Индикаторы в виде полосы, светодиодные полосы
Уведомление о замене фильтра
Уведомление о полном пылесборнике
Кнопка выключения щетки
Кнопка выключения щетки
Кнопка выключения щетки
Щетка для матрасов
Щетка для матрасов
Для очистки тканевых поверхностей, таких как матрасы и ковры
Для очистки тканевых поверхностей, таких как матрасы и ковры
Для очистки тканевых поверхностей, таких как матрасы и ковры