Cordless Vacuum Cleaner Operation Manual

Read manual before use. Keep it well for future reference.

Pictures are for reference only, actual product may vary.

Scan the QR code for manuals in multiple languages

MOJIETU | roidmi

EN Page1-10

RU Стр.11-20

CONTENTS

1. Latest operating instructions 2
2. Explanation of symbols 2
3. Safety instructions 2
4. Product overview 4
5.Parts and accessories 4
6.Assembly 5
7.Operation 5
8.Cleaning and maintenance 7
9.Troubleshooting 8
10.Technical Data 9
11.Disposal 9
12.Warranty and limitations of liability 9

Latest operating instructions

Scan the QR code for manuals in multiple languages

Explanation of symbols

⚠ The lightning symbol warns of a hazard that could result in serious injury or death.

⚠ An exclamation mark in a triangle indicates important instructions in this operating manual that absolutely have to be observed.

→ The arrow symbol indicates specific tips and advice on operation.

Safety instructions

Read the manual before use.

IMPORTANT SAFETY INSTRUCTIONS

Household use only

WARNING: READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING — To reduce the risk of fire, electric shock, or injury

WARNING:

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard.
2. Before charging, read the instructions.
3. Do not charge the battery outdoors.
4. The battery charger is designed for charging the rechargeable batteries provided by manufacturer.
5. Do not use any other charger to recharge the battery provided by manufacturer and do not try recharge other types of battery with this charger. Other types of battery may burst and cause injury and damage.
6. Before charging, check whether the voltage specified on the rating label corresponds to the mains voltage.
7. Do not charge the battery in the presence of flammable substances.
8. Never remove the plug from the socket before cleaning or maintaining the charger.
9. Do not operate the charger with any damaged cord or plug or after the charger has dropped or damaged.
10. The appliance contains batteries that are only replaceable by skilled persons.
11. The battery must be removed from the appliance before it is scrapped.
12. Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
13. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
14. Children should not play with the appliance.
15. Keep children away from the charger.
16. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
17. Use only as described in this manual. Use only manufacturer's recommended attachments.
18. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
19. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
20. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
21. Do not handle charger, including charger plug, and charger terminals with wet hands.
22. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
23. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
24. Turn off all controls before unplugging.
25. Do not use to pick up flammable or combustible liquids, such as gasoline, nor use in areas where they may be present.
26. Do not use outdoors or on wet surfaces. Do not expose to rain. Do not use in damp areas.
28. Do not use without dust cup and filter in place.
29. Use extra caution when cleaning on stairs. Do not place charger in or near a heat source such as a heater, oven, or other heating appliance. Carefully the appliance and cover finger on the switch in emptying appliance that have the switch on entire accidents.
30. Use only the charging base provided by the manufacturer. Improper use of a charging base may cause a risk of electric shock or fire. Using an improper charging base, improper connections, improper charging accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
31. Use only the charging base provided by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
32. The appliance only with specifically designed battery packs. Use of any other battery packs may create a risk of injury and fire damage. Use only the battery pack specified by the manufacturer. Use of other battery packs may create a risk of injury and fire damage. Use only genuine parts. Using other parts or accessories that are not recommended by the manufacturer or sold by the manufacturer may cause hazards or injuries to the user. Using non-genuine parts will void the warranty. Use only genuine parts to ensure the safe and proper operation of the product. Using non-genuine parts may lead to malfunctions, reduced performance, or damage to the product. Such actions may also compromise safety features, potentially causing injuries or damage to the user. The manufacturer is not liable for any damages or injuries resulting from the use of non-genuine parts.
33. Do not expose battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 265°F (130°C) may cause explosion.
34. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Improper charging or charging in temperatures outside the specified range may damage the battery and increase the risk of fire.

35 Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
36 Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
40 Always turn off the appliance before connecting or disconnecting electrical hoses.

SAVE THESE INSTRUCTIONS

Household use only

1 Make sure the plug is well inserted to avoid electric shock, short circuit and fire.
2 Do not place the product near heat sources such as heaters, high temperature and humid environment, unusual smell and sound during charging or operation. Place the product in an open and non-inflammable area. Have servicing performed by the manufacturer or a qualified repair person. This ensures that the safety is maintained.
3 Do not place the product in water or other liquids. Do not immerse in water.
4 If it is overheated, fully turn off the vacuum cleaner immediately. Check if the brush roller is wrapped by hair or other excessively long fibrous materials.
5 Keep the vacuum cleaner away from someone carrying a pacemaker device during use.
6 Do not place the product on the wall-mounted charging dock when someone is using a pacemaker or has implanted on the wall-mounted charging dock for storage.
7 When charging with the wall-mounted charging dock, make sure the main unit fits perfectly against the wall-mounted charging dock to avoid falling off and causing injuries.
8 Do not place the product on the wall-mounted charging dock.
9 Keep children away from the wall-mounted charging dock. Product falling during charging can cause hazards such as electric shock due to leakage.
10 When using the product, Do not place the product under any mechanical stress. Prevent the product from colliding with other objects.
11 Finally clean the main cup to guarantee good air ventilation, so as to avoid poor suction or motor heating caused by air blockage.
12 Do not use the product to suck up any burning or smoking objects.
13 Do not use vacuum cleaner to suck up water to avoid water entering the main unit and causing malfunction. When water enters the main unit, immediately stop using and contact the manufacturer or a Roidmi store for repair.
14 Do After washing the brush roller completely before reinstalling.
15 Totally clean attachments after use to prevent fluid residue, cotton and from sticking to them.
16 Do not use the product to suck up any sharp objects such as glass, nails, screws, needles, etc. To avoid damage to hard brushes.
17 Keep the charging port out of the reach of children to avoid injury. With a sharp blade, the cleaning brush is used to cut off entangled hair, please be careful not to cut yourself.
18 No action needed from users to shift the product between 50 and 60Hz, product can adapt itself for both 50 and 60Hz.

Product overview

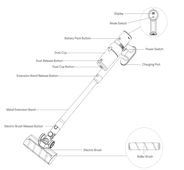

Parts and accessories

Assembly

Use as stick vacuum cleaner:Connect different accessories for different cleaning purposes a)

→ Adjust the overall length of the wand to suit your cleaning requirements.

Use as hand vacuum:Insert the accessory to body until you hear a click.

Storage method:
A) Stand on the wall with expansion screws b) hang the vacuum cleaner.

⚠ Make sure there are no gas, water or electrical cables and wires hidden behind the mounting area before drilling.

Operation

Charging

→ Fully charge the battery before first use.

1. Battery charging
Connect the charger to a power supply, the LED display is flashing in green, it indicates that the power is insufficient and needs to be charged. Closed the charger in the power supply and the charging port. It is charging with four indicator lights keep flashing in green. The battery is full when four indicator lights are always on green.

⚠ Use the adapter recycled by the manufacturer only to avoid potential security incidents.

Adapter and rack combined charging

1. Take the adapter and wall bracket 10 respectively.

2. Insert the adapter slightly into the bottom of the wall bracket as shown in the figure, and install the fixed screw.

3. Fasten the cover with screws.

4. The installation is complete.

Turning on and off

Before vacuuming your cellulose sign or carpet, refer to the rug manufacturer's recommended cleaning instructions.

Mode selection

1. Press the switch to work.
2. Long press to shutdown.
3. In the light, it has appeared when you press the switch button.Total time.
4. Long press the switch button when you press the switch button.Total time.
5. Charging light, it's high speed when you press the speed control button second time. Again, back to low speed it will be power off when you press the switch button second time.

Battery power indicator

→ Recharge the battery pack when the power level is lower than 25%.

Cleaning and maintenance

→ Before cleaning the product, turn power and remove the battery pack.Never use aggressive detergents, rubbing alcohol or other chemical solutions, as these may damage the casing or cause fire.product is not suitable to clean this product.

Empty the dustbin

→ To empty dustbin,First turn off power and disconnect all accessories.

Press the Release button(Dust Cup and Rollbrush use the MAX mark)

1.Remove the dust cup

2.Remove the dust cup from main body

3.Press the dust release button.

4.Empty the dust cup.

Clean sponge, filter element, air duct:

1.Press the release button to remove the dust cup from the heat

2. Remove the HEPA filter element, sponge and dust cup out dust in turn. (HEPA filter is hollow, you can gently pull it up with your hands or shaking out.)

3.Clean the air duct HEPA filter, sponge and dust cup with clean water

4.Natural air drying

5.Wipe the HEPA filter element, sponge, and dust cup air duct are completed, dry, assemble and use.

⚠ 1. After cleaning, please make sure that the filter element and sponge are installed in place to avoid damage to the host due to vacuuming.
2. Please dry naturally after washing to avoid corrosion.
3. When replacing the HEPA filter element, please use the original HEPA filter element designed by the manufacturer to avoid damage to the vacuum cleaner or other issues.

Clean brush roller:
When cleaning brush roller, be sure to not cut anything other than hair, string, fibrous or other debris.

⚠ Please disconnect the power before cleaning.

1.The left-hand release button, as shown in FIG.

2.While pressing the unlock button, slide the roller gland upwards

3.Remove the roller brush

4.Clean the roller brush.

5.After the roller brush is completely dry, Install the Brush Roller

6.Align one end of the cleaned roller brush with the shaft and install it, and align the other end with the Roller Brush end of the cleaned roller brush and press it into it.

Troubleshooting

⚠ To ensure the normal use of products and uninterrupted operation, turn off power and unplug the appliance before servicing.

Problem description	Possible causes	Possible solutions
Power switch cannot open	Not fully pressed by hair, fibers and other impurities	Remove the obstruction entangled on the brush roller
Motor does not work	Dust cup is not in place	Install the dust cup correctly
	Dust cup full of dust	Empty the dust cup
	Battery pack is not installed correctly	Install the battery pack
Poor suction	The full of dust	Clean or change the filter
	An item of trash after a brush roller half blocked	Clean electric brush
	Dust cup is not installed in place	Install the dust cup in place
	An internal blockage dust cup and brush roller	Regularly clean and clean an internal blockage
	Blockage in the air duct	Clean the air duct
Charging light of charger not on or not blinking	Power adapter not plugged in properly	Check if power adapter is properly

⚠ In any other case or if the solution explained above did not solve the problem, please contact us at service@roidmiegadget.com

Technical Data

Vacuum cleaner

Product model	W20WHM
Electric Brush Model	W20WHMBR
Rolle Brush Model	W20WHMRB
Rated Charging Voltage	25.2 V
Rated Charging Current	0.5 A
Battery Rated Capacity	2500 mAh / 63.0 Wh
Max Motor Rated Power	200 W
Rated Power	0.18 (Electric brush)
Rated Power	0.12 (Roller brush)
Running Time	approx. 12 min (ECO mode)
Running Time	approx. 12 min (STANDARD mode)
Running Time	approx. 6 min (TURBO mode)
Dust Cup Capacity	approx. 0.6 L
Net Weight	2.9 kg
Dimensions	1150 × 250 × 230 mm
Weight Class	approx. 2.9 kg

Power adapter

Rated Input voltage	100-240V
Rated Input current	1.40A
Rated output voltage	25.2 V
Rated output current	0.5 A
Product model	CYWYC0500GNMWW / CYWYC0500GNMWW-1 / CYWYC0500GLPWW / CYWYC0500GLPWW-1 / CYWYC0500GLPWW-2 / CYWYC0500GLPWW-3

Disposal

Correct disposal of this product

This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Warranty and limitations of liability

This product is guaranteed for a period of 12 months (defined by local laws from the date of purchase against any failure resulting from manufacturing or material defects.
The warranty does not cover damage caused by improper installation, improper use, or normal wear and tear of the product.Wear specifically includes but not limited to:
- Damage caused by improper use, improper installation, improper maintenance, or use in harsh environments.
- Damage caused by unauthorized repairs or modifications to the product. Unauthorized repairs or modifications will void the warranty and cancel eligible warranty claims.
- Failure of the battery due to overcharging or failure to observe the safety instructions explained in the instruction manual.
- Damage caused by third-party products or accessories not approved by us.
- Damage caused by any intervention carried out by an unauthorized person.
- Damage caused by force majeure, such as natural disasters, fire, or other external factors.
- Software updates due to a change in network settings.
- Product failure caused by the use of non-genuine parts, improper cleaning, or improper charging.
- Product failure caused by use without accessories approved by the manufacturer.
- Installed products.

Terms and conditions of implementation:
To obtain a warranty service, you are requested to return your product to the customer service desk at your retail outlet with your proof of purchase and a description of the fault.
The product will be supplied second-hand only, the original warranty period will not be extended.
Our liability for any defective product is limited to the value of the product. Any additional costs, such as shipping, customs duties, or taxes, are the responsibility of the customer. The information provided in this manual is for reference only and does not constitute a binding offer. The specifications and features described in this manual may differ from the actual product. We reserve the right to make changes to the product without prior notice. The specifications and features of the product shown in this manual are based on the latest information at the time of publication. We are not liable for any discrepancies between the manual and the actual product.
Refund the purchase of the purchase price of the product mentioned in the proof of purchase.
Price of Brand 3 products is a specific fee that will give rise to the exemption or renewal of the warranty period.

Made in China

Manufacturer: ROBOAM INFORMATION TECHNOLOGY CO., LTD.
Address: 3F,Building 1,Qiaoxin Science and Technology Industrial Park,Hongwei Road,Qiaotou Community,Fuhai Street,Bao'an District,Shenzhen,China
Authorized representative: Roidmi Europe GmbH, Lilienthalstraße 5 D-85399 Hallbergmoos Germany
Recycling and Waste Management Information: Contact the manufacturer or your local waste management authority for information on proper disposal and recycling options.
Trademark Notice: The Roidmi trademark is a registered trademark owned by the manufacturer. Unauthorized use is prohibited.
Copyright Notice: All rights are reserved. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the copyright holder.
Disclaimer: The information in this manual is provided "as is" and "as available" without any warranty of any kind, express or implied, including but not limited to, implied warranties of merchantability, fitness for a particular purpose, and non-infringement. The manufacturer and its affiliates shall not be liable for any direct, indirect, incidental, consequential, or punitive damages arising from the use of this manual or the product described herein, to the fullest extent permitted by applicable law.
Version: V1.0
Date: 2025.12.31

СОДЕРЖАНИЕ

1. Актуальное руководство по эксплуатации 12
2. Условные обозначения 12
3. Инструкции по технике безопасности 12
4. Обзор изделия 14
5.Детали и принадлежности 14
6.Сборка 15
7.Порядок работы 15
8.Очистка и обслуживание 17
9.Поиск и устранение неисправностей 18
10.Технические данные 19
11.Утилизация 19
12.Гарантия и ограничение ответственности 19

Актуальное руководство по эксплуатации

Сканируйте QR-код, чтобы найти руководство на нескольких языках.

Условные обозначения

⚠ Символ молнии внутри треугольника предупреждает, когда присутствует потенциальная возможность для причинения вреда серьезных травм или даже смерти.

⚠ Восклицательный знак внутри треугольника обозначает важные указания в данном руководстве по эксплуатации, которые обязательно должны быть соблюдены.

→ Символ стрелки указывает конкретные советы и рекомендации по эксплуатации.

Инструкции по технике безопасности

Ознакомьтесь с данным руководством перед использованием.

ВАЖНЫЕ УКАЗАНИЯ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ

ПЕРЕД ИСПОЛЬЗОВАНИЕМ ОЗНАКОМЬТЕСЬ СО ВСЕМИ ИНСТРУКЦИЯМИ

ПРЕДУПРЕЖДЕНИЕ: ПРИ ЭКСПЛУАТАЦИИ ПРИБОРА, ЧТОБЫ ИЗБЕЖАТЬ ПОЖАРА, ПОРАЖЕНИЯ ЭЛЕКТРИЧЕСКИМ ТОКОМ И ПОЛУЧЕНИЯ ТРАВМ, НЕОБХОДИМО СОБЛЮДАТЬ СЛЕДУЮЩИЕ ПРАВИЛА ОБЕЗОПАСИВАНИЯ ОТ ПОРАЖЕНИЯ ЭЛЕКТРИЧЕСКИМ ТОКОМ, ПОЖАРА ИЛИ ПОЛУЧЕНИЯ ТРАВМЫ ЛЮДЬМИ:

ВНИМАНИЕ! — Для снижения риска пожара, поражения электрическим током или травмирования предупреждение

1. Если шнур питания повреждён, необходимо обратиться в изготовителя, в сервисную службу изготовителя или квалифицированное специалистов для замены шнура, чтобы избежать возникновения опасной ситуации.
2. Перед зарядкой ознакомьтесь с инструкцией.
3. Не заряжайте аккумулятор на улице. Зарядка аккумулятора выполняется дома.
4. Зарядное устройство предназначено для зарядки перезаряжаемого аккумулятора, поставляемого производителем.
5. Не используйте другие зарядные устройства для зарядки аккумулятора, поставляемого производителем, и не пытайтесь зарядить на аккумулятор, заряжать другие аккумуляторы другого типа. Такие действия могут привести к взрывам, ранениям, повреждениям зарядного устройства и аккумулятора.
6. Перед зарядкой проверьте соответствие напряжения, указанного на маркировочном ярлыке, напряжению сети.
7. Не заряжайте прибор рядом с горючими веществами.
8. Перед чисткой или обслуживанием зарядного устройства всегда отключайте его от розетки.
9. Прибор можно использовать только с base station, поставляемым вместе с прибором.
10. Аккумуляторы могут заменять только квалифицированные специалисты.
11. Перед утилизацией необходимо извлечь аккумулятор из прибора.
12. Дети в возрасте от 8 лет и выше и лица с ограниченными физическими, сенсорными или умственными способностями, или не обладающие достаточным опытом и знаниями, могут использовать прибор только при условии, что им обеспечивается достаточная степень контроля или инструктаж, касающиеся использования прибора, и они понимают связанные с ним риски.
13. Дети не должны играть с прибором. Чистка и пользовательское обслуживание не должны выполняться детьми без надлежащего контроля.
14. Дети могут играть с прибором.
15. Держите прибор в недоступном для детей месте.
16. Не допускайте использования прибора в качестве игрушки. Требуется пристальное внимание при использовании рядом с детьми, домашними животными или растениями.
17. Используйте только по назначению, описанному в данном руководстве. Используйте только рекомендованные производителем аксессуары.
18. Не используйте с повреждённым шнуром или вилкой. Если прибор не работает должным образом, упал, повреждён, оставлен на улице или упал в воду, верните его в сервисный центр.
19. Не тяните и не переносите прибор за шнур, не используйте шнур как ручку, не закрывайте дверь на дверцу, не используйте прибор на шнуре, не прокладывайте шнур рядом с нагретыми поверхностями. Не допускайте контакта шнура с острыми предметами или углами.
20. Не вынимайте вилку из розетки, потянув за шнур. Чтобы отсоединить прибор, возьмитесь за вилку, а не за шнур.
21. Не прикасайтесь к зарядному устройству, в том числе к вилке зарядного устройства, к клеммам зарядного устройства мокрыми руками.
22. Не вставляйте никакие предметы в отверстия. Не эксплуатируйте прибор, если какое-либо отверстие заблокировано, не допускайте попадания пыли, волос, волос и любых предметов, которые могут уменьшить поток воздуха.
23. Волосы, свободная одежда, пальцы и все части тела должны находиться на расстоянии от отверстий и подвижных деталей.
24. Перед отсоединением выключите все элементы управления.
25. Не используйте для сбора легковоспламеняющихся или горючих жидкостей, таких как бензин, и не используйте в местах, где такие вещества могут присутствовать.
26. Не используйте на улице или на мокрых поверхностях. Не допускайте попадания дождя. Не используйте в сырых помещениях.
27. Не работайте с неразрешенными аксессуарами. Перед тем, как подключить base station, убедитесь, что пылесборник и фильтр установлены на место.
28. Будьте предельно осторожны при уборке на лестнице. Не ставьте зарядное устройство в или рядом с нагревательным прибором, таким как обогреватель, духовка или другой нагревательный прибор. Аккуратно уберите аксессуары и устройство перед тем, как опустошать прибор, если выключатель был включен во время инцидента.
29. Используйте только base station, предоставленный производителем. Неправильное использование base station может привести к поражению электрическим током или пожару. Использование base station, неправильные подключения, неправильные аксессуары для зарядки или хранение прибора. Такие превентивные меры безопасности снижают риск случайного включения прибора.
30. Используйте только base station, предоставленный производителем. Зарядное устройство, подходящее для одного типа аккумуляторной батареи, может создать риск возгорания при использовании с другим аккумулятором.
31. Используйте только аккумуляторные батареи, специально предназначенные для данного прибора. Использование других аккумуляторных батарей может привести к получению травм и повреждению.
32. Не подвергайте аккумуляторную батарею или прибор воздействию огня или чрезмерной температуры. Воздействие температуры свыше 265°F (130°C) может привести к взрыву.
33. Соблюдайте все инструкции по зарядке и не производите зарядку батареи аккумуляторов или прибора за пределами температурного диапазона, указанного в инструкциях. Неправильная зарядка или зарядка при температурах, выходящих за пределы указанного диапазона, может привести к повреждению аккумулятора и повысить риск возгорания.

34. Когда аккумуляторная батея не используется, держите его подальше от других металлических предметов, таких как скрепки, монеты, ключи, гвозди, винты и другие небольшие металлические предметы, которые могут вызвать короткое замыкание. Короткое замыкание клемм аккумуляторных батарей может привести к получению ожогов или возгоранию.
35. Ненужные товары аккумуляторных батарей нужно правильно утилизировать, не выбрасывайте аккумуляторы в мусорное ведро. Аккумуляторы, которые не могут быть переработаны, должны быть переработаны в соответствии с местными законами и нормами. Неверная утилизация аккумуляторных батарей может стать причиной возгорания или взрыва.
36. Не пытайтесь разобрать, изменить или отремонтировать аккумуляторную батарею. Попытки разобрать, изменить или отремонтировать аккумуляторную батарею могут привести к утечке электролита, перегреву, возгоранию, взрыву или стать причиной травмы.
37. Соблюдайте все инструкции по зарядке и не производите зарядку блока аккумуляторных батарей или прибора за пределами температурного диапазона, указанного в инструкциях. Неправильная зарядка или зарядка при температурах, выходящих за пределы указанного диапазона, может привести к повреждению аккумулятора и повысить риск возгорания.
38. Ремонтируйте прибор только квалифицированным специалистам, использующим только идентичные запасные детали. Данная мера позволяет обеспечить безопасность изделия.
39. Не вносите изменения и не пытайтесь ремонтировать аккумулятор, кроме случаев, указанных в инструкциях по использованию и уходу.
40. Обязательно выключайте прибор перед подсоединением или отсоединением электрических шлангов.

СОХРАНИТЕ ДАННУЮ ИНСТРУКЦИЮ

Пылесос предназначен только для уборки пыли в жилых помещениях

1. Убедитесь, что вилка полностью подключена обычным, чтобы избежать перегрева электрических линий, короткого замыкания и возгорания.
2. Не помещайте изделие в местах с высокой температурой или в сырые, с резким запахом окружение, перегрев, появление несоответствующего звука и дыма во время зарядки или работы. Поместите изделие на открытую зону, на негорючие поверхности. Обслуживание должно выполняться производителем или квалифицированным специалистом по ремонту. Данная мера поможет обеспечить безопасность.
3. Не погружайте изделие в воду или другие жидкости. Не погружайте в воду.
4. В случае сильного нагрева выдуйте сразу, немедленно выключите пылесос. Обратите, что на щетиной валике не намотались волосы или другие волокнистые материалы.
5. Не держите пылесосом на расстоянии, если кто-то использует кардиостимулятор.
6. Не держите пылесосом на расстоянии, если кардиостимулятор, или имплантированный на настенной зарядной станции для хранения.
7. При зарядке с настенной зарядной станцией, убедитесь, что основной блок плотно прижат к настенной зарядной станции, чтобы не допустить падения и получения травм.
8. Не ставьте изделие на настенную зарядную станцию.
9. Держите детей подальше от настенной зарядной станции. Падение изделия во время зарядки может привести к возникновению опасной ситуации, например, поражению электрическим током вследствие утечки.
10. При использовании изделия не ставьте его под механическое давление. Предотвратите столкновение изделия с другими предметами.
11. Наконец, полностью очистите основную щетку, чтобы избежать слабого всасывания или нагрева двигателя из-за блокировки потока воздуха.
12. Не используйте изделие для всасывания любых горящих или курящих предметов.
13. Не используйте пылесос для всасывания воды, чтобы избежать попадания воды в основной блок, что может привести к неисправности. При попадании воды в пылесборник немедленно выключите пылесос и отправьте пылесборник. Обратитесь к ближайшему магазину Roidmi или производителю для ремонта.
14. После завершения промывки щетинистого валика его необходимо полностью высушить перед повторной установкой.
15. Тщательно очистите аксессуары после использования, чтобы предотвратить остатки жидкости, хлопка и прилипания к ним.
16. Для очистки фильтра пылесборника используйте только щеть, поставляемую производителем. Не используйте другие плоские или острые предметы.
17. Держите щетку для очистки подалее/ниже для детей могла, чтобы избежать получения травм. Щетка для очистки с острыми лезвиями необходима для уборки шерсти волосы, острые предметы.
18. Не требуется никакого действия пользователя, чтобы переключиться с 50 на 60 Гц, так как изделие автоматически подстраивается под 50 Гц, 60 Гц или 50/60 Гц.

Обзор изделия

Детали и принадлежности

Сборка

Используйте в качестве вертикального пылесоса. Подсоединяйте различные насадки для разных целей (чистки а)

→ Отрегулируйте общую длину удлинителя с учетом ваших требований к уборке.

Используйте в качестве ручного пылесоса: Вставляйте насадку в корпус до тех пор, пока не услышите звук щелчка.

Способ хранения:
С помощью расширительных винтов необходимо закрепить на стене настенный кронштейн, чтобы повесить пылесос (на него).

⚠ Перед завершением убедитесь в отсутствии скрытых водопроводных труб и электрических кабелей и проводов сбоку места крепления.

Порядок работы

Зарядка

→ Полностью зарядите аккумулятор перед первым использованием.

1. Зарядка аккумулятора
Когда пылесоса подключен к розетке, он светится красным light, мигание light, что указывает на недостаточный уровень заряда. Подключите зарядное устройство к пылесосу и розетке, light начинает светиться light. Подключение зарядного устройства к розетке приводит к тому, что light начинает светиться light. Light light. Light light light