THUNDERX3
GAMING REVOLUTION

TK40

THUNDERX3 User Manual

KEYBOARD FEATURES

Change backlighting mode by pressing FN+LED keys
Mode 1. LED constantly on
Mode 2. Breathing light effect
Mode 3. Circulates through 7 LED colors
Mode 4. Switch off

While in Mode 1 or Mode 2, press to choose from one of the seven colors to be the backlight color.

FN+PAGE UP - increase LED brightness
FN+PAGE DOWN - decrease LED brightness

Set Macro to each of the six MACRO KEYS:
G1/G2/G3/G4/G5/G6/G7/G8
and use these keys to fast respond to your game play.

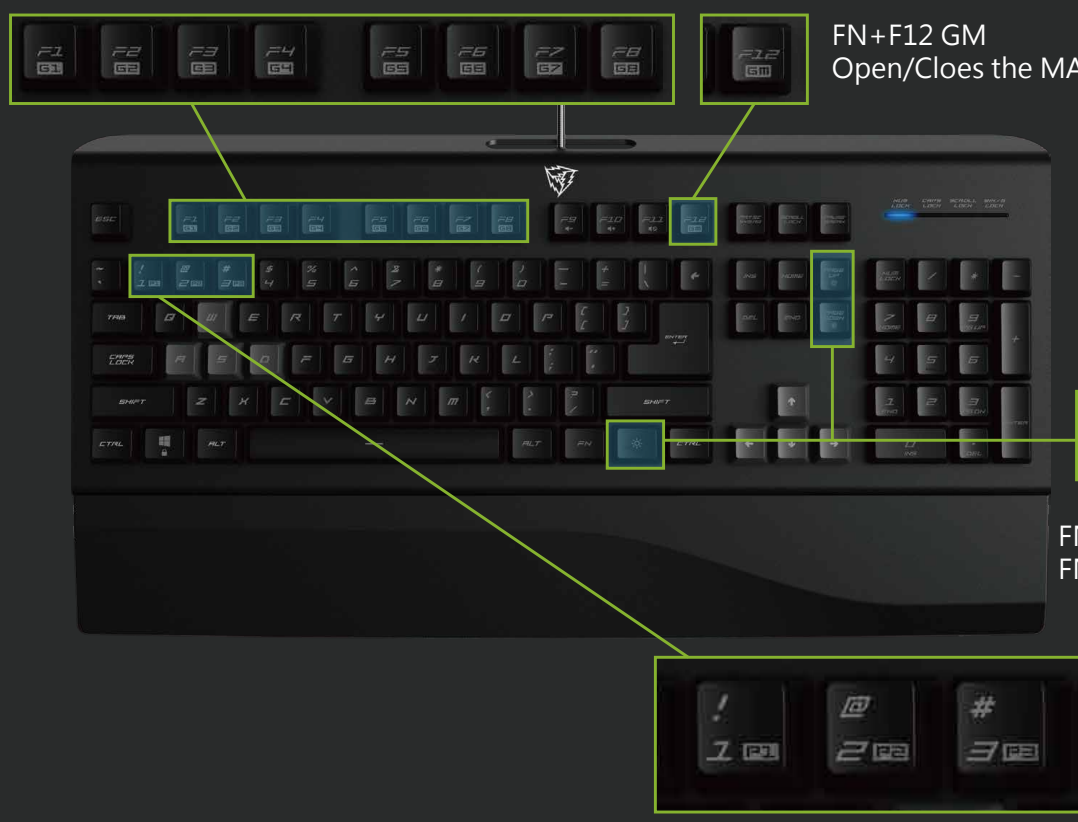

FN+F12 GM
Open/Cloes the MACRO KEYS

FN+PAGE UP - increase LED brightness
FN+PAGE DOWN - decrease LED brightness

Profiles for different games settings.
FN+P1=Profile 1
FN+P2=Profile 2
FN+P3=Profile 3

Chapter One : Interface

Profile Selection
Save up to 3 profiles

Information Window
Displays current settings on this keyboard

Action Window
Choose and assign an action

Language Selection
Choose a language

Save as
Save settings

Load File
Load saved settings

Restore
Restore current profile only

Reset All
Reset all profiles

Apply
Confirmation of change

ThunderX3 Website
Hyperlink to official website

Chapter Two : Button

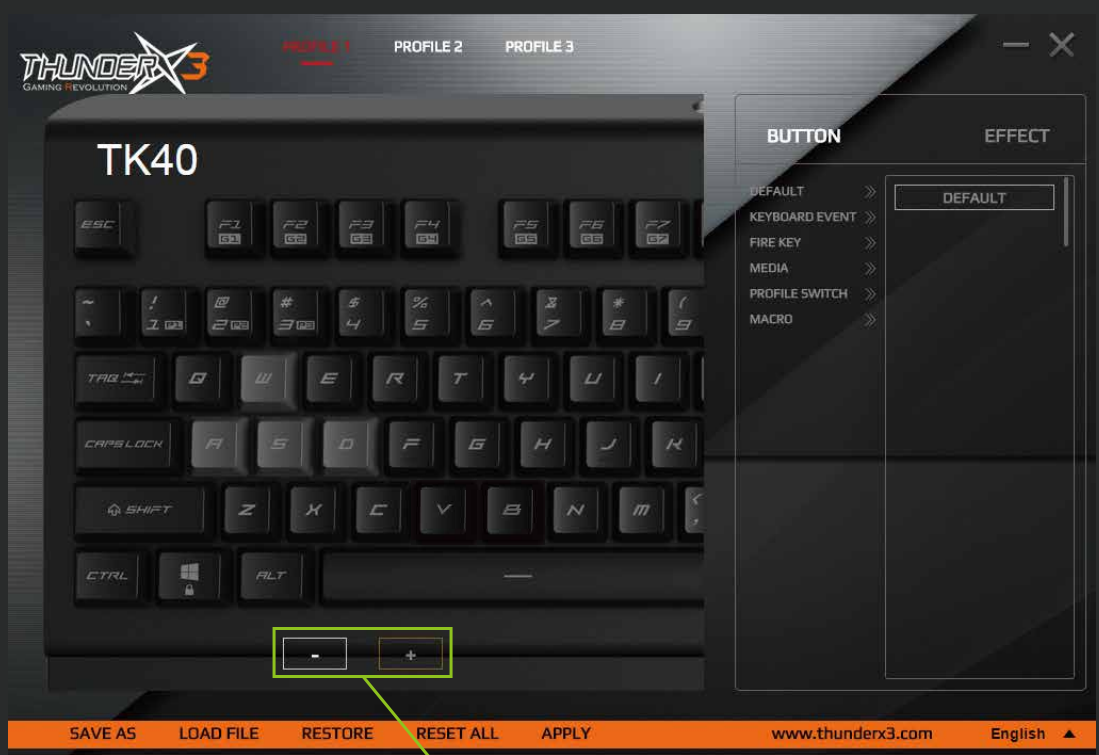

Click + to enlarge keyboard
Click - to shrink keyboard

Shrink to see the entire keyboard

Shrink / Enlarge

Function: DEFAULT
(To set default to an already assigned key)

1. Select from one of the three profiles
2. Click "BUTTON"
3. Select "DEFAULT" from the main function list.
4. Click "DEFAULT" from the action menu

5. Drag the action box to make default of an already assigned key(with white boarder).

※To deselect or cancel, press the right mouse click.

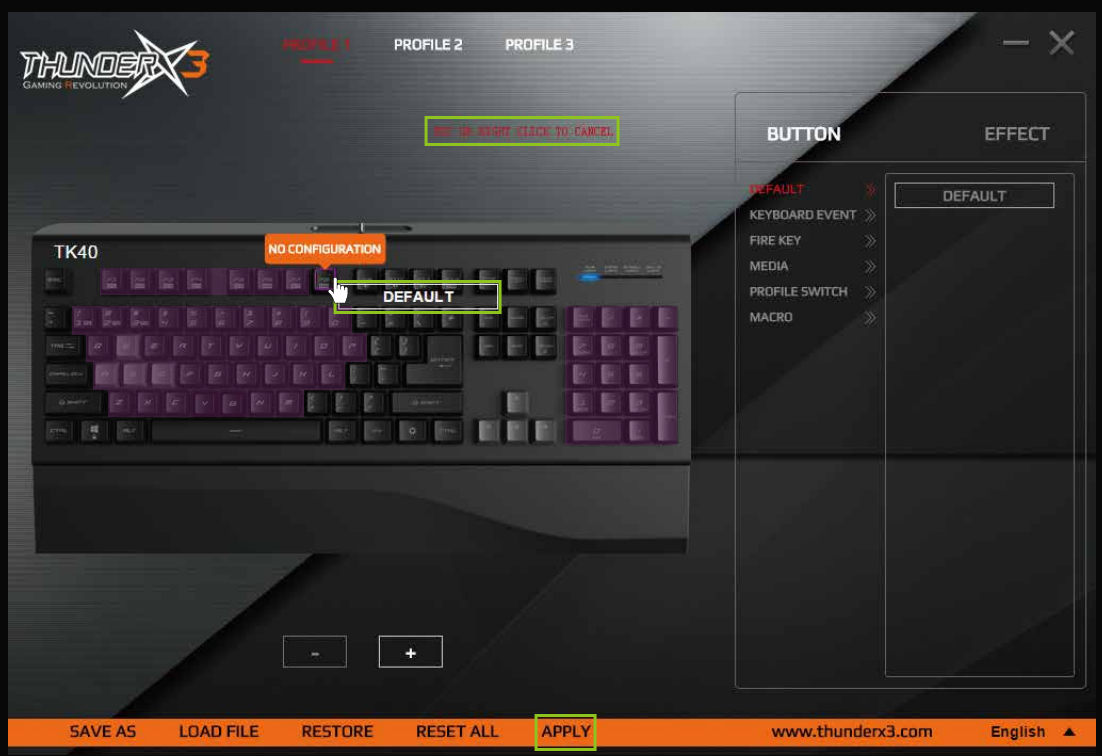

Keys in the purple area are the keys that can be assigned to perform other actio ns listed in the action window.

Self designed Macro settings can be assigned to the Macro keys in the orange area.

Function: Keyboard Event (to execute a keyboard action with a mouse click)

1. Select "KEYBOARD EVENT"
2. Choose a preset action from the action list or record your own.

Double click on
"DOUBLE CLICK START RECORDING HOTKEY"
Type in a key for a combination of keys.
For example: an "A" or "Ctrl+__(any letter)"

Keys that can be recorded are shown below

(1) F1~F12
(2) Shift
(3) Ctrl
(4) Ctrl+
(5) Win
(6) Alt
(7) Number key
(8) Word key

Click the action and drag the action box to a key of your preference.

Click "Apply" to confirm the change.

※To reselect or cancel, press the right mouse click.

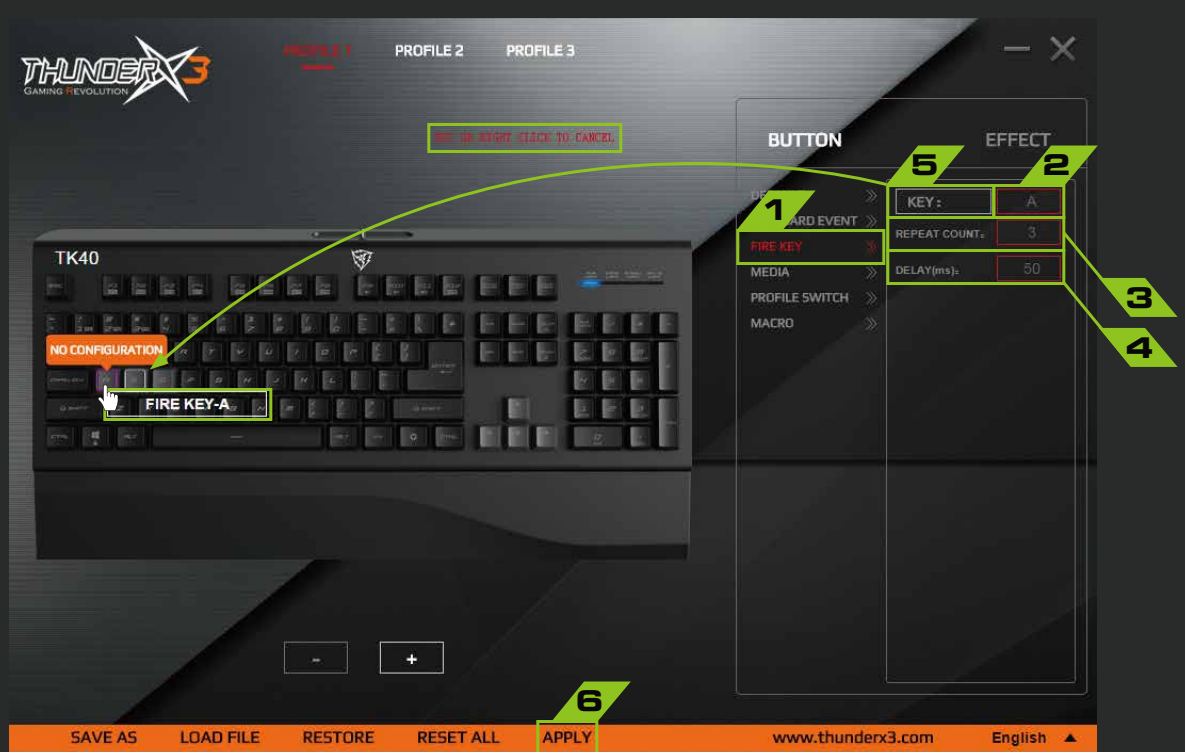

Function: Fire key

1. Select "Fire Key" .
2. Assign a keystroke to perform as fire key.
3. Set the repeat times per mouse click.
4. Set the delay time between each click.
5. Click KEY: and drag to your designated key.
6. Click "Apply" to confirm change.

Function: Macro

1. Select "MACRO"
2. Choose "MACRO SETTINGS"

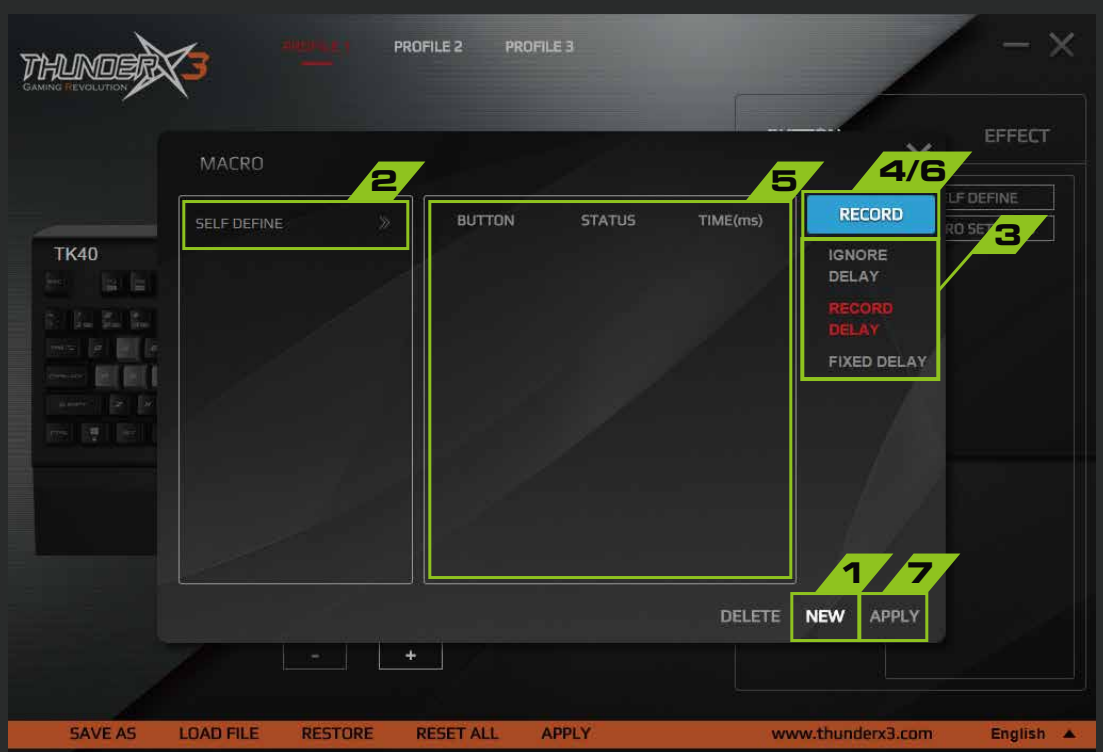

1. Click "NEW" to create a new Macro
2. Click to name the new Macro
3. You have the options to choose delay times between each key stroke:
* to ignore delay
* to record delay time between each key stroke
* set a fixed delay time between each key stroke
4. Click "RECORD" to start recording
5. Press the desired keys on the leyboard to record into a Macro
6. Press "RECORD" again to stop recording
7. Click "APPLY" to confirm the setting

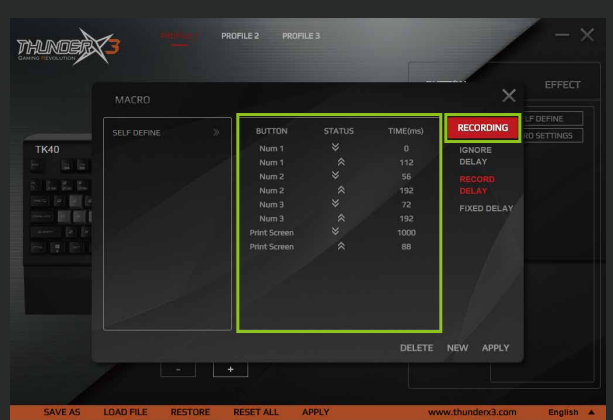

To delete a Macro

1. Select the Macro name
2. Click "DELETE"

To assign a Macro to G keys on the left side of the keyboard.

Click the newly set Macro and drag the box to one of the G keys (G1~G6) of your preference.

※To reselect or cancel, press the right mouse click.

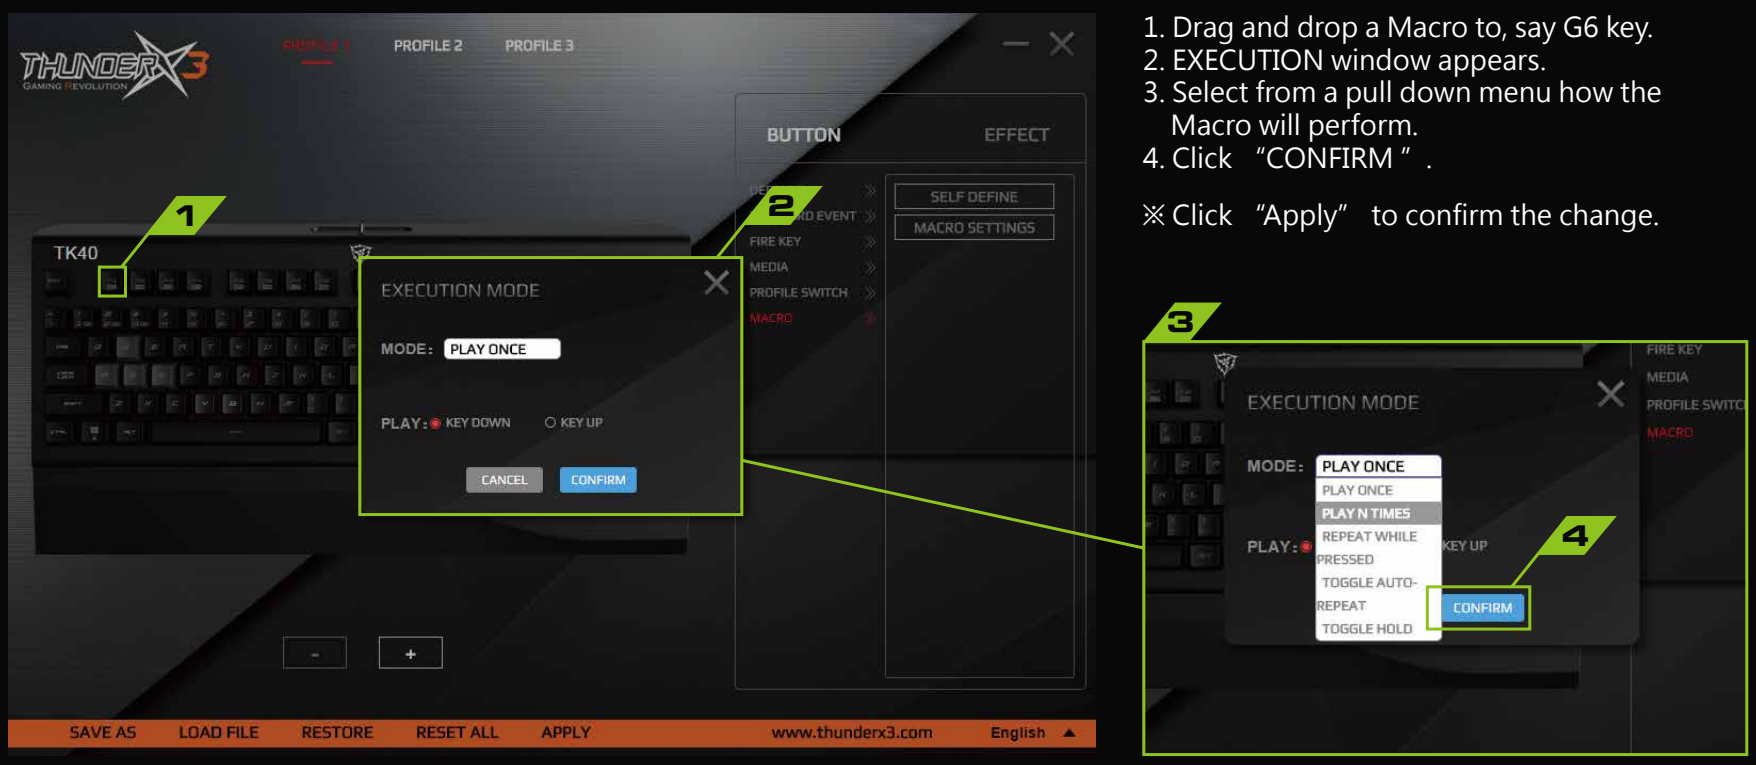

1. Drag and drop a Macro to, say G6 key.
2. EXECUTION window appears.
3. Select from a pull down menu how the Macro will perform.
4. Click "CONFIRM" .

※ Click "Apply" to confirm the change.

Chapter Three : EFFECT

1. Select from one of the three profiles
2. Click "Effect"
3. Select from one of the three light effects or simply switch off the LED
4. Set the speed of the flash
5. Set the brightness of the LED
6. Select LED color
7. Click "Apply" to confirm the change.