
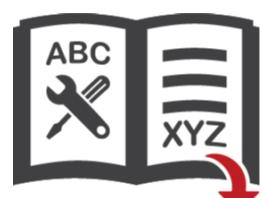


## TV Wall Mount


Fixed

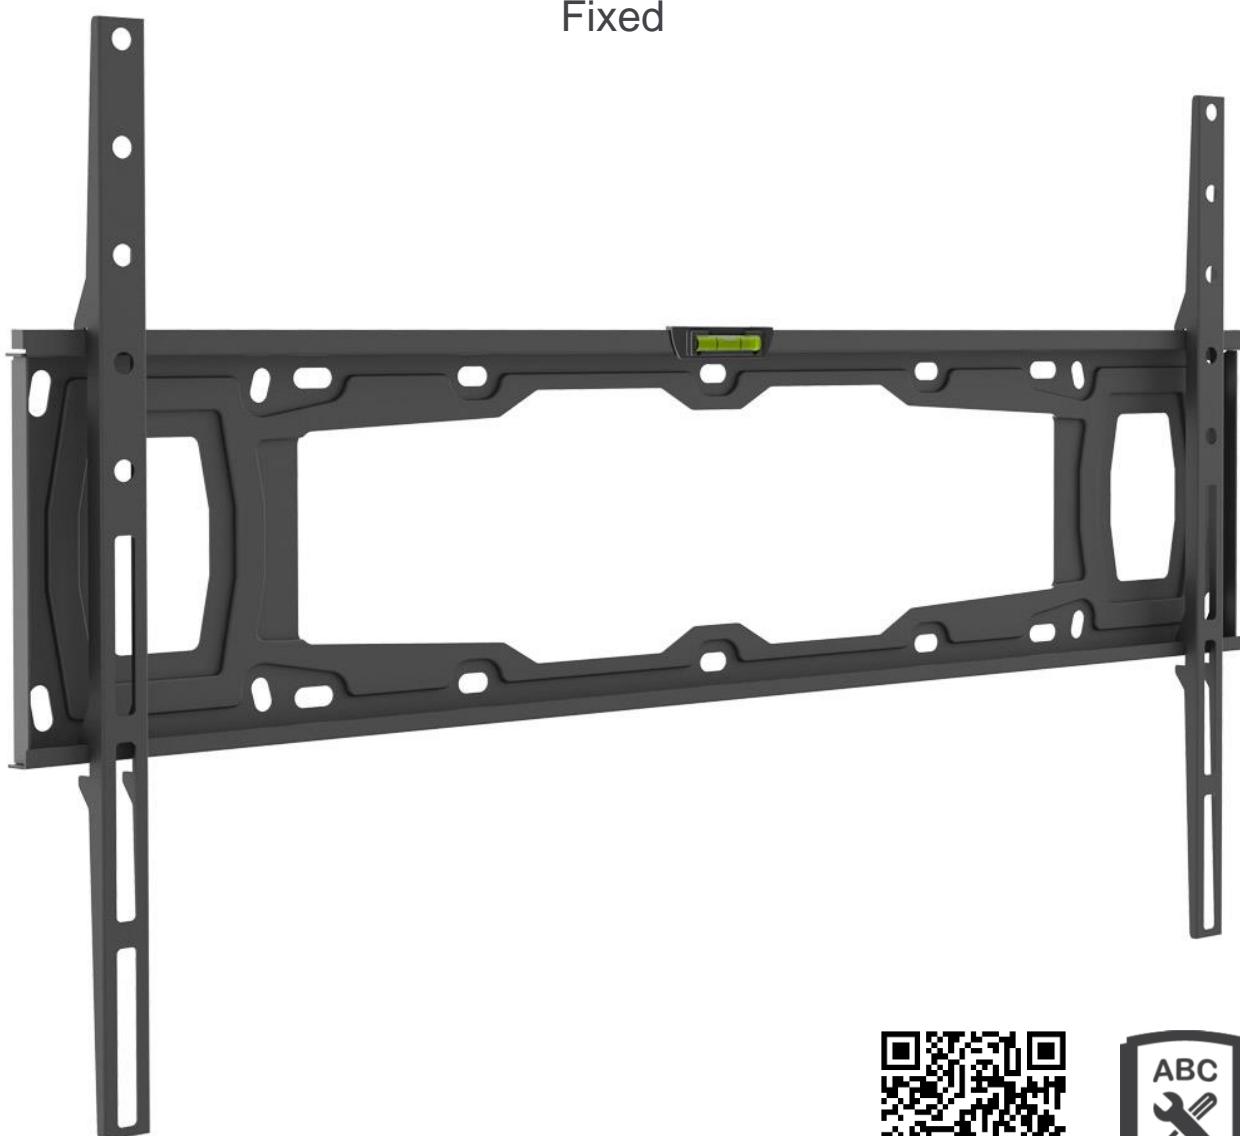

Download Assembly Instructions with Text

For more information: [barkanmounts.com](http://barkanmounts.com)



If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

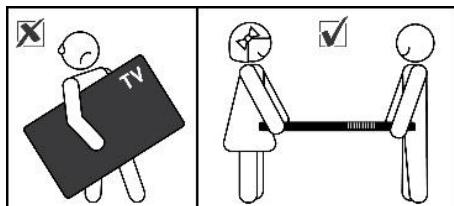

**CAUTION** This Mount is intended for use only with the maximum weight indicated. Using heavier products might cause injury.


# Included Parts not to scale


Page 2

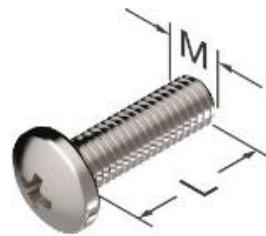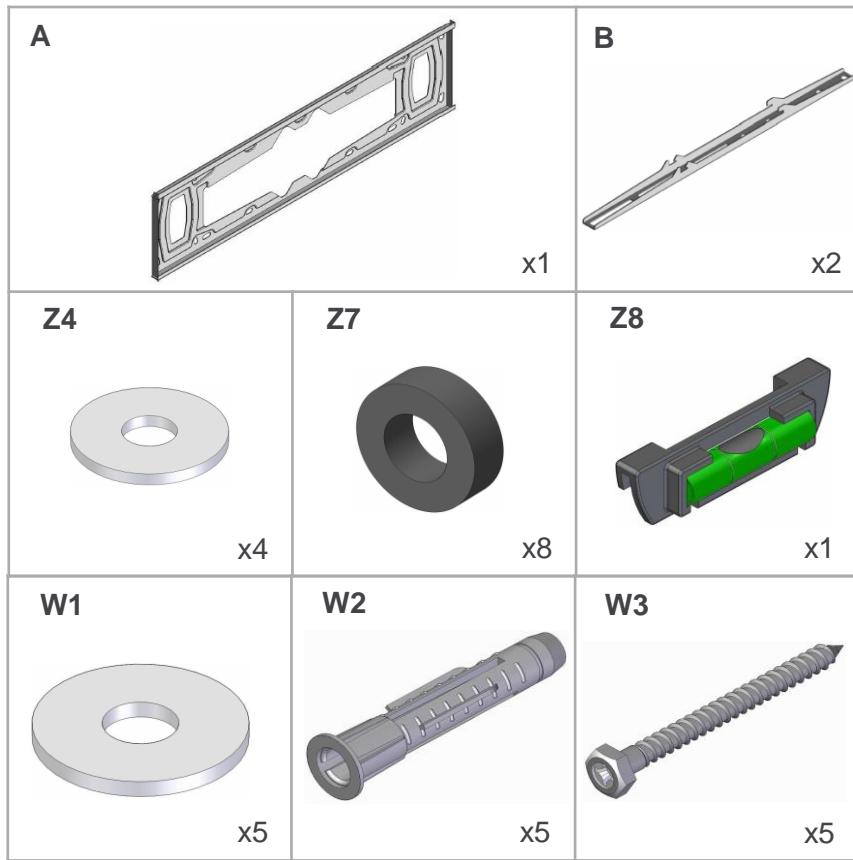


#	M	L mm	L inch	pcs
<b>Z1</b>	6	16	$5/8$	4
<b>Z2</b>	6	25	1	4
<b>Z3</b>	4	20	$3/4$	4
<b>Z5</b>	8	25	1	4
<b>Z6</b>	8	45	$1\frac{3}{4}$	4

## Required Tools

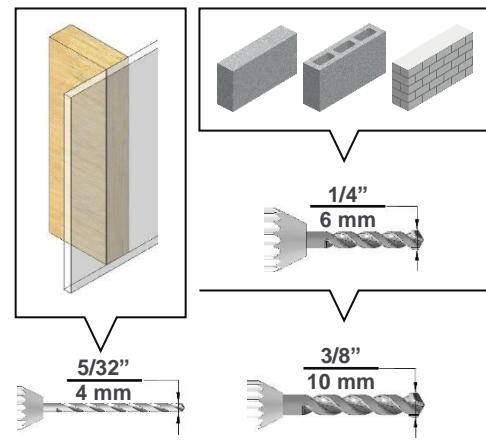


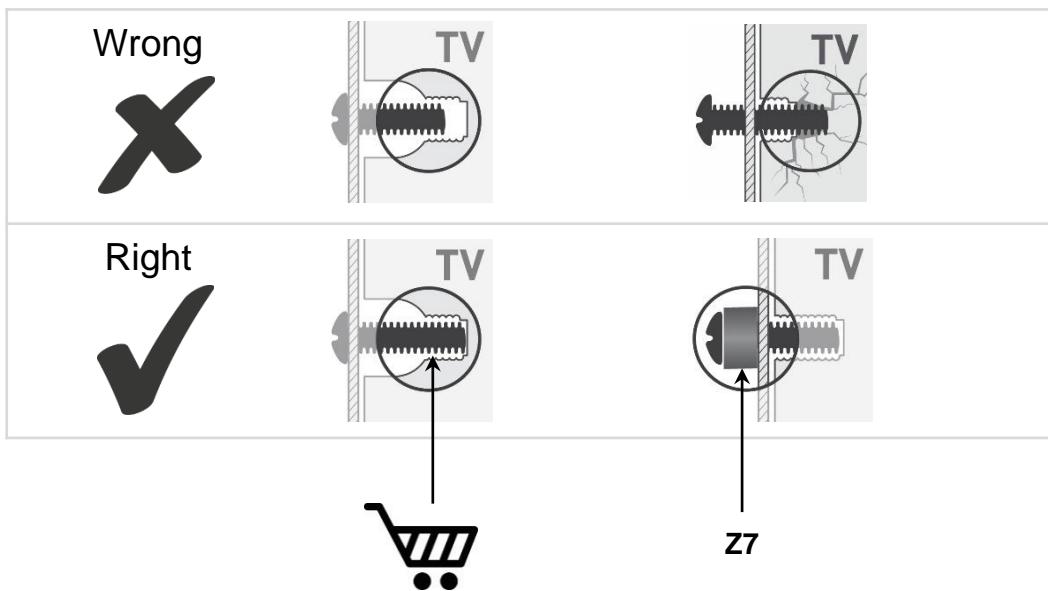

1

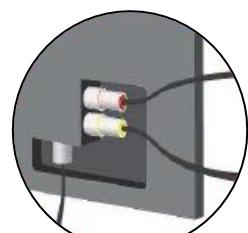


1a

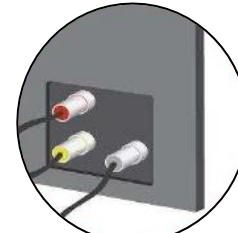

1b

Page 4

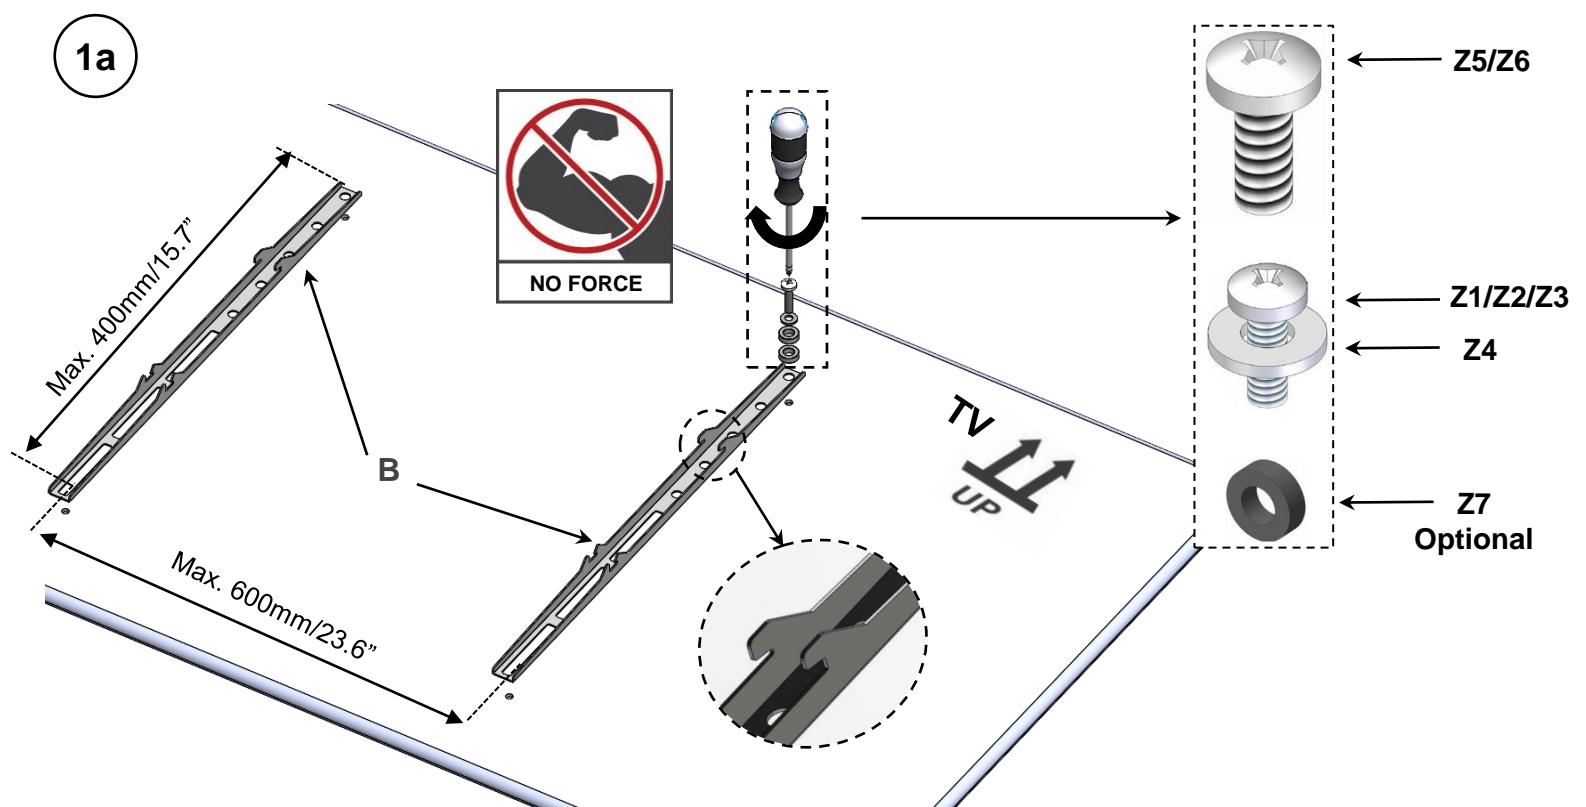


2

Page 4

For more positioning options




1b

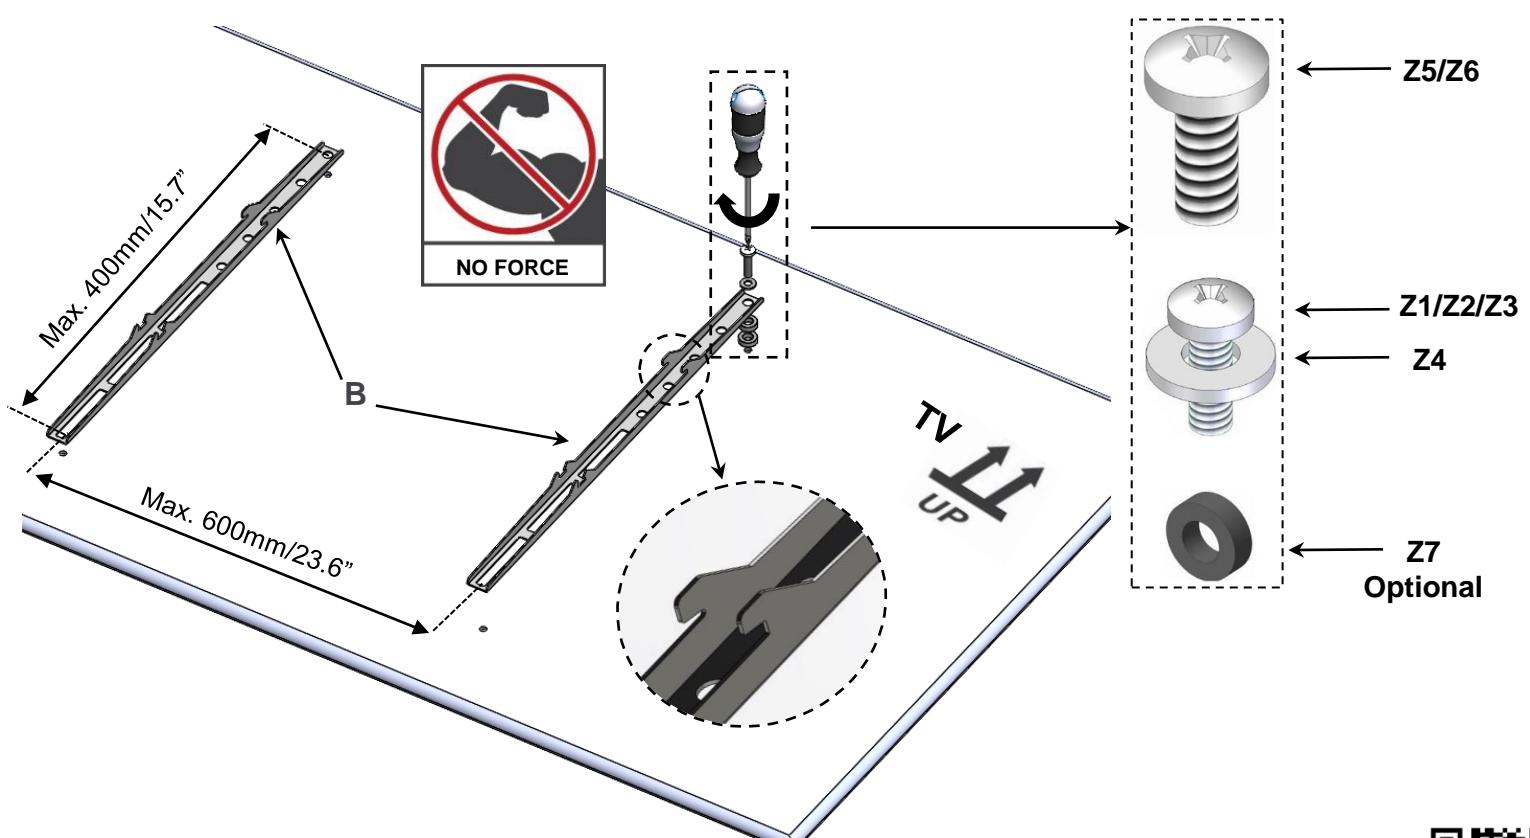

For more positioning options




2







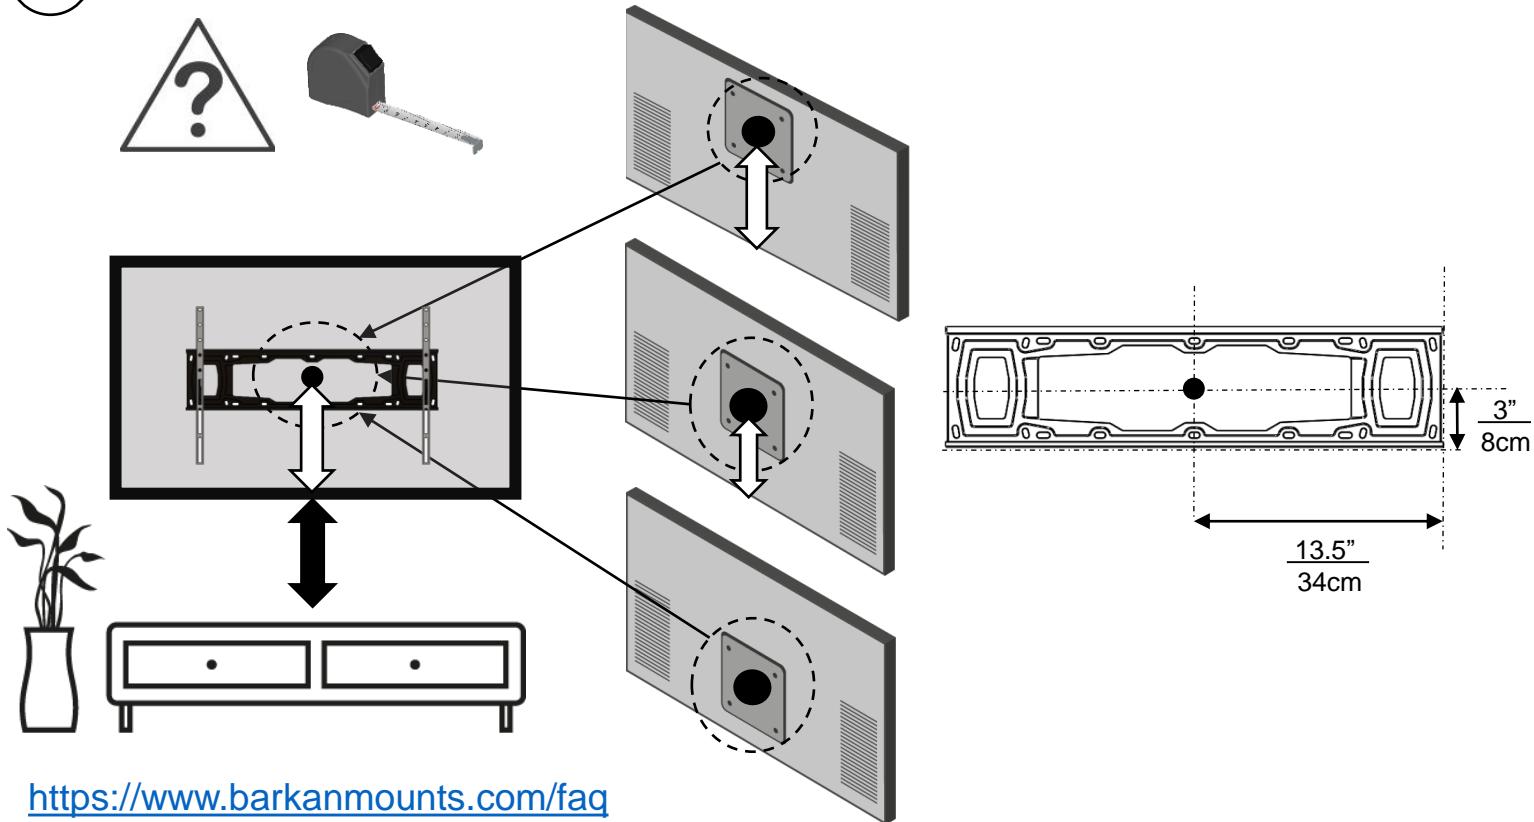


<https://www.barkanmounts.com/faq>


3

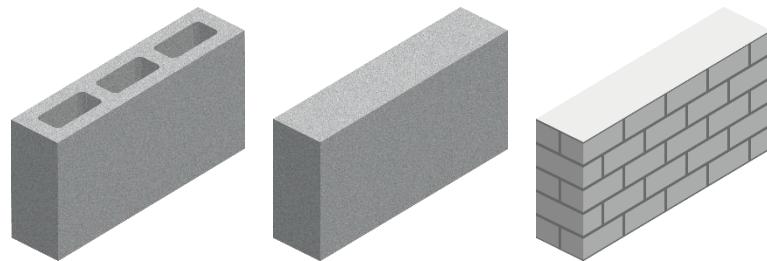

4

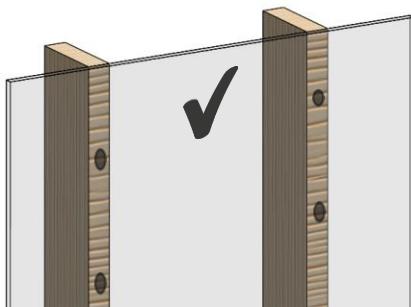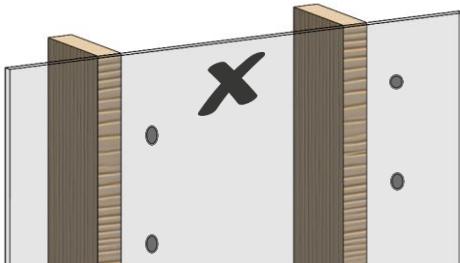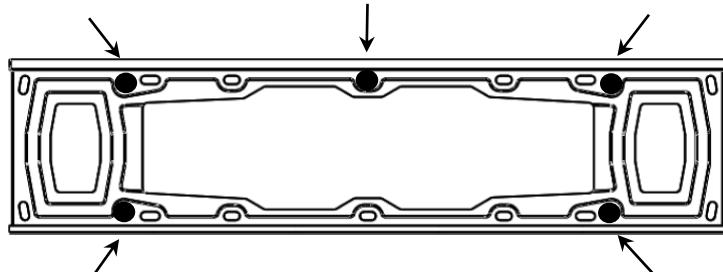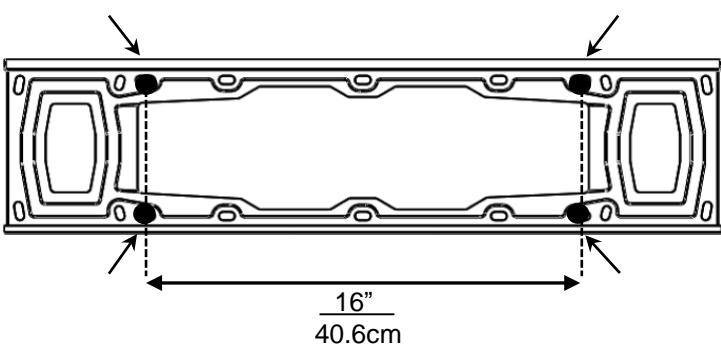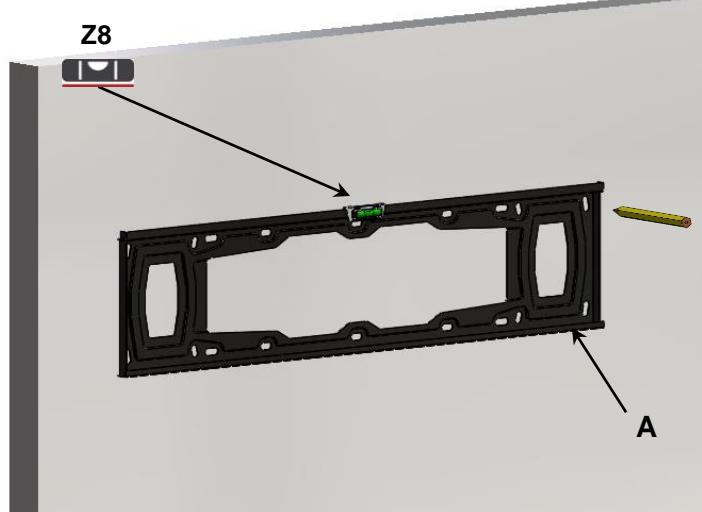
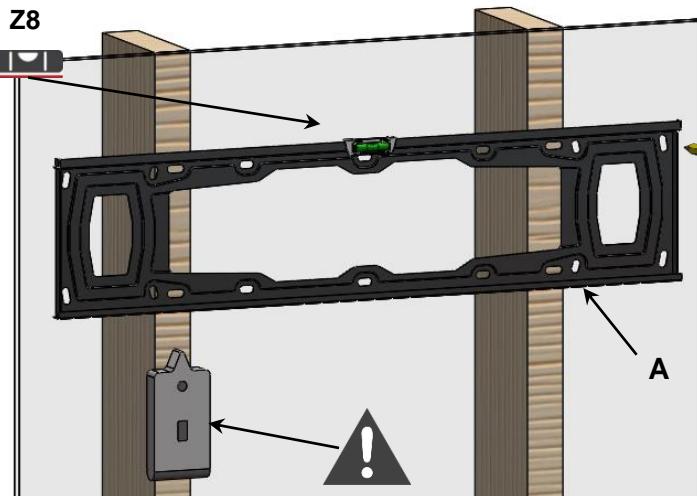


Page 6



Page 6

4a

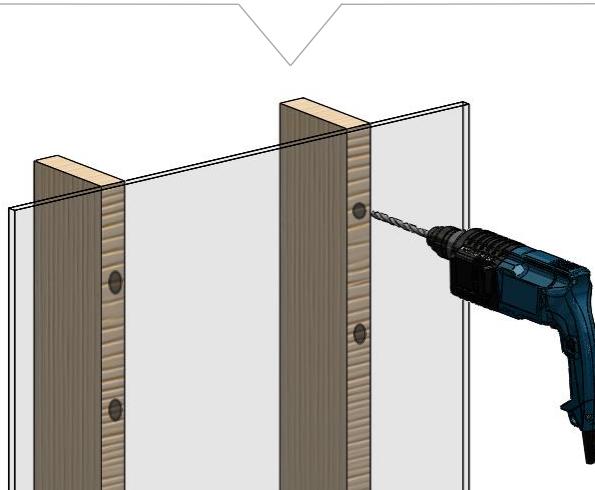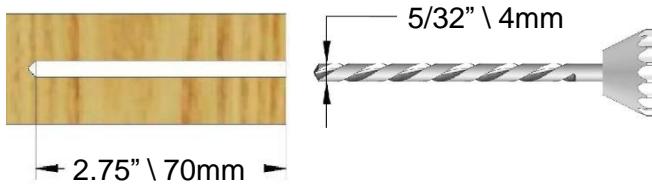

Z8





A

W3+W1


7/16" / 11mm



4b

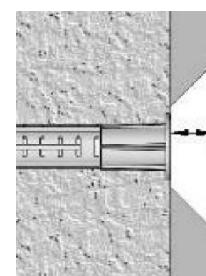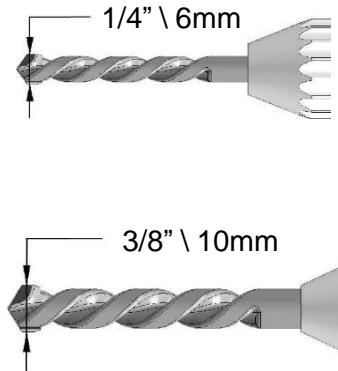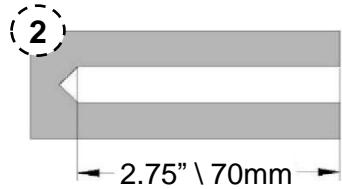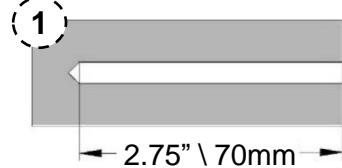

The anchor must be sunk at least 3/8" / 10 mm into the plaster coating

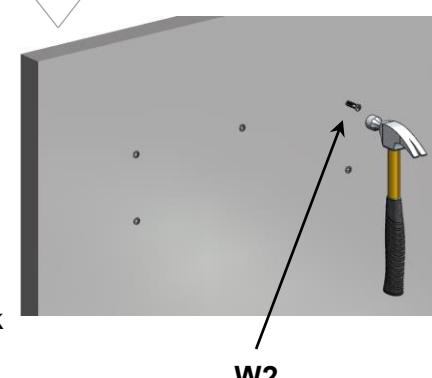

1

2

1

2



W3+W1


Z8

A


7/16" / 11mm




5

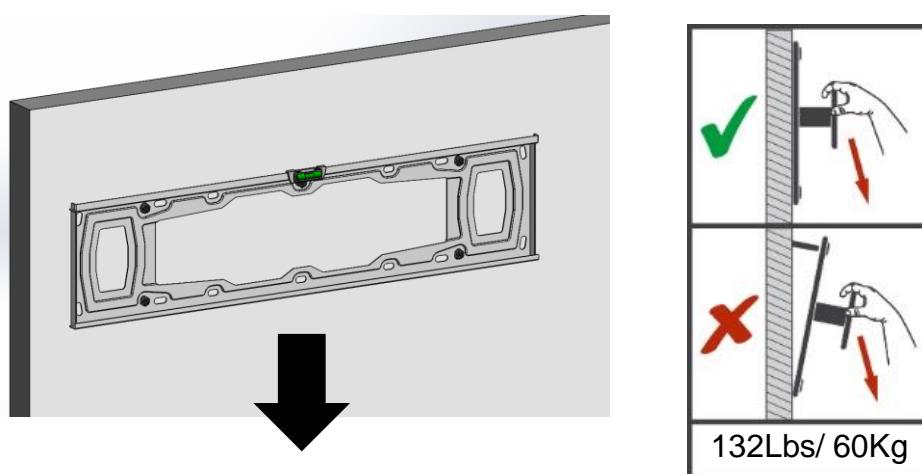


6

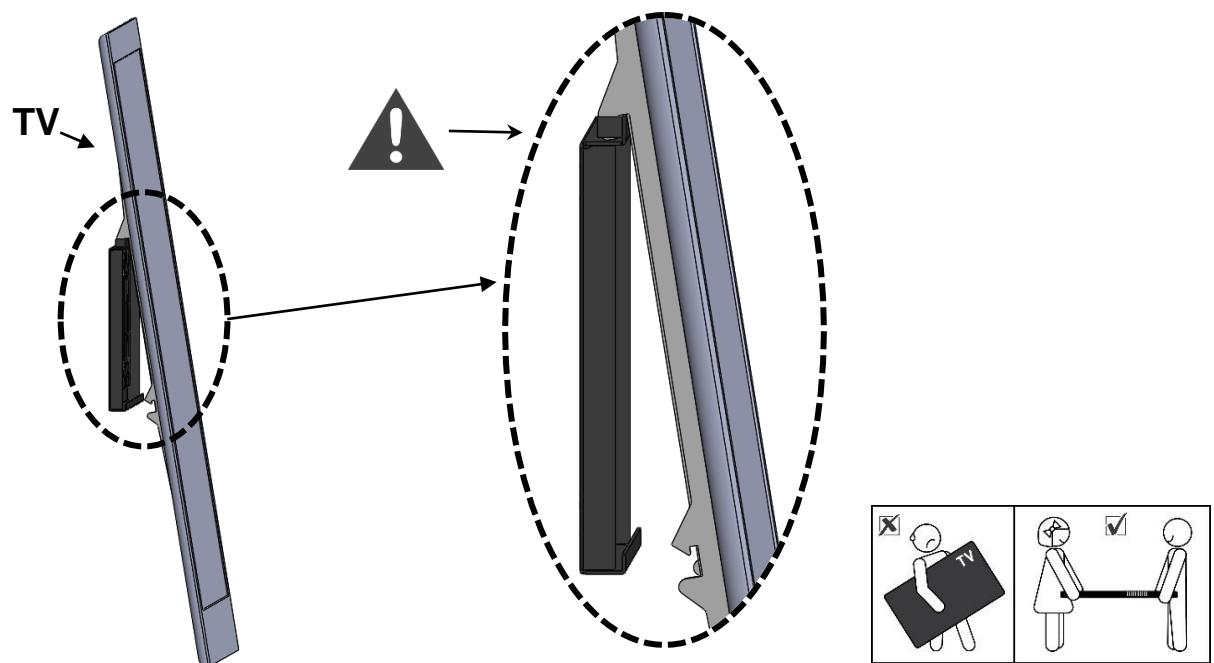




7

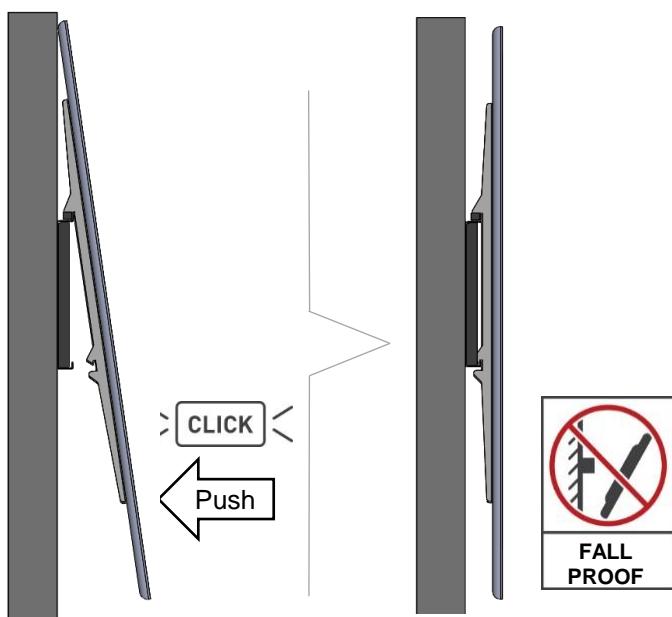

8

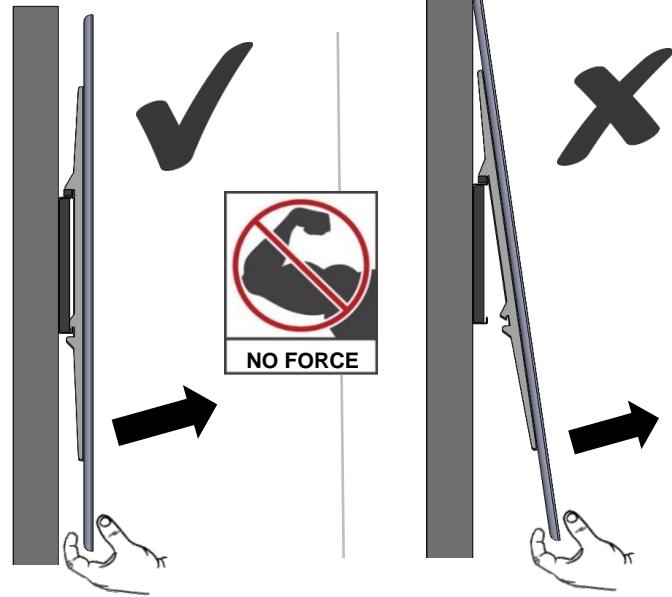

9

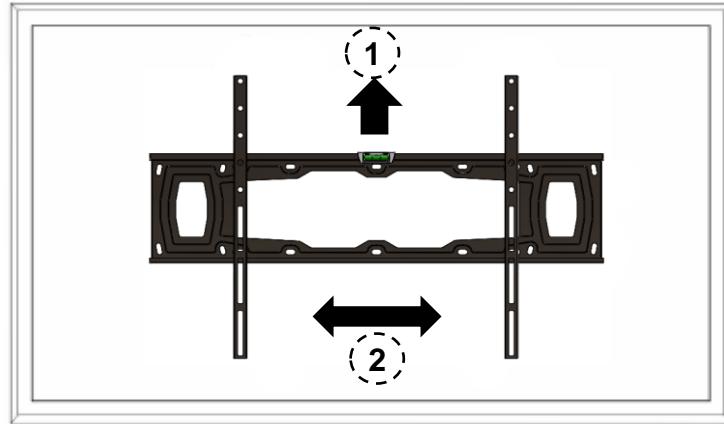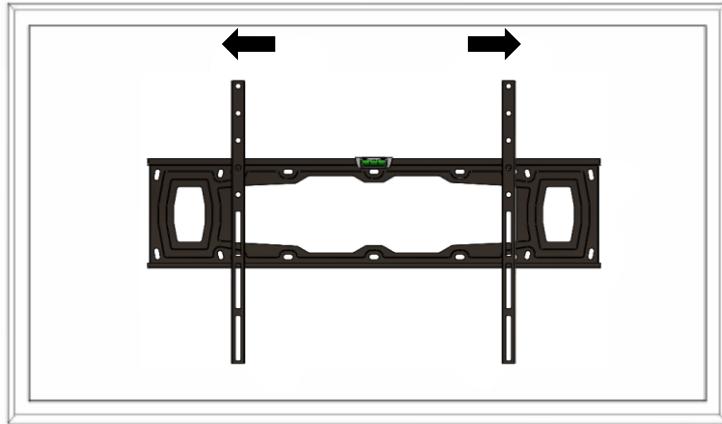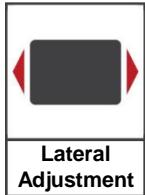

10

