
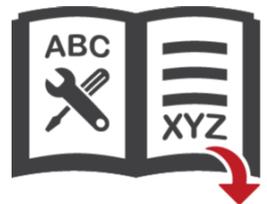


## Long TV Wall Mount

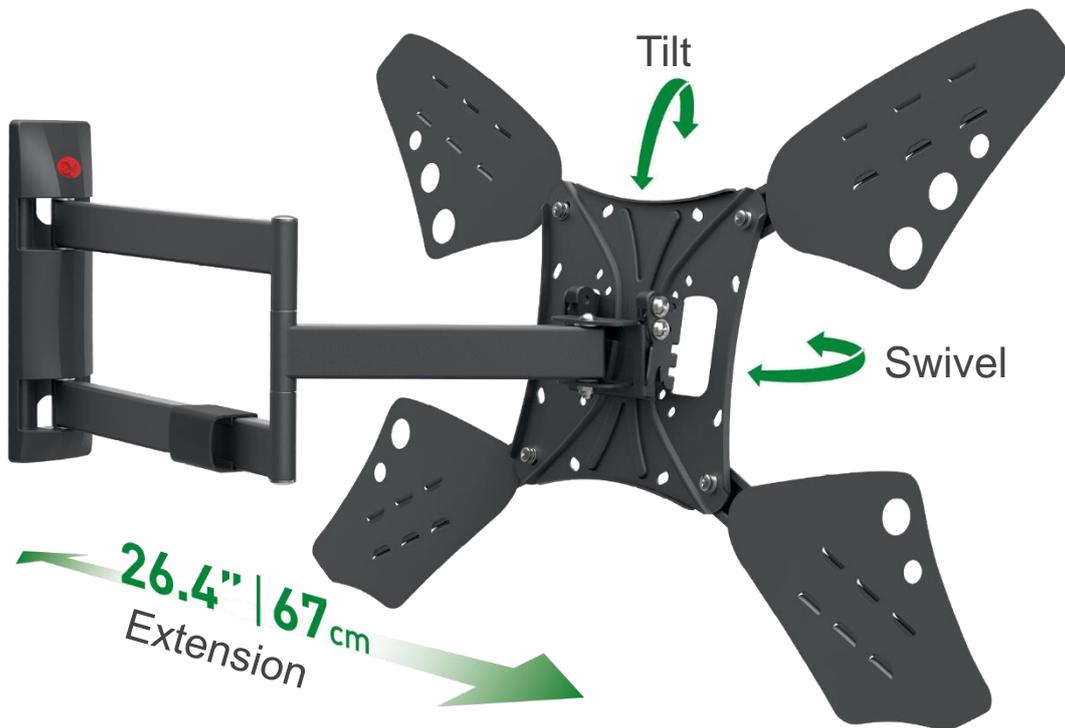

Download Assembly Instructions with Text


For more information: [barkanmounts.com](http://barkanmounts.com)

If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

3400L-MAN-BNG-05\_2208




<p><b>TV Size</b></p> <p>13"-83" 33cm-211cm</p>
---


<b>TV Weight</b>	
US	EU
Max	
110lbs	50kg

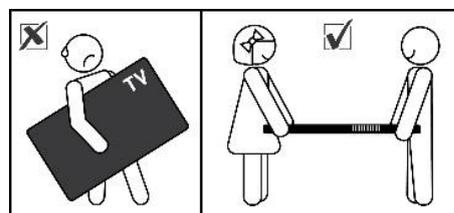

**CAUTION** This Mount is intended for use only with the maximum weight indicated. Using heavier products might cause injury.



# Included Parts not to scale

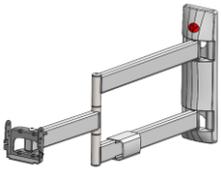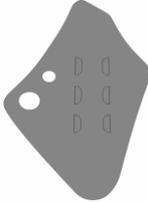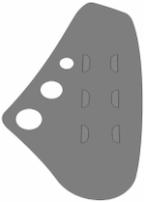
<p><b>A</b></p>  <p>x1</p>	<p><b>B</b></p>  <p>x1</p>	<p><b>C</b></p>  <p>x4</p>
<p><b>D</b></p>  <p>x1</p>	<p><b>E</b></p>  <p>x2</p>	<p><b>F</b></p>  <p>x2</p>
<p><b>Z6</b></p>  <p>8x</p>	<p><b>Z7</b></p>  <p>x4</p>	<p><b>Z8</b></p>  <p>x4</p>
<p><b>W1</b></p>  <p>x4</p>	<p><b>W2</b></p>  <p>x4</p>	<p><b>W3</b></p>  <p>x4</p>
<p><b>P1</b></p>  <p>x4</p>	<p><b>P2</b></p>  <p>x2</p>	<p><b>P3</b></p>  <p>x2</p>

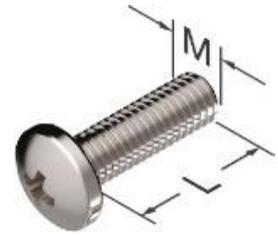



#	M	L mm	L inch	pcs
<b>Z1</b>	4	20	3/4	4
<b>Z2</b>	6	16	5/8	4
<b>Z3</b>	6	25	1	4
<b>Z4</b>	8	25	1	4
<b>Z5</b>	8	45	1 3/4	4

# Required Tools

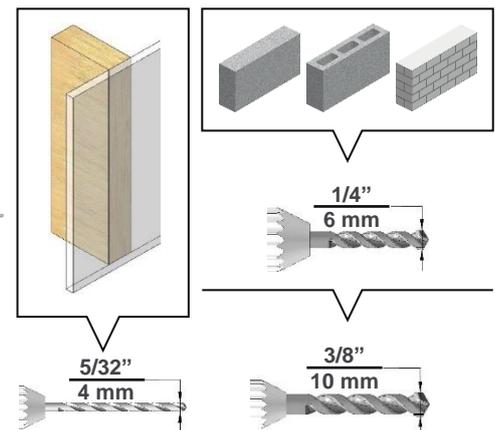
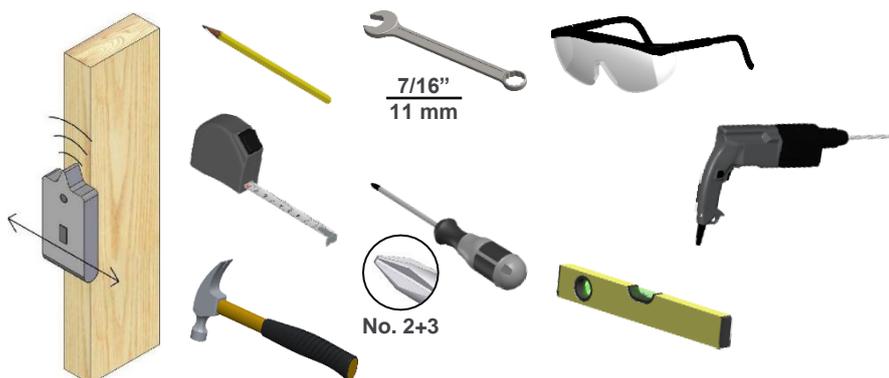


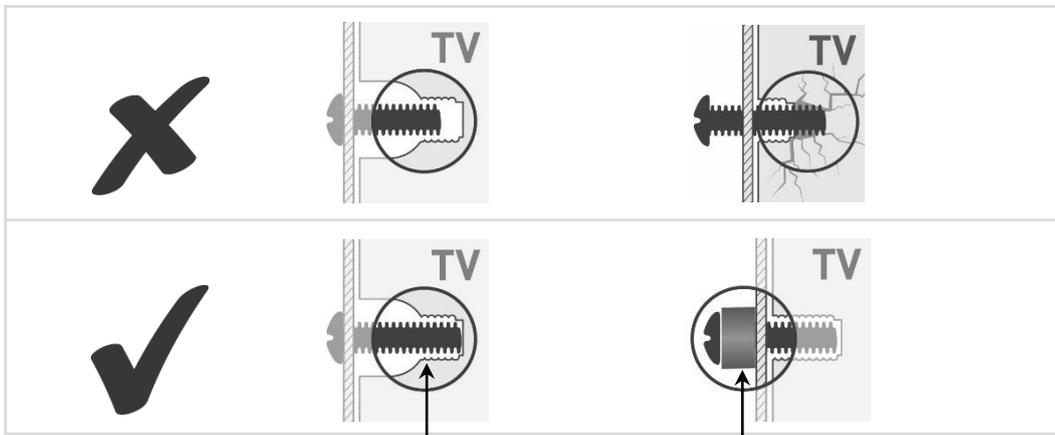

1

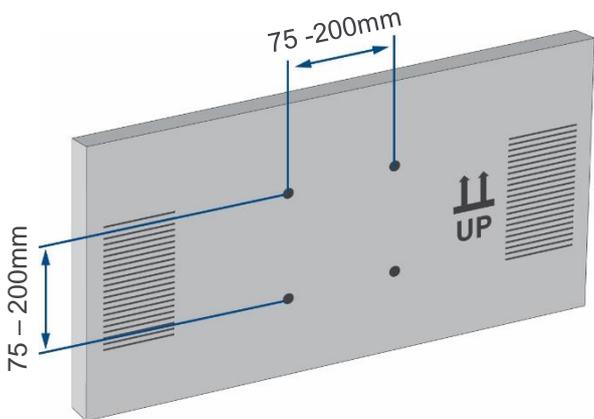




1a

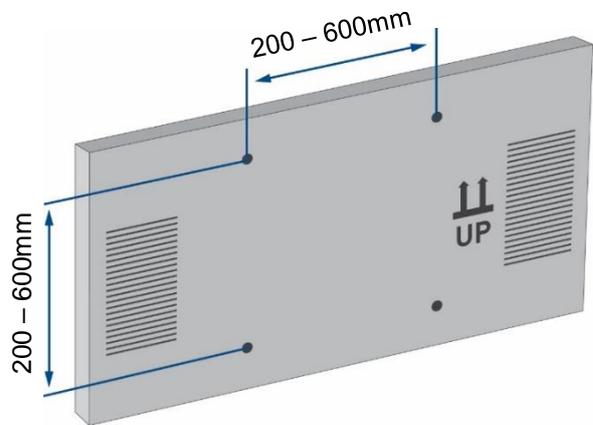

1b

Page 4

1a 75x75 mm – 200x200 mm.

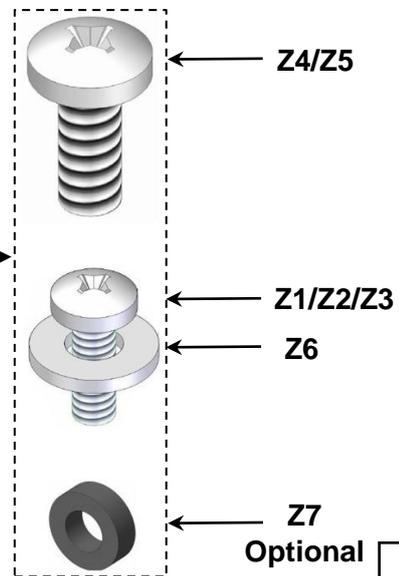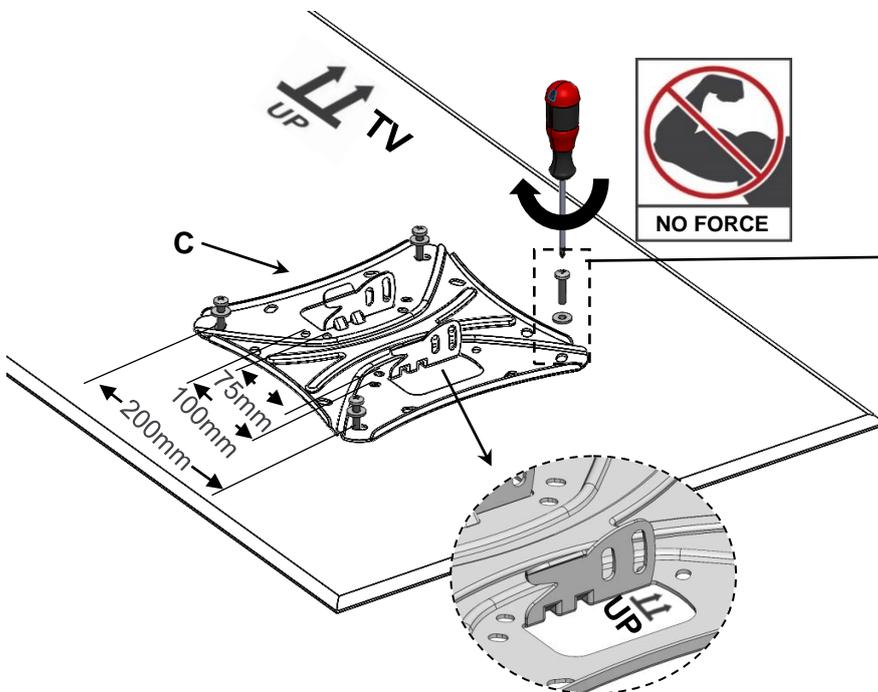


2

Page 6





1b 300x200 mm – 600x400 mm.

1




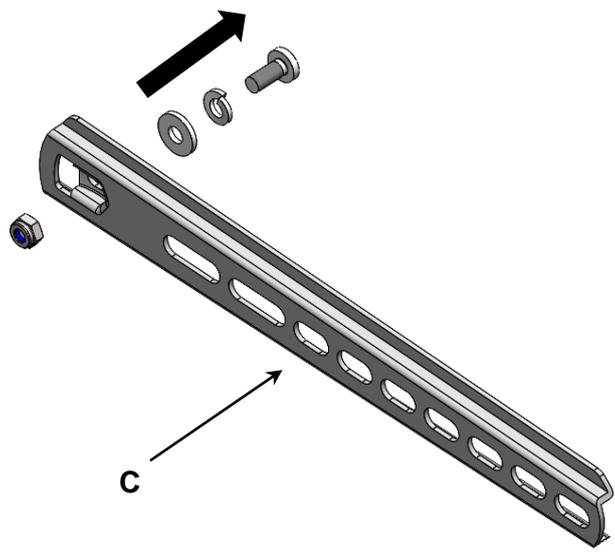



2

Flat TV

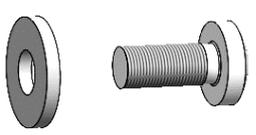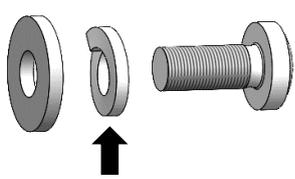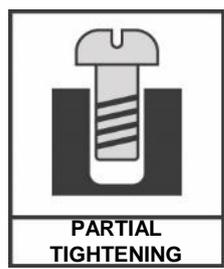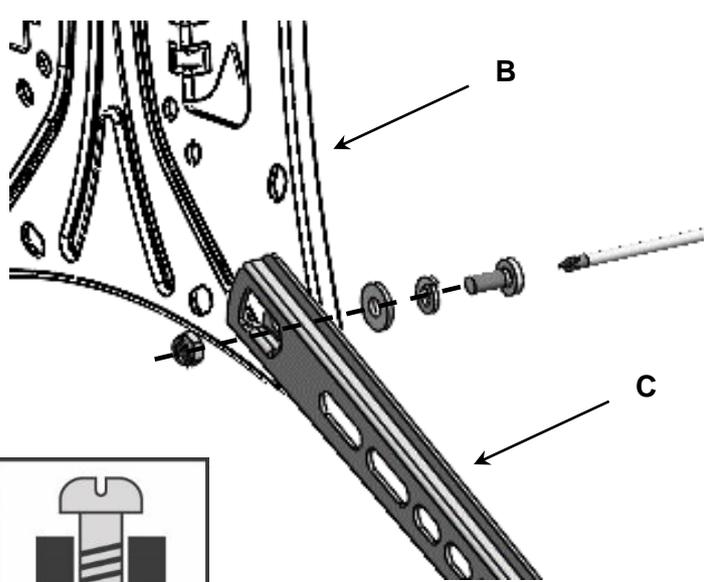


Curved TV

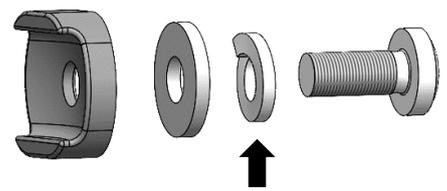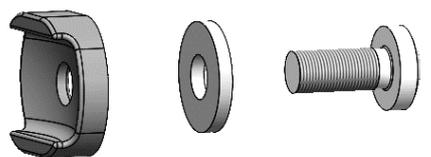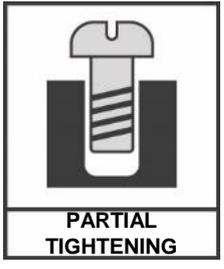
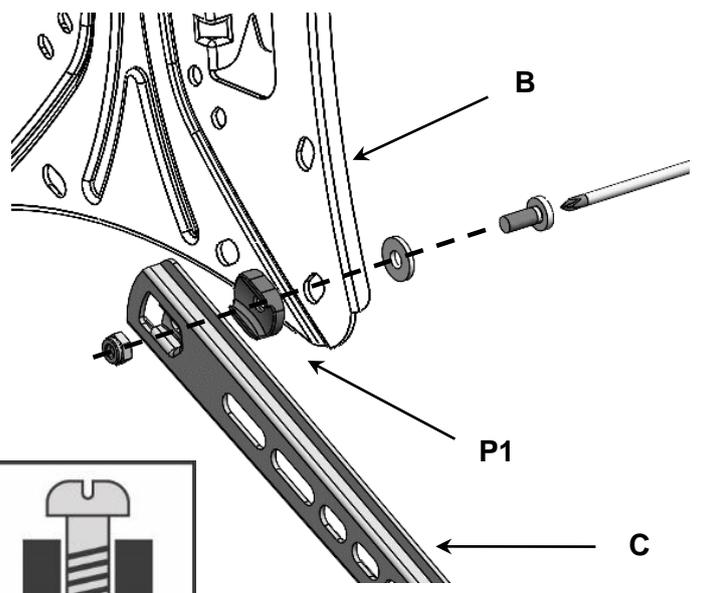


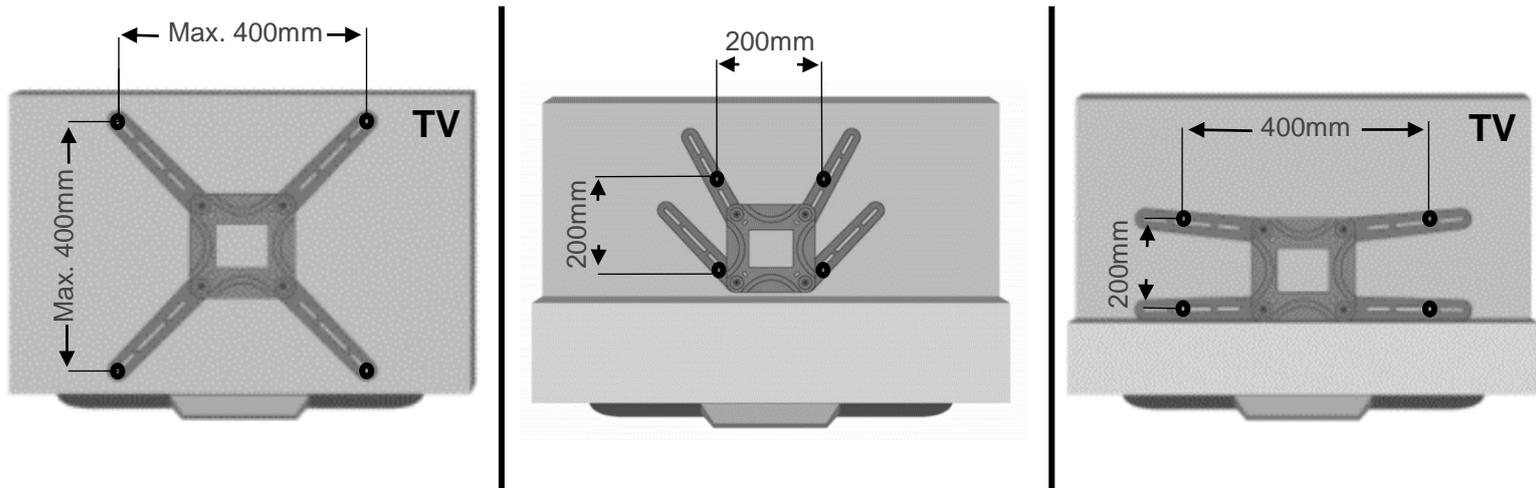


For more positioning options turn to page 11

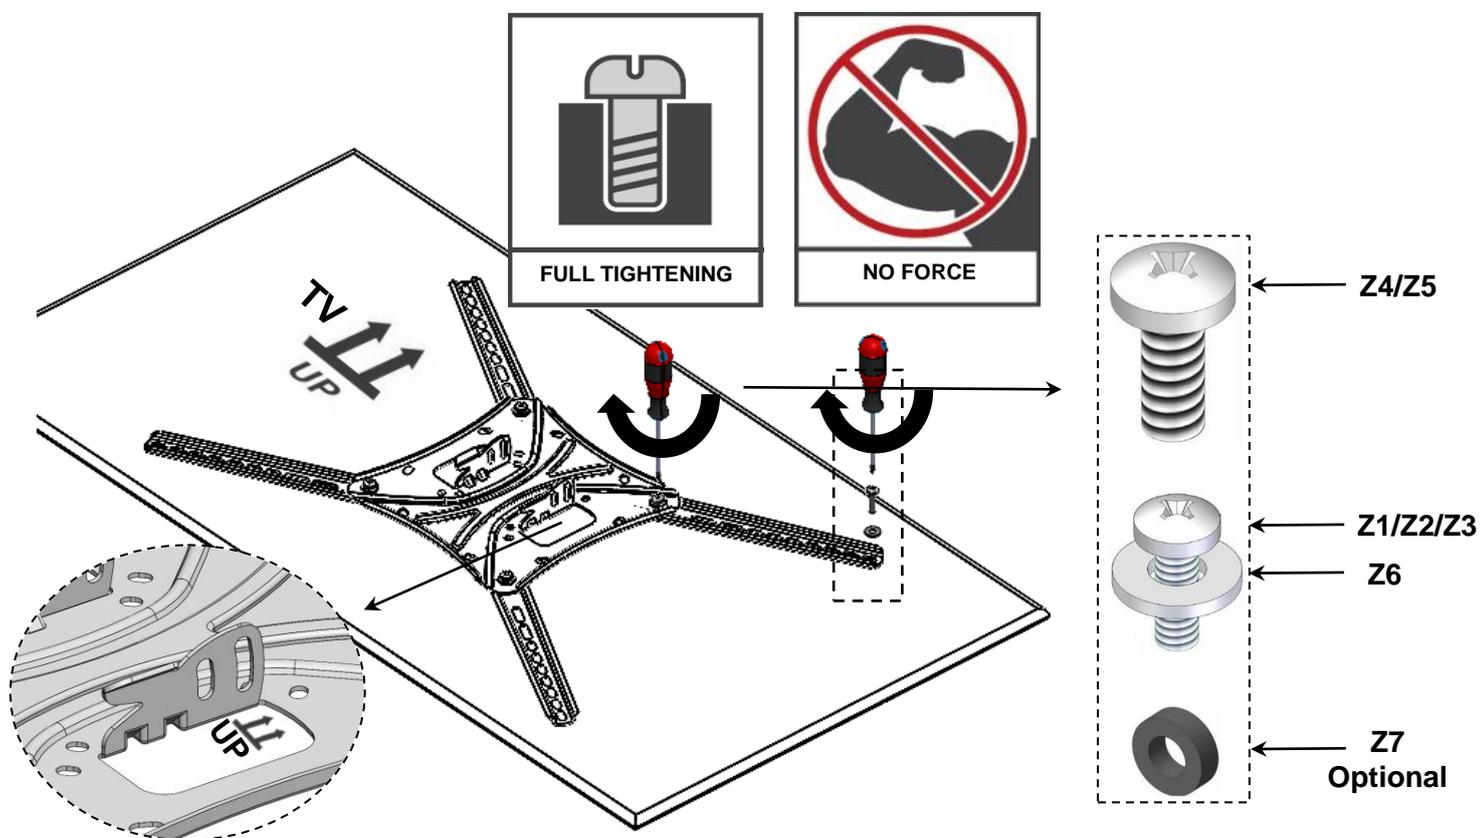

2

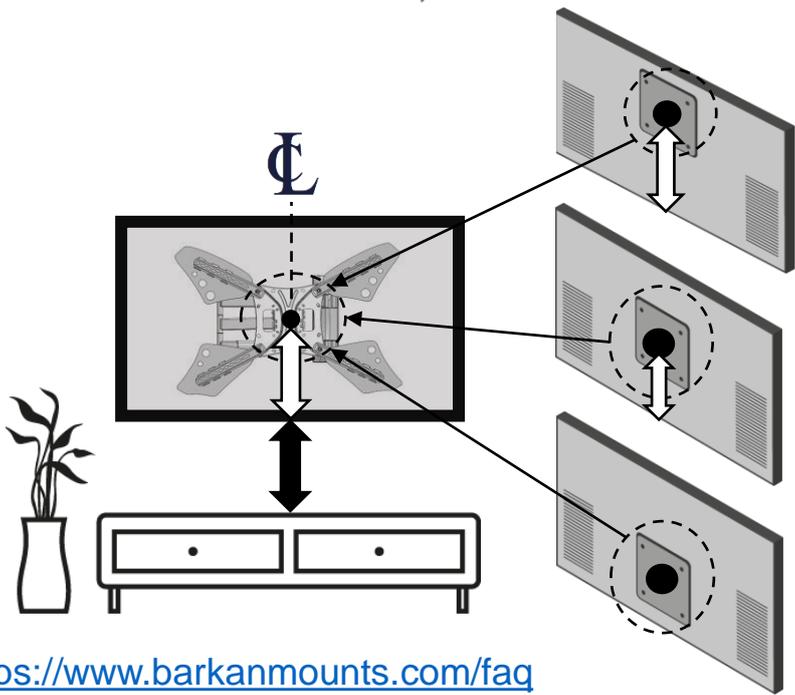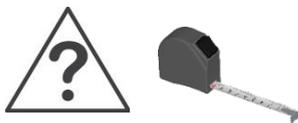



<https://www.barkanmounts.com/faq>

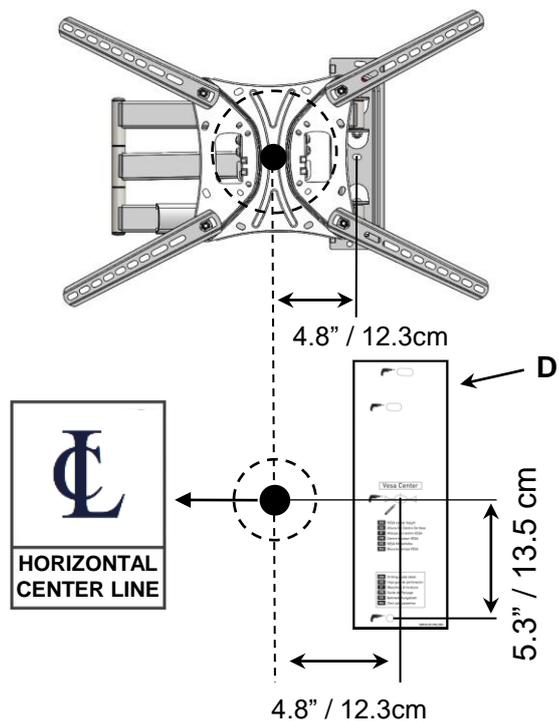





3



4

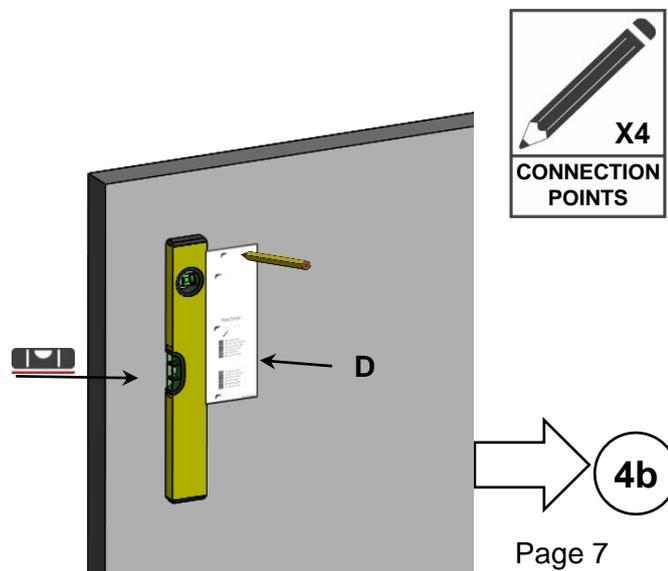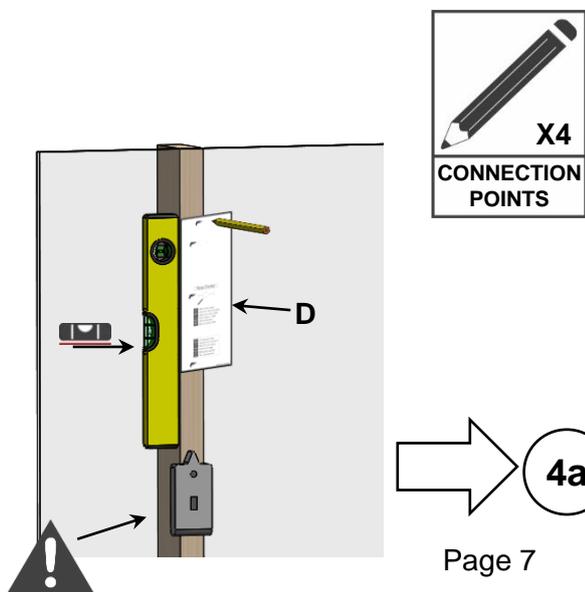

4a

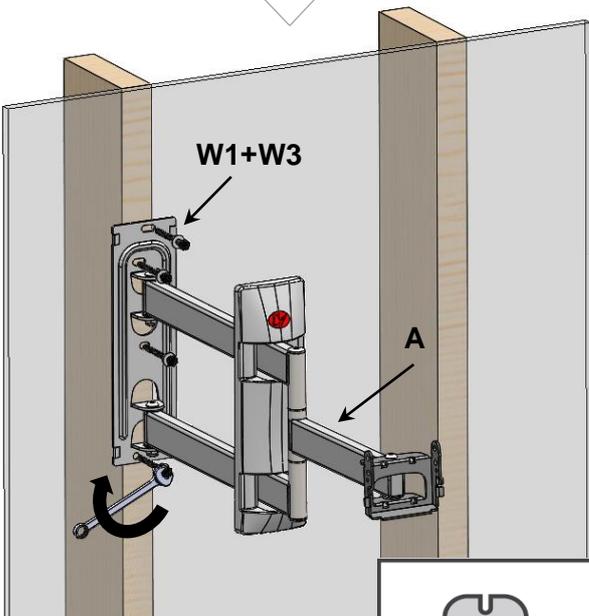
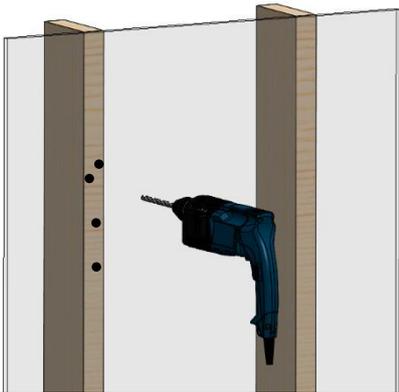
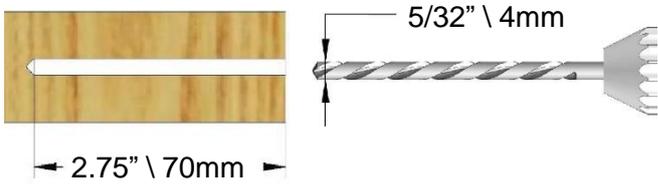
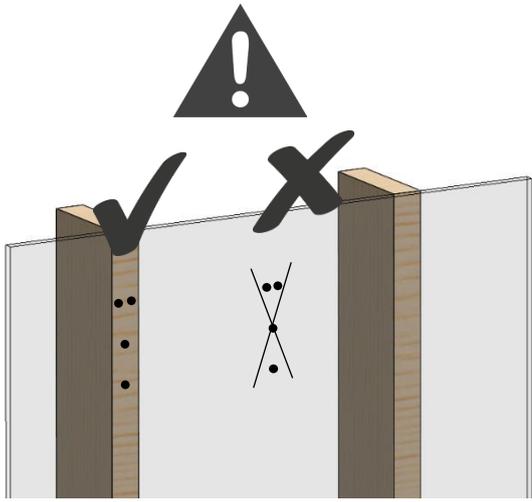


7/16" \ 11mm









FULL TIGHTENING

4b

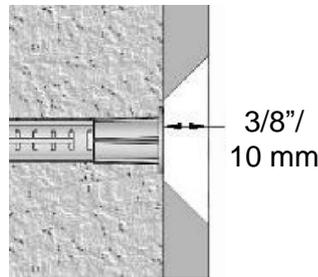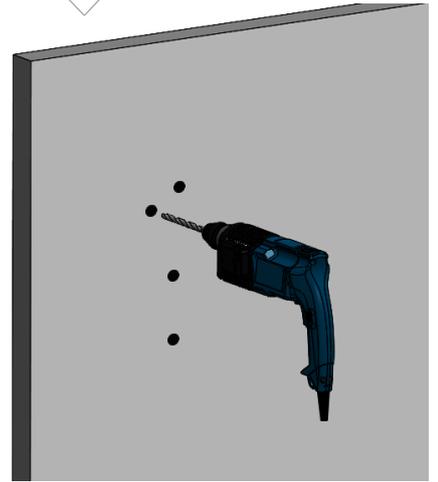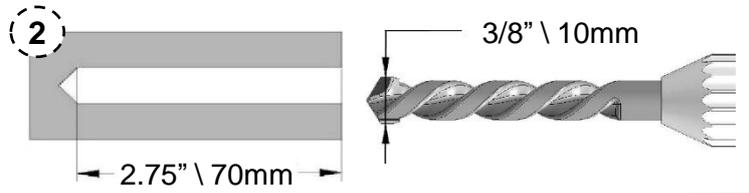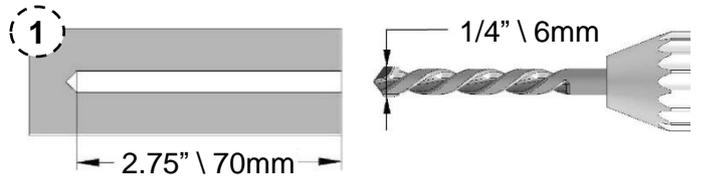

The anchor must be sunk at least 3/8"/10 mm into the plaster coating.

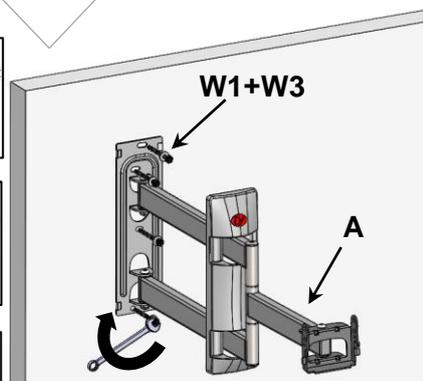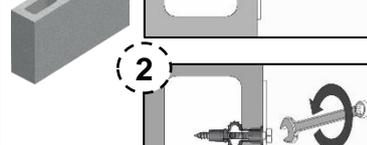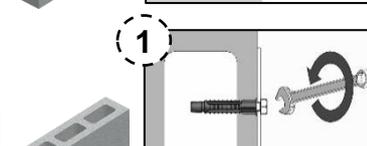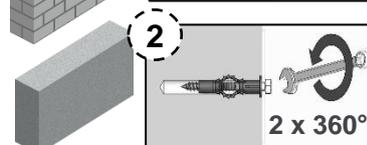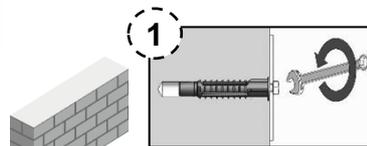
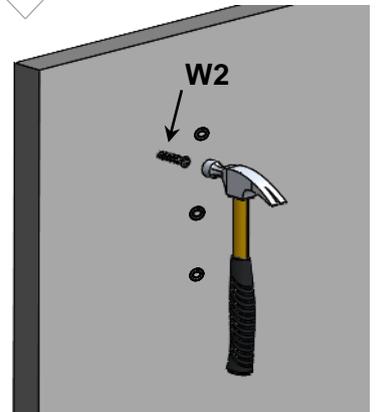


7/16" \ 11mm




FULL TIGHTENING


5

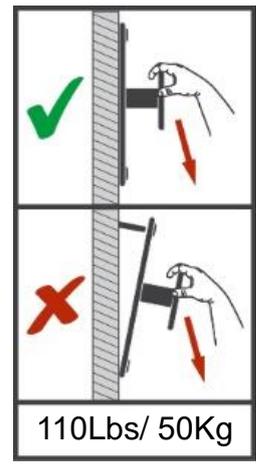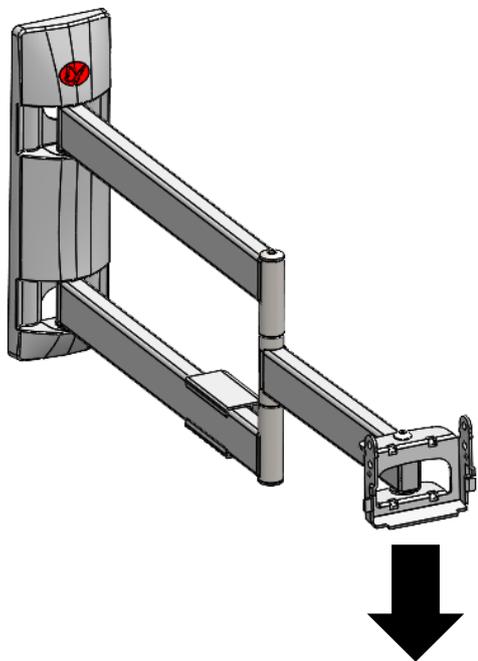


6

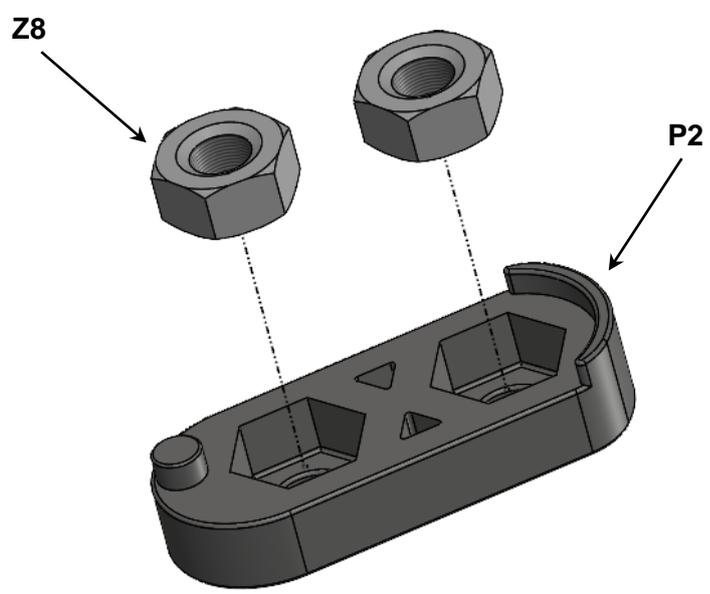


7

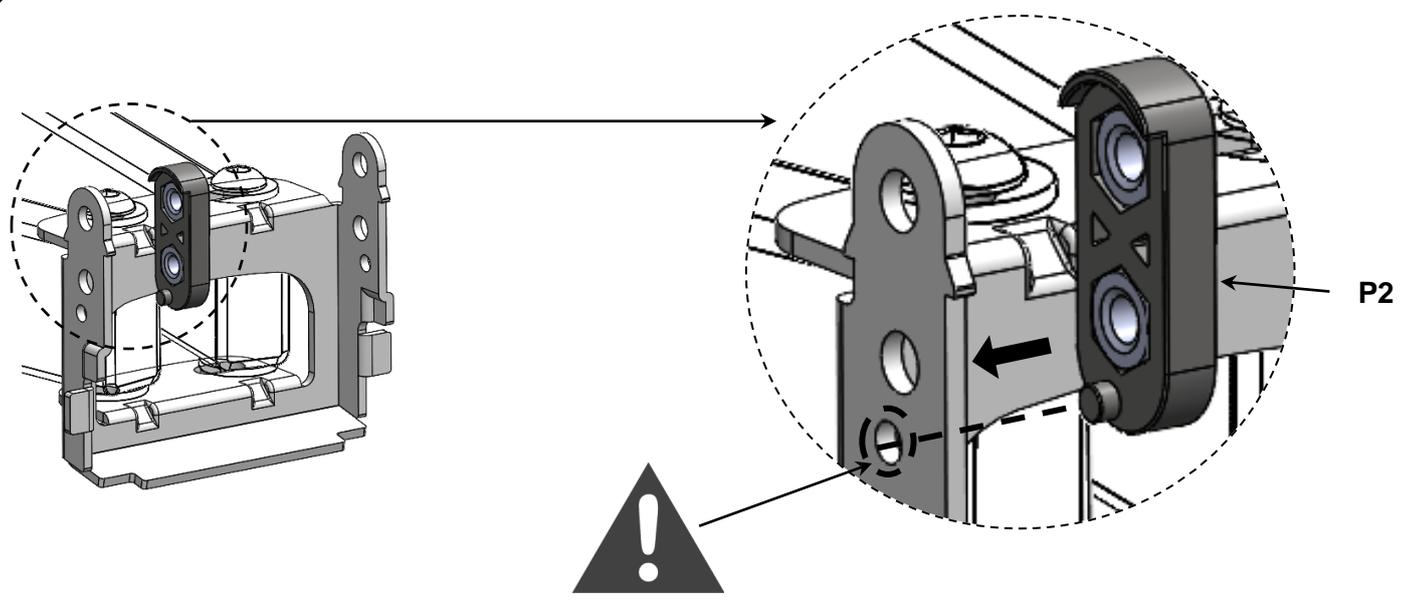


8

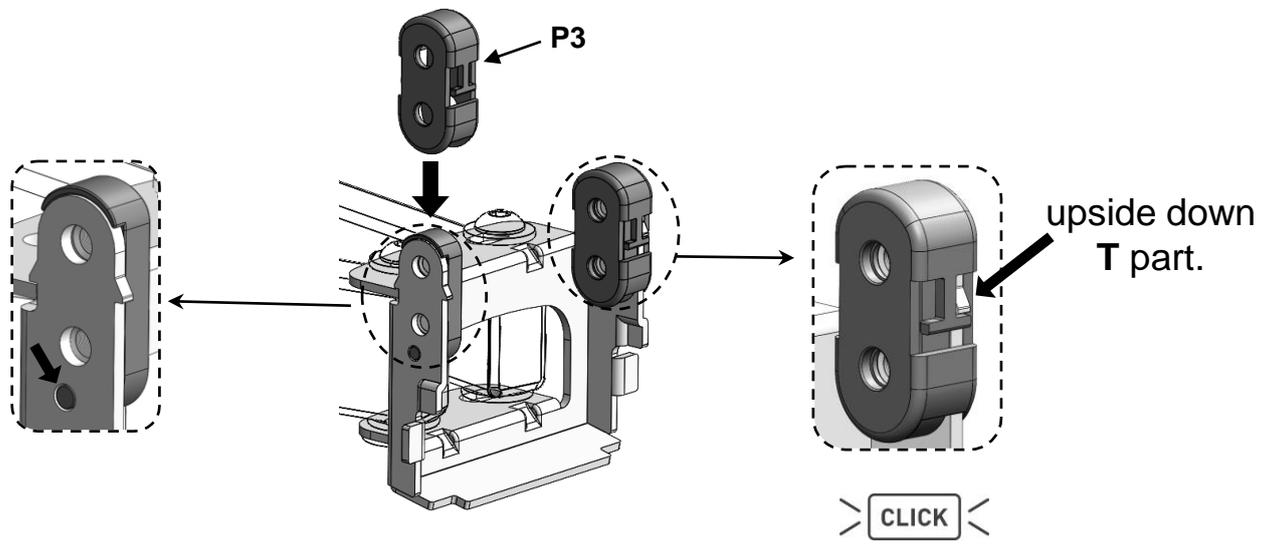


9

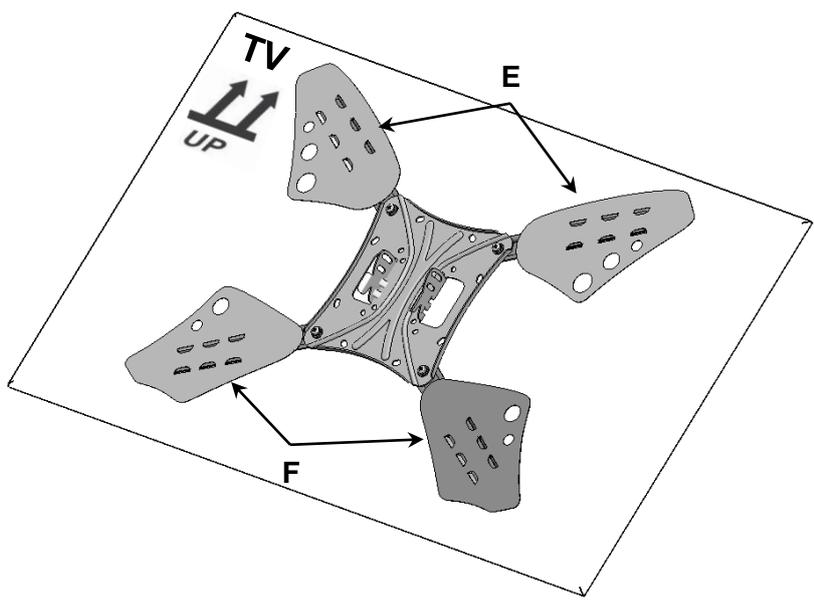



10

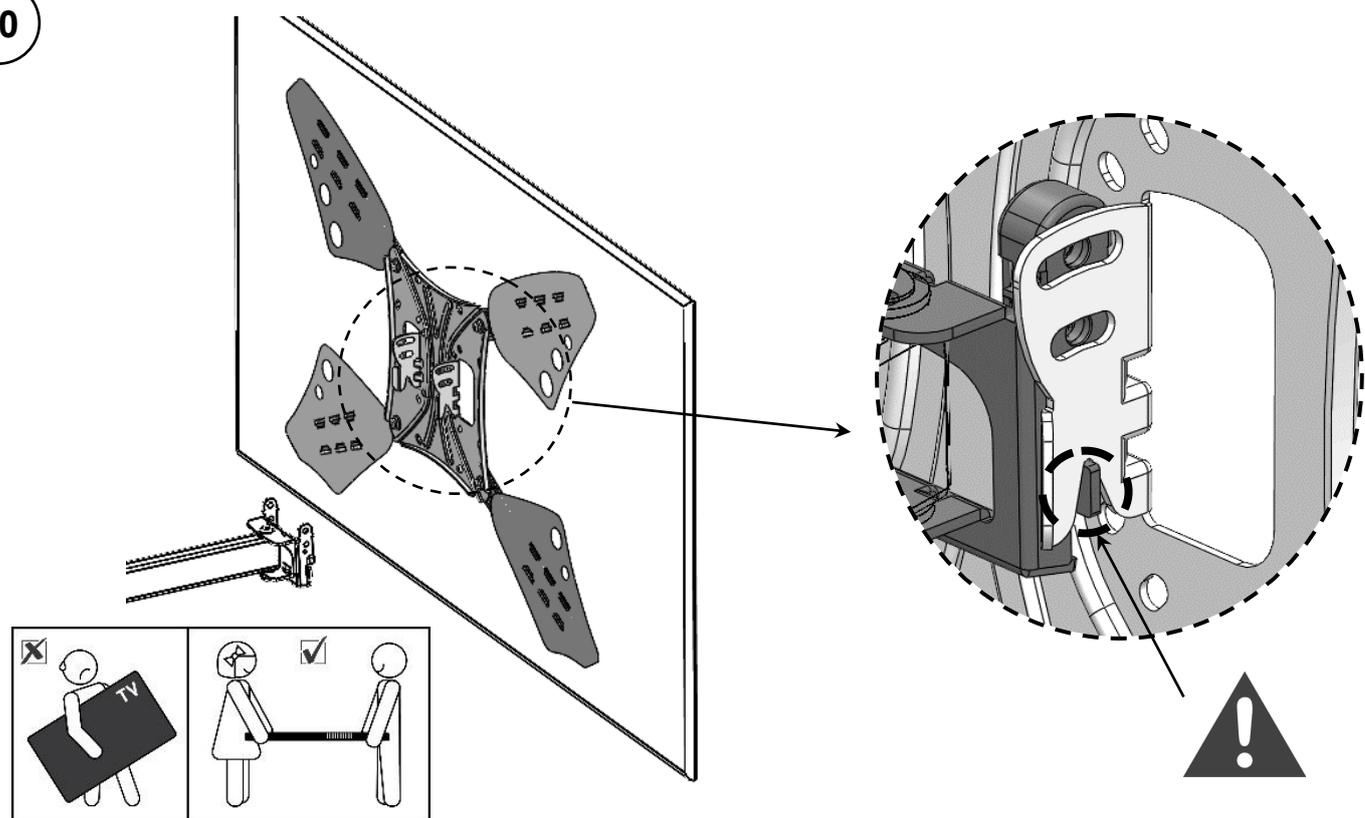

11

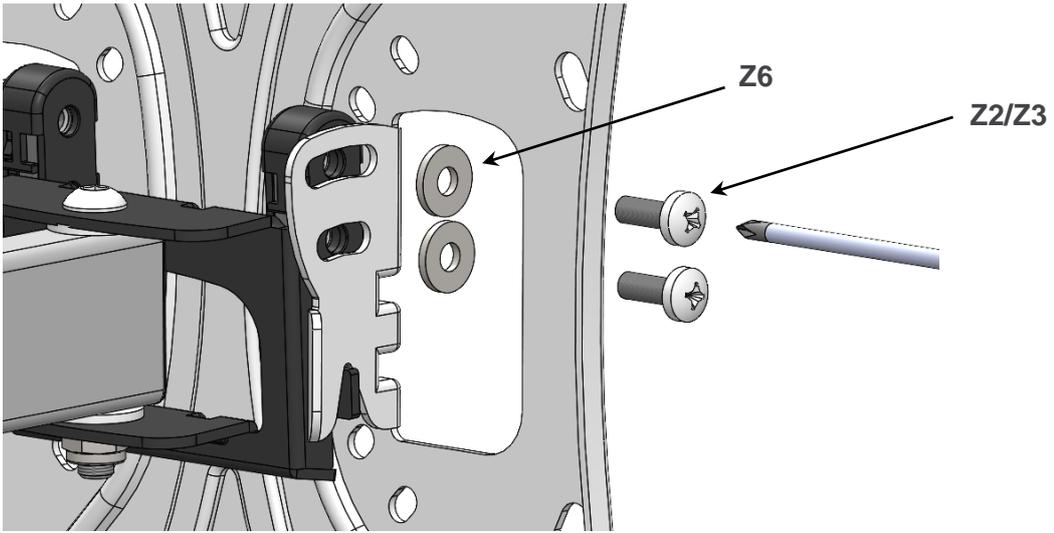

12

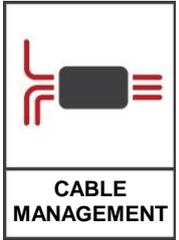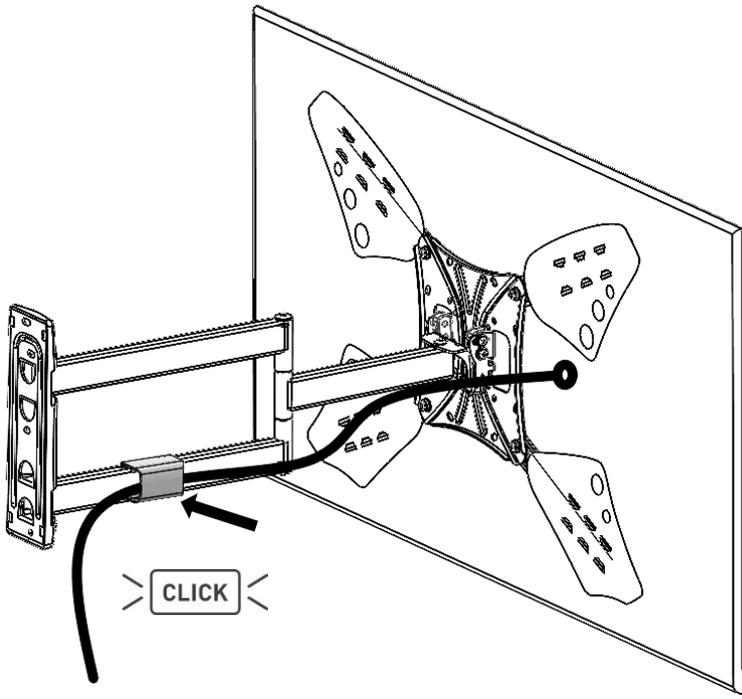


13




# BACKSCREEN CONNECTION POSITIONING OPTIONS


**1** 75x75, 100x100,  
100x200, 200x100, 200x200

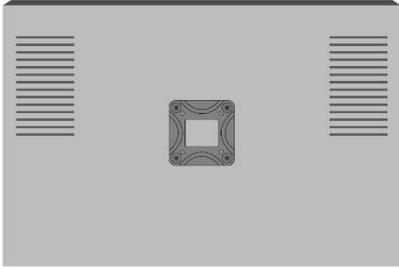


**2** 300x200,  
400x200, 600x200

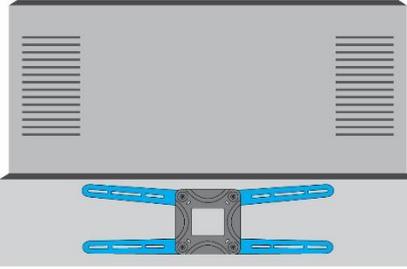


**3** 200x100, 300x300,  
400x300, 600x200, 600x300

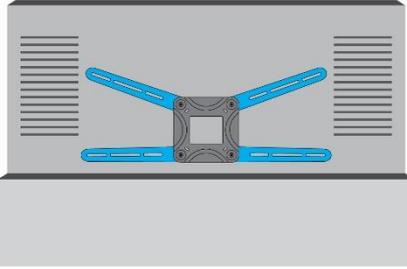


**4** 300x300

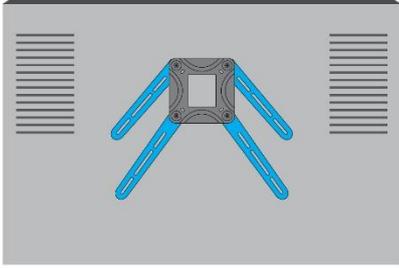


**5** 300x300

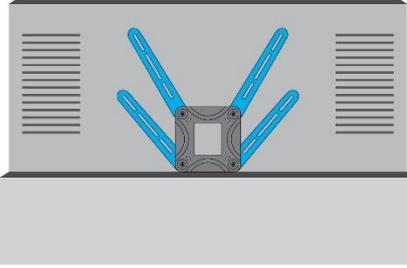


**6** 200x300

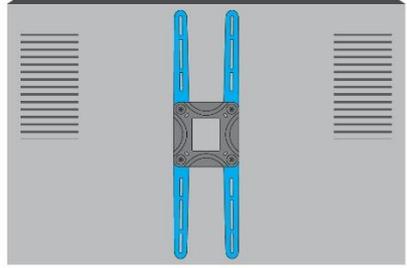

**7** 300x300,  
300x400, 400x400, 600x400

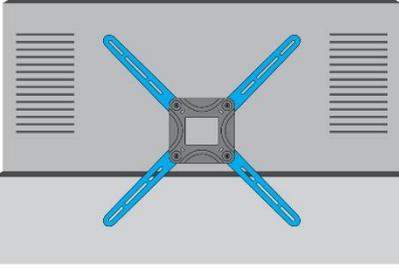

**8** 400x300, 600x400

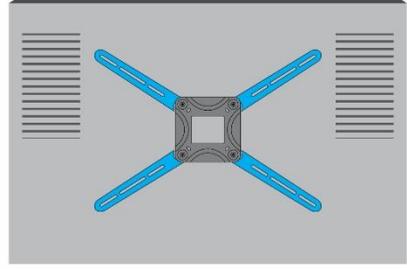

[www.barkanmounts.com/FAQ](http://www.barkanmounts.com/FAQ)